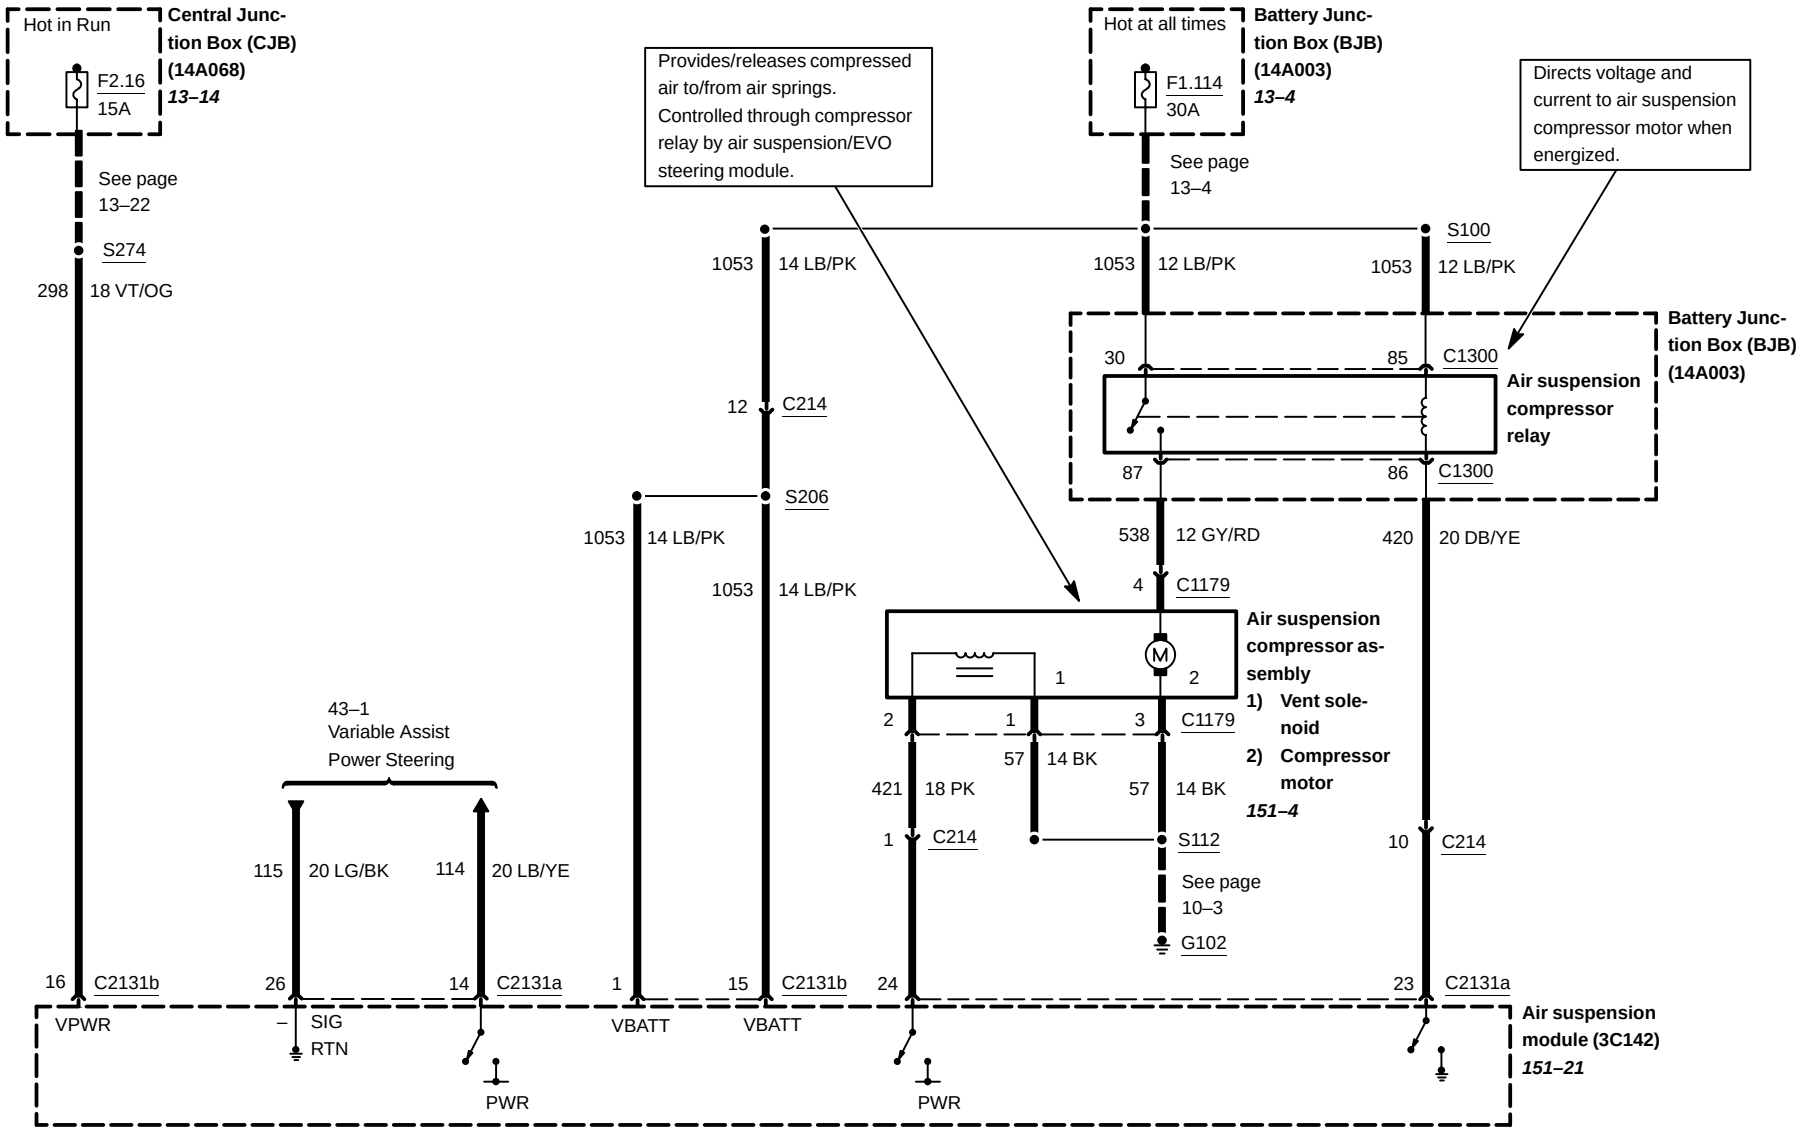
Hot in Run
Central Junction Box (CJB) (14A068) 13–14
F2.16
15A
See page 13–22
S274
298 18 VT/OG
Hot at all times
Battery Junction Box (BJB) (14A003) 13–4
F1.114
30A
See page 13–4
Provides/releases compressed air to/from air springs. Controlled through compressor relay by air suspension/EVO steering module.
Directs voltage and current to air suspension compressor motor when energized.
S100
1053 14 LB/PK
1053 12 LB/PK
1053 12 LB/PK
Battery Junction Box (BJB) (14A003)
30
85
C1300
Air suspension compressor relay
87
86
C1300
12
C214
S206
1053 14 LB/PK
538 12 GY/RD
420 20 DB/YE
1053 14 LB/PK
4
C1179
Air suspension compressor assembly
1) Vent solenoid
2) Compressor motor
151–4
M
1
2
2
1
3
C1179
57 14 BK
421 18 PK
57 14 BK
1
C214
S112
10
C214
See page 10–3
G102
43–1
Variable Assist Power Steering
115 20 LG/BK
114 20 LB/YE
16
C2131b
26
14
C2131a
1
15
C2131b
24
23
C2131a
VPWR
SIG RTN
PWR
VBATT
VBATT
PWR
Air suspension module (3C142) 151–21