C420c

14A005

Rear Electronic Module (REM)

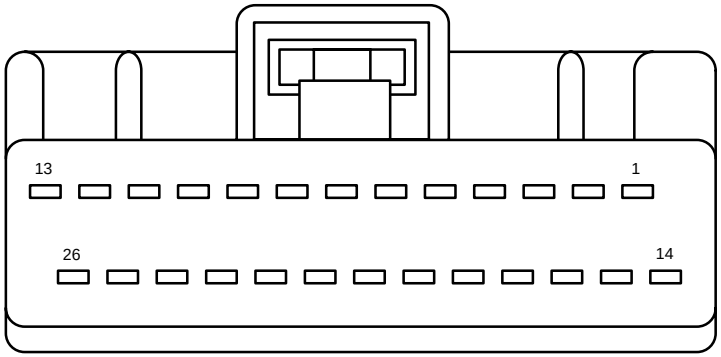

F26018

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	33-AA15 (YE/GN)	Door lock actuator, left rear (218A43) +/ -
5	33-AA2 (YE/RD)	Door lock motor, passenger side +/ -
6	32-AA1 (WH)	Door lock motor, passenger side +/ -
7	32-AA16 (WH/BK)	Door lock actuator, left rear (218A43) +/ -
8	–	not used
9	–	not used
10	29S-AA83 (OG)	Luggage compartment lid release solenoid (5443252), switched power
11	31-DK30D (BK/OG)	Ground
12	31-DK30E (BK/OG)	Ground
13	29S-DK31 (OG/BK)	fused feed, Switched System Power (SSP) 4
14	–	not used

Pin	Circuit	Circuit function
15	–	not used
16	31S-GL12 (BK/OG)	Door ajar switch, left rear, switch sense
17	–	not used
18	–	not used
19	8-RE32 (WH/VT)	Powertrain Control Module (PCM) (12A650), signal
20	8-AA20 (WH/BU)	Door lock switch, passenger side (14028), - Lock, switch sense
21	8-AA21 (WH/GN)	Door lock switch, passenger side (14028), - Unlock, switch sense
22	10-AJ14 (GY/VT)	Window adjust switch, left rear (14A412), Down, switch sense
23	9-GA1 (BN/RD)	Signal return
24	8-AJ14 (WH/BU)	Window adjust switch, left rear (14A412), Up, switch sense
25	31-DK30F (BK/OG)	Ground
26	31-DK30G (BK/OG)	Ground