C107

12A654

Cylinder–head temperature sensor (6G004)

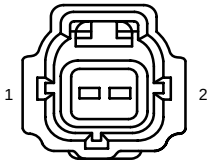

F02111

Pin	Circuit	Circuit function
1	1102 (YE/LG)	Cylinder–head temperature sensor (6G004) to Powertrain Control Module (PCM) (12A650)
2	359 (GY/RD)	signal return

C108 (BK)

12B637

Knock sensor (12A699)

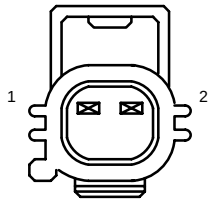

F02453

Pin	Circuit	Circuit function
1	311 (DG/VT)	Knock sensor (12A699) –
2	310 (YE/RD)	Knock sensor (12A699) +

C111

* Marauder

12B637

Coil On Plug (COP) 1 (12A366)

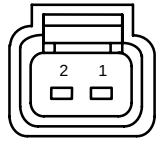

F02331

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
	*1024 (LG/WH)	Coil On Plug (COP) 1 (12A366), control
2	1024 (LG/WH)	Coil On Plug (COP) 1 (12A366), control
	*16 (RD/LG)	Voltage supplied in Start and Run (overload protected)