C772 (BK)

9H589

Y109
Injector 2

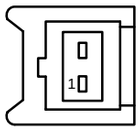

F02012

Pin	Circuit	Circuit Function
1	15-RL11 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-RL11 (BK/YE)	Ground, switched

C773 (BK)

9H589

Y110
Injector 3

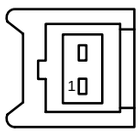

F02012

Pin	Circuit	Circuit Function
1	15-RL12 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-RL12 (BK/BU)	Ground, switched

C774 (BK)

9H589

Y111
Injector 4

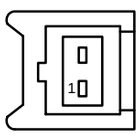

F02012

Pin	Circuit	Circuit Function
1	15-RL13 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-RL13 (BK/OG)	Ground, switched

C775 (BK)

9H589

Y108
Injector 1



F02058

Pin	Circuit	Circuit Function
1	15-RL10 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-RL10 (BK/WH)	Ground, switched

C776 (BK)

9H589

Y109
Injector 2



F02058

Pin	Circuit	Circuit Function
1	31S-RL11 (BK/YE)	Ground, switched
2	15-RL11 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)

C777 (BK)

9H589

Y110
Injector 3



F02058

Pin	Circuit	Circuit Function
1	31S-RL12 (BK/BU)	Ground, switched
2	15-RL12 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C778 (BK)

9H589

Y111
Injector 4



F02058

Pin	Circuit	Circuit Function
1	31S-RL13 (BK/OG)	Ground, switched
2	15-RL13 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)

C779 (GY)

9H589

B10
Engine Coolant Temperature (ECT) sensor

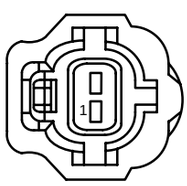

F02027

Pin	Circuit	Circuit Function
1	8-RJ5 (WH)	Sensor signal
2	9-RJ5 (BN)	Sensor signal return (reference/ground)