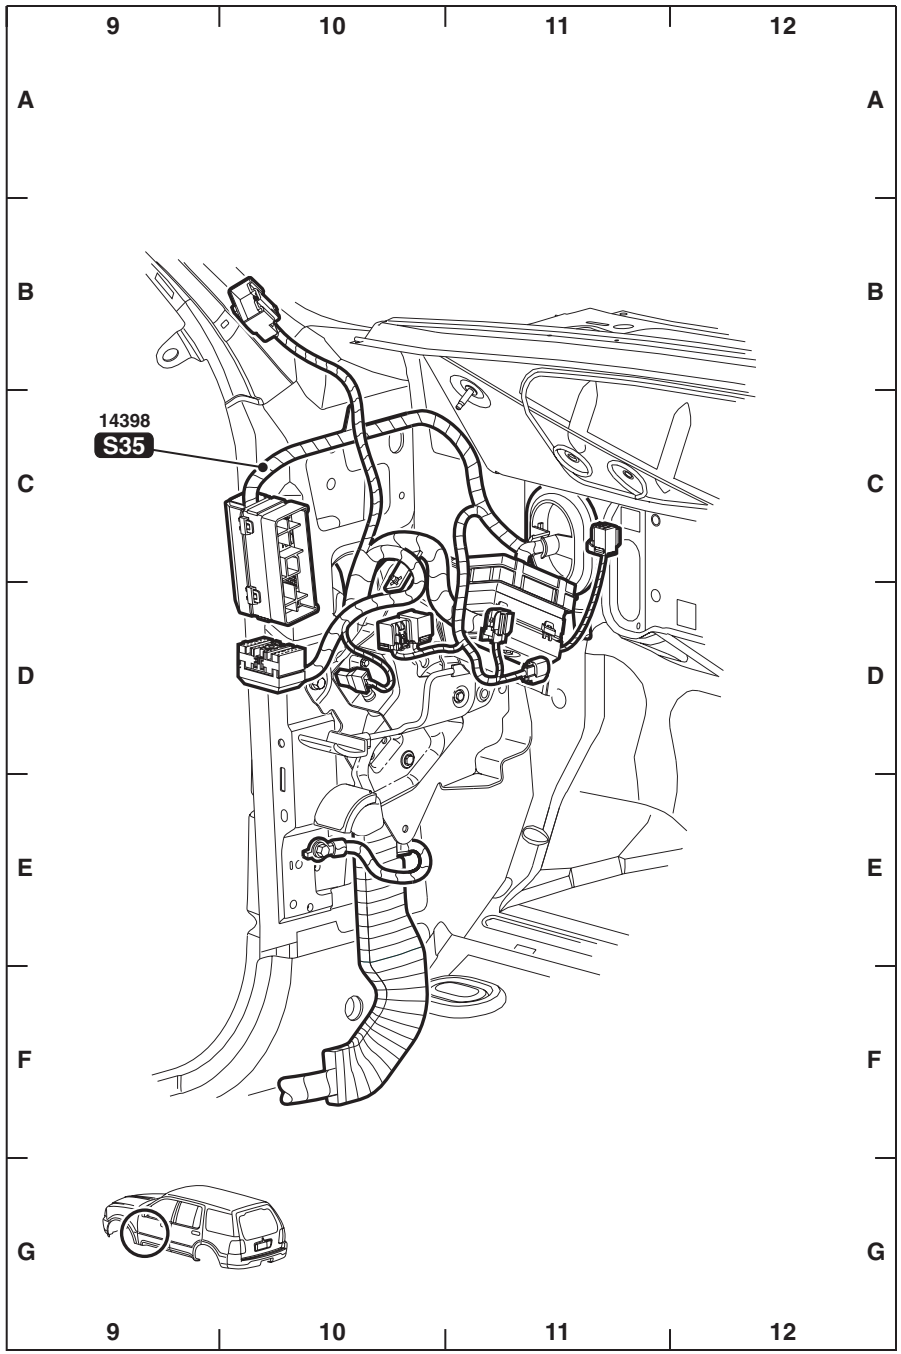


14398 - S1

Splice Location: **C8** - Below Battery Junction Box (BJB)

196 to Battery Junction Box (BJB)
196 to Battery Junction Box (BJB)
196 to Splice 14401-S3

14398 - S2

Splice Location: **A2** - Powertrain Control Module (PCM) T/O (C1756)

570 to Powertrain Control Module (PCM)
570 to Powertrain Control Module (PCM)
570 to Powertrain Control Module (PCM)
570 to Powertrain Control Module (PCM)
→ 570 to G108 RR fender

14398 - S3

Splice Location: **A6** - Near Brake Fluid Level Switch T/O (C124)

10 to Battery Junction Box (BJB)
10 to Battery Junction Box (BJB)
10 to Battery Junction Box (BJB)
10 to Brake stop lamp switch
10 to Redundant pedal switch

14398 - S4

Splice Location: **A1** - Near Auxiliary Relay Box (AJB) (F4), RH Side

1139 to 7C078 Transmission hardware unit
1139 to Thermo Expansion Valve (TXV)
→ 1139 to Battery Junction Box (BJB)

14398 - S5

Splice Location: **D8** - Below Battery Junction Box (BJB)

16 to Splice 14401-S8 →
16 to Battery Junction Box (BJB)
16 to Battery Junction Box (BJB)

14398 - S6

Splice Location: **E1** - Near Anti-theft hood switch T/O (C127)

391 to Splice 12B637-S2
391 to Splice 7C078-S1
→ 391 to Battery Junction Box (BJB)
391 to Vapor management valve

14398 - S7

Splice Location: **D8** - Near Ground T/O (G107)

511 to ABS control module →
511 to Battery Junction Box (BJB)
511 to Brake stop lamp switch
511 to Splice 14401-S11

Note: T/O = Take Out