C613

14630

Y214
Tweeter, right front

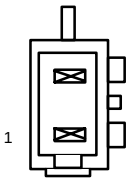

F02335

Pin	Circuit	Circuit Function
1	805 (WH/LG)	Speaker, right front +
	805 (WH/LG)	Speaker, right front +
2	811 (DG/OG)	Speaker, right front -
	811 (DG/OG)	Speaker, right front -

C703

14633

M116
Power window motor, left rear

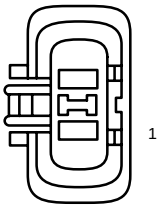

F02225

Pin	Circuit	Circuit Function
1	334 (RD/YE)	Window motor, feed, Down
2	1159 (WH/LB)	Window motor, feed, Up

C701

14633

N111
Window adjust switch, left rear

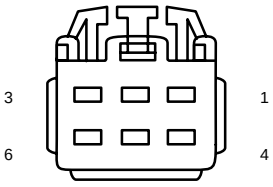

F06237

Pin	Circuit	Circuit Function
1	317 (GY/OG)	Window switch, feed, left rear, Down
2	334 (RD/YE)	Window motor, feed, Down
3	170 (RD/LB)	Window lockout, switched power, output
4	–	not used
5	1159 (WH/LB)	Window motor, feed, Up
6	316 (YE/LB)	Window switch, feed, left rear, Up

C704

14633

M64
Door lock actuator, left rear

F02227

Pin	Circuit	Circuit Function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C710

14633

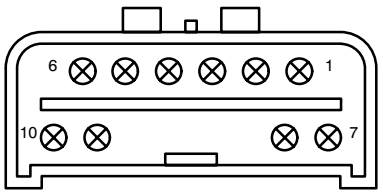

F10025

1) 118 (PK/OG)
2) 117 (PK/BK)
3) 57 (BK)
4) 759 (LG/YE)
5)
6) 317 (GY/OG)
7) 170 (RD/LB)
8)
9)
10) 316 (YE/LB)

14A005

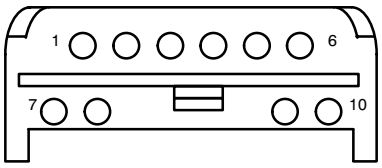

F10009

1) 118 (PK/OG)
2) 117 (PK/BK)
3) 57 (BK)
4) 759 (LG/YE)
5)
6) 317 (GY/OG)
7) 170 (RD/LB)
8)
9)
10) 316 (YE/LB)