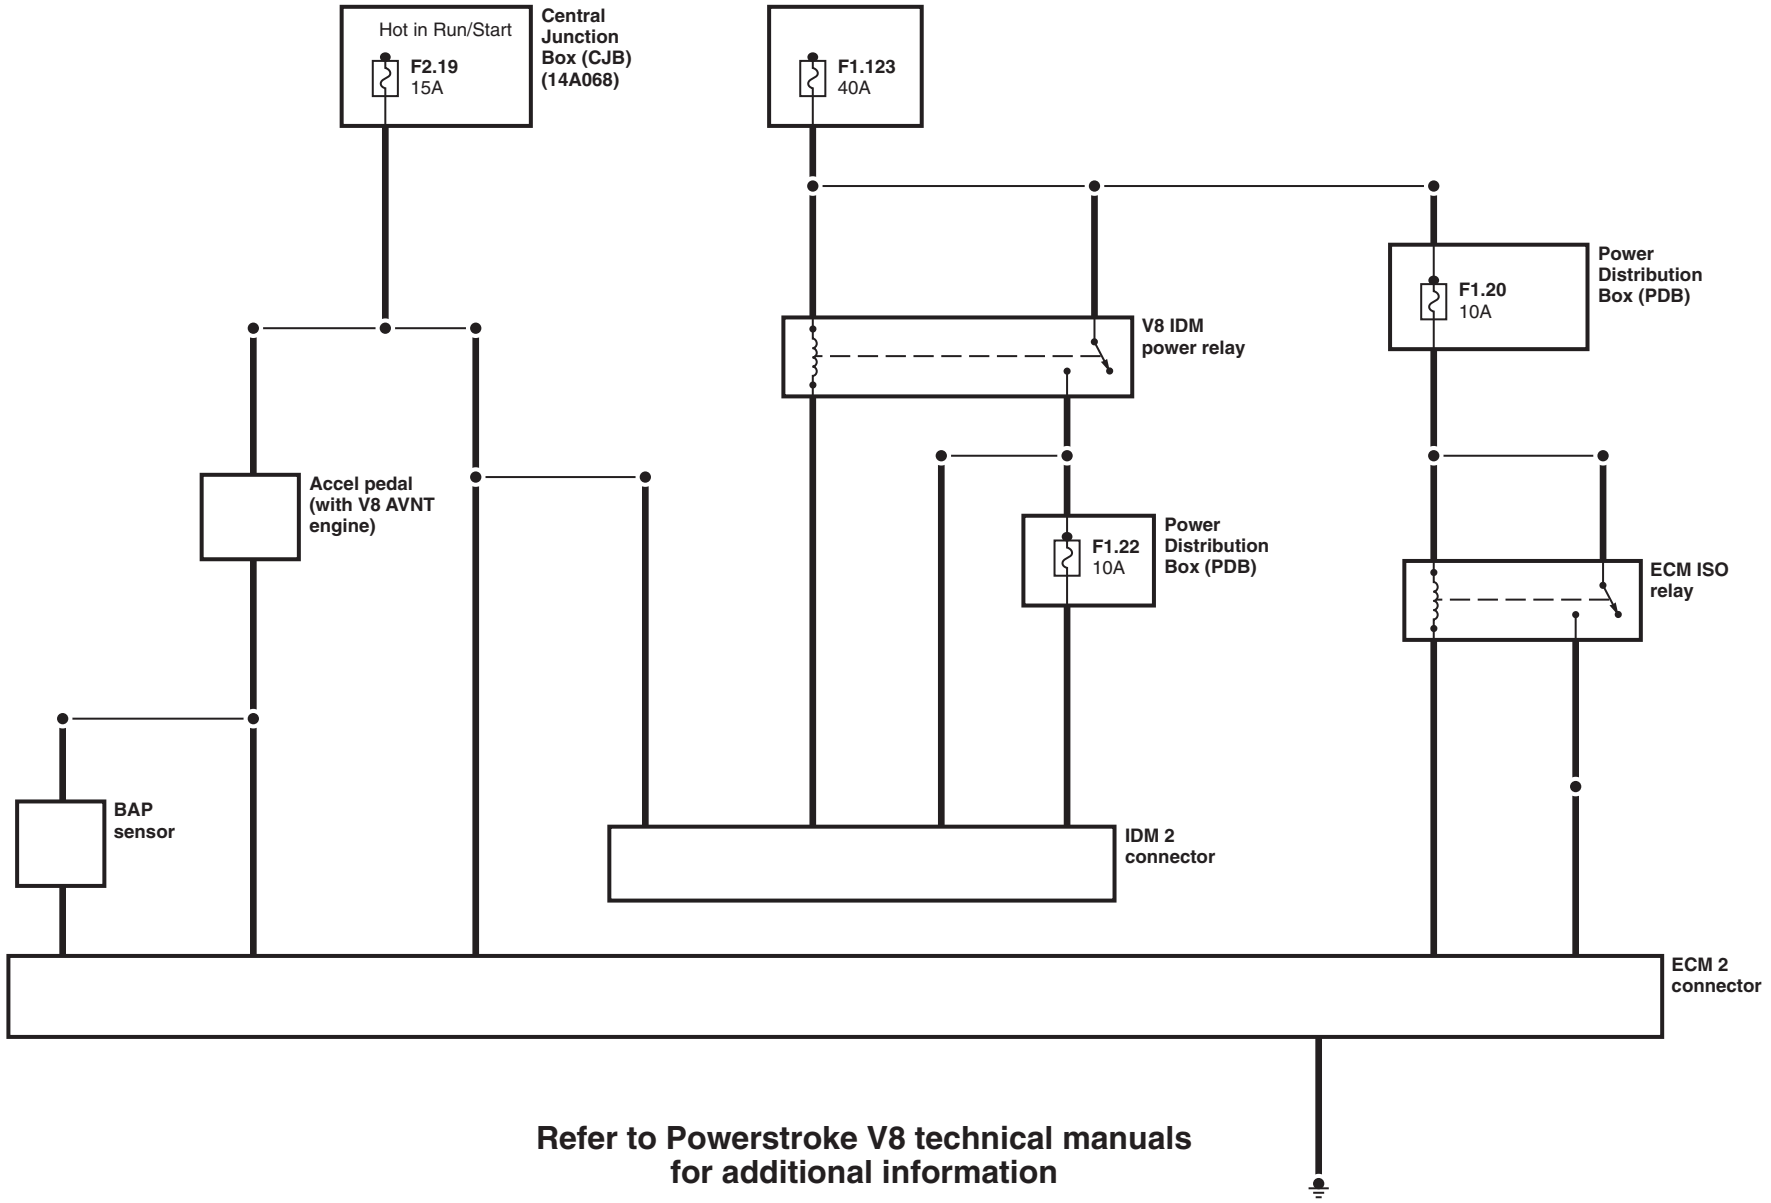
Hot in Run/Start
F2.19
15A
Central Junction Box (CJB) (14A068)
F1.123
40A
F1.20
10A
Power Distribution Box (PDB)
V8 IDM power relay
Accel pedal (with V8 AVNT engine)
F1.22
10A
Power Distribution Box (PDB)
ECM ISO relay
BAP sensor
IDM 2 connector
ECM 2 connector
Refer to Powerstroke V8 technical manuals for additional information