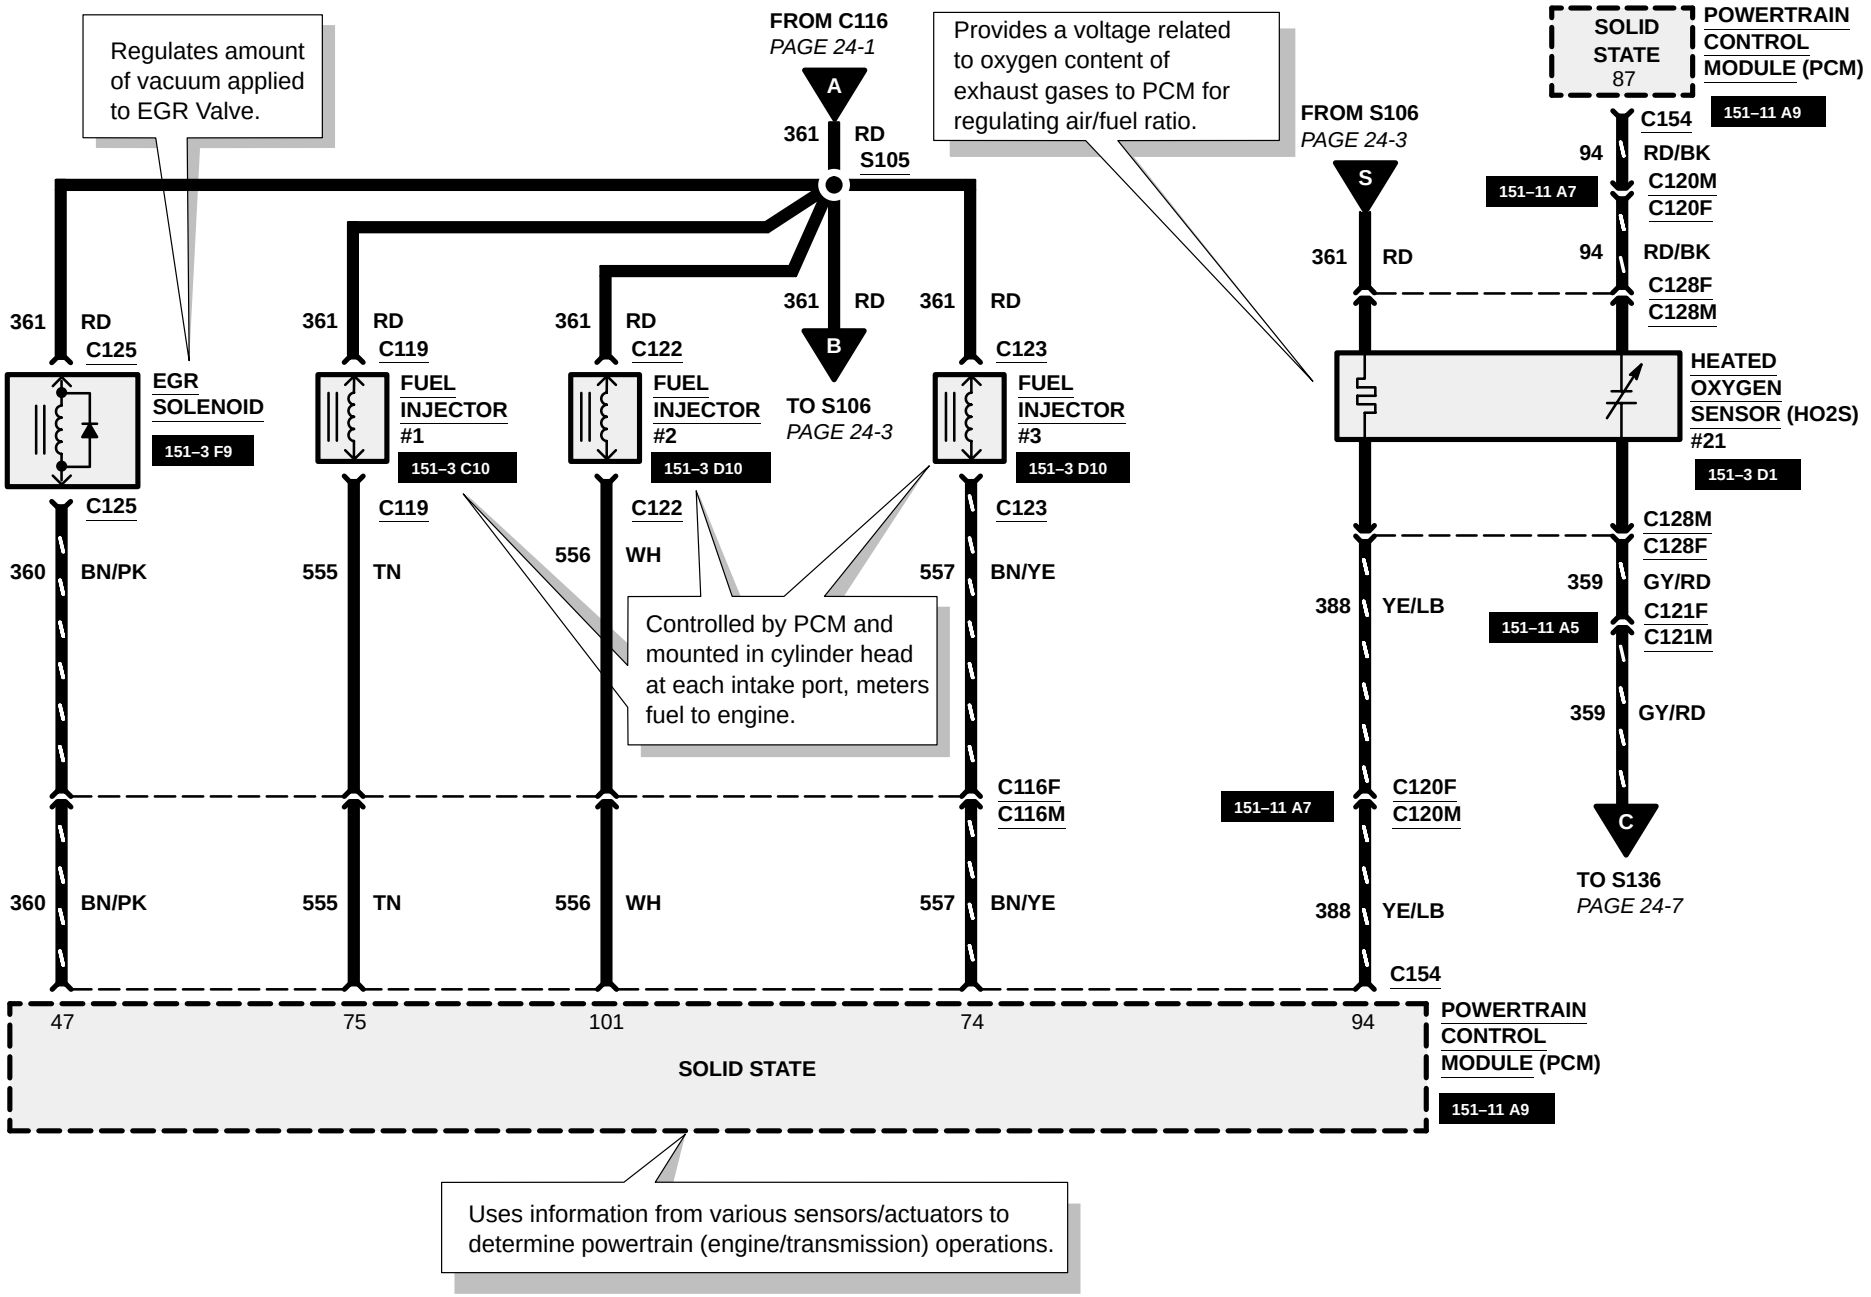
Regulates amount of vacuum applied to EGR Valve.
FROM C116
PAGE 24-1
A
361 RD S105
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
FROM S106
PAGE 24-3
S
SOLID STATE 87
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
C154
94 RD/BK
151–11 A7
C120M
C120F
94 RD/BK
C128F
C128M
361 RD
361 RD C125
EGR SOLENOID
151–3 F9
361 RD C119
FUEL INJECTOR #1
151–3 C10
361 RD C122
FUEL INJECTOR #2
151–3 D10
361 RD
B
TO S106
PAGE 24-3
361 RD C123
FUEL INJECTOR #3
151–3 D10
HEATED OXYGEN SENSOR (HO2S) #21
151–3 D1
C125
C119
C122
C123
C128M
C128F
360 BN/PK
555 TN
556 WH
557 BN/YE
359 GY/RD
388 YE/LB
151–11 A5
C121F
C121M
Controlled by PCM and mounted in cylinder head at each intake port, meters fuel to engine.
359 GY/RD
C116F
C116M
151–11 A7
C120F
C120M
C
TO S136
PAGE 24-7
360 BN/PK
555 TN
556 WH
557 BN/YE
388 YE/LB
C154
47
75
101
74
94
POWERTRAIN CONTROL MODULE (PCM)
SOLID STATE
151–11 A9
Uses information from various sensors/actuators to determine powertrain (engine/transmission) operations.