160-1 VEHICLE REPAIR LOCATION CODES

VEHICLE REPAIR LOCATION CODES

TO PINPOINT THE ACTUAL VEHICLE LOCATION OF A REPAIR. THE VEHICLE REPAIR LOCATION CODE IS REQUIRED.

FOR EXAMPLE, AN "X" HAS BEEN PLACED IN THE QUADRANT OF THE VEHICLE DIAGRAMS INDICATING THE LOCATION OF THE REPAIR. SEE DIAGRAMS.

LOCATION CODE, FOR THE EXAMPLE: B5/FU – (UNDER THE FLOOR BETWEEN DRIVER'S FEET.)

FRONT/REAR DIRECTION

FRONT

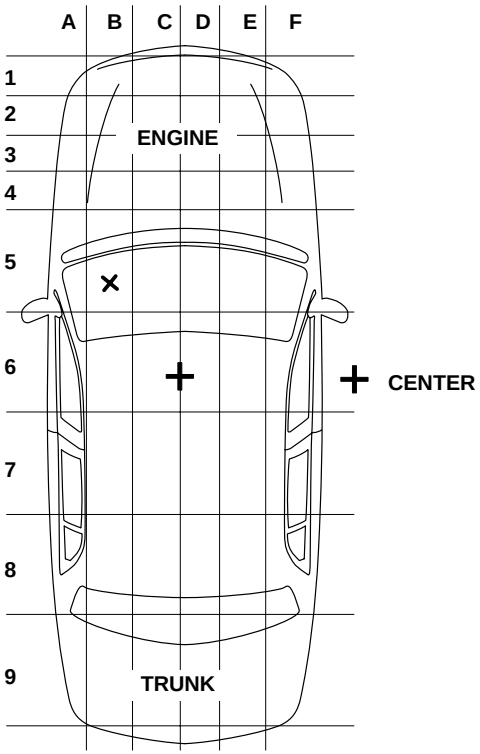

REAR

OVER/UNDER DIRECTION

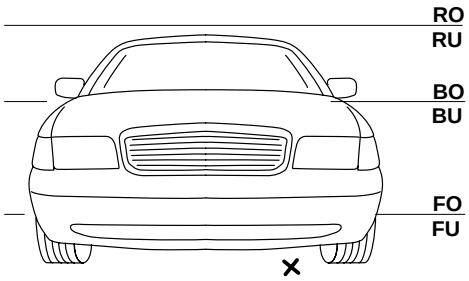

R = ROOF LINE
- RO = ROOF OVER
- RU = ROOF UNDER

B = BELT LINE
- BO = BELT OVER
- BU = BELT UNDER

F = FLOOR PAN
- FO = FLOOR OVER
- FU = FLOOR UNDER

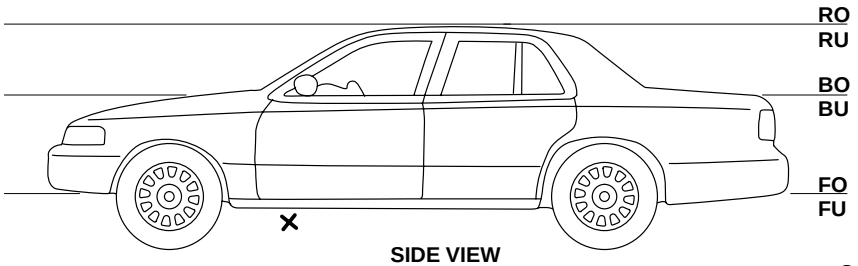

SIDE VIEW

CONTINENTAL

FCS-12172-01