C8600

Main Chassis Harness

Radiator ground



0587566C91

Pin	Circuit	Circuit Function
A	57 (BK)	Ground circuit

C8800

Main Chassis Harness

Ground adapter #1

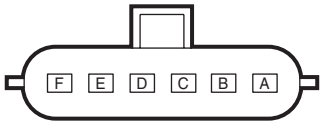

3551896C1

Pin	Circuit	Circuit Function
A	57 (BK)	Ground circuit
B	57 (BK)	Ground circuit
C	57 (BK)	Ground circuit
D	57 (BK)	Ground circuit
E	530 (LG/YE)	ABS,ABS controller to chassis ground
E	57 (BK)	Without ABS, Ground circuit
F	—	Not used

C8801

Main Chassis Harness

Ground adapter #2

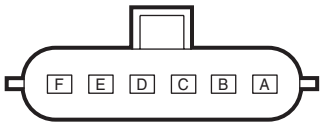

3551896C1

Pin	Circuit	Circuit Function
A	57 (BK)	Ground circuit
B	57 (BK)	Ground circuit
C	57 (BK)	Ground circuit
D	57 (BK)	Ground circuit
E	57 (BK)	Ground circuit
F	57 (BK)	Ground circuit

C8802

Main Chassis Harness

Splice pack

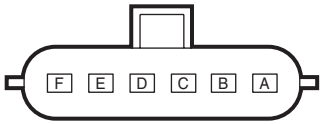

3551896C1

Pin	Circuit	Circuit Function
A	533 (TN/RD)	Power relay to fuse link
B	533 (TN/RD)	Power relay to fuse link
C	533 (TN/RD)	Power relay to fuse link
D	533 (TN/RD)	Power relay to fuse link
E	533 (TN/RD)	Power relay to fuse link
F	533 (TN/RD)	Power relay to fuse link