C224a (BK)

14A103

N420
Multifunction switch

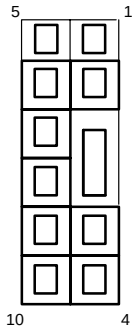

F10069

Pin	Circuit	Circuit function
1	WA08 (PK)	Wiper/washer, input
2	WA07 (WH)	Wiper/washer, return
3	WA09 (GN)	Wiper/washer, input
4	LD04 (PK/BU)	Tail lamp relay, switched output
5	–	not used
6	–	not used
7	LAE3 (BK)	Ground
8	LA21 (BN)	Headlamp flasher, switch sense
9	LAE4 (BK)	Ground
10	LA23 (LG/RD)	High beam lamp, switch sense

C224b (BK)

14N103

N420
Multifunction switch

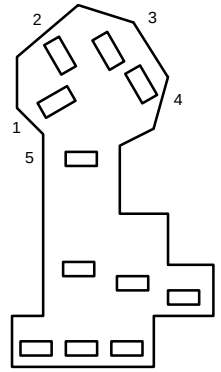

F11011

Pin	Circuit	Circuit function
1	LB11 (RD/WH)	Turn lamps, Right, switched power
2	LD05 (GN/RD)	Turn lamp, right front, switch sense
3	LD06 (GN/WH)	Turn lamp, left front, switch sense
4	LB12 (RD/GN)	Turn lamps, Left, switched power
5	LB05 (VT)	Turn Signal and Hazard Lamps, switched power

C227 (BK)

14N104

E28
Glove box lamp
(14413)



F02339

Pin	Circuit	Circuit function
1	LJE1 (OG)	Ground
2	LJ01 (BN)	Voltage supplied at all times (overload protected)