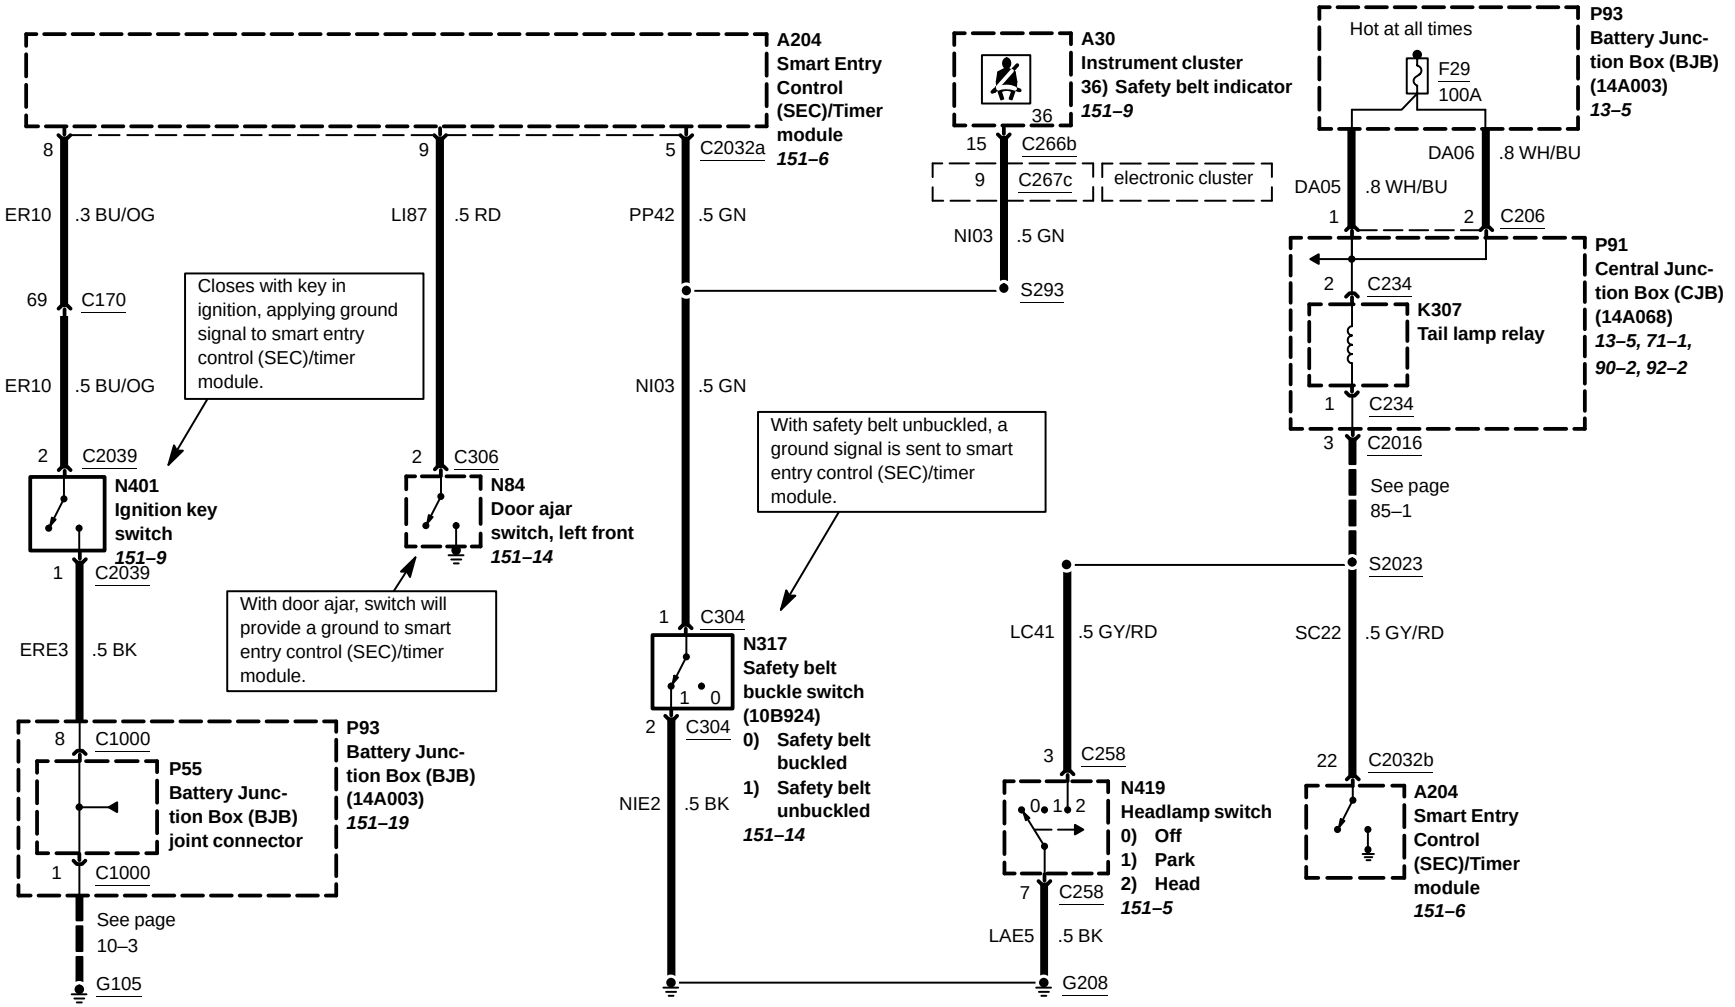
A204
Smart Entry Control (SEC)/Timer module
151–6
8
9
5
C2032a
ER10 .3 BU/OG
LI87 .5 RD
PP42 .5 GN
69
C170
ER10 .5 BU/OG
Closes with key in ignition, applying ground signal to smart entry control (SEC)/timer module.
2
C2039
N401
Ignition key switch
151–9
1
C2039
ERE3 .5 BK
2
C306
N84
Door ajar switch, left front
151–14
With door ajar, switch will provide a ground to smart entry control (SEC)/timer module.
8
C1000
P55
Battery Junction Box (BJB) joint connector
1
C1000
P93
Battery Junction Box (BJB)
(14A003)
151–19
See page 10–3
G105
A30
Instrument cluster
36) Safety belt indicator
151–9
36
15
C266b
9
C267c
electronic cluster
NI03 .5 GN
S293
NI03 .5 GN
With safety belt unbuckled, a ground signal is sent to smart entry control (SEC)/timer module.
1
C304
N317
Safety belt buckle switch
(10B924)
0) Safety belt buckled
1) Safety belt unbuckled
151–14
2
C304
NIE2 .5 BK
Hot at all times
F29
100A
P93
Battery Junction Box (BJB)
(14A003)
13–5
DA06 .8 WH/BU
DA05 .8 WH/BU
1
2
C206
P91
Central Junction Box (CJB)
(14A068)
13–5, 71–1, 90–2, 92–2
2
C234
K307
Tail lamp relay
1
C234
3
C2016
See page 85–1
S2023
LC41 .5 GY/RD
SC22 .5 GY/RD
3
C258
N419
Headlamp switch
0) Off
1) Park
2) Head
151–5
7
C258
LAE5 .5 BK
G208
22
C2032b
A204
Smart Entry Control (SEC)/Timer module
151–6