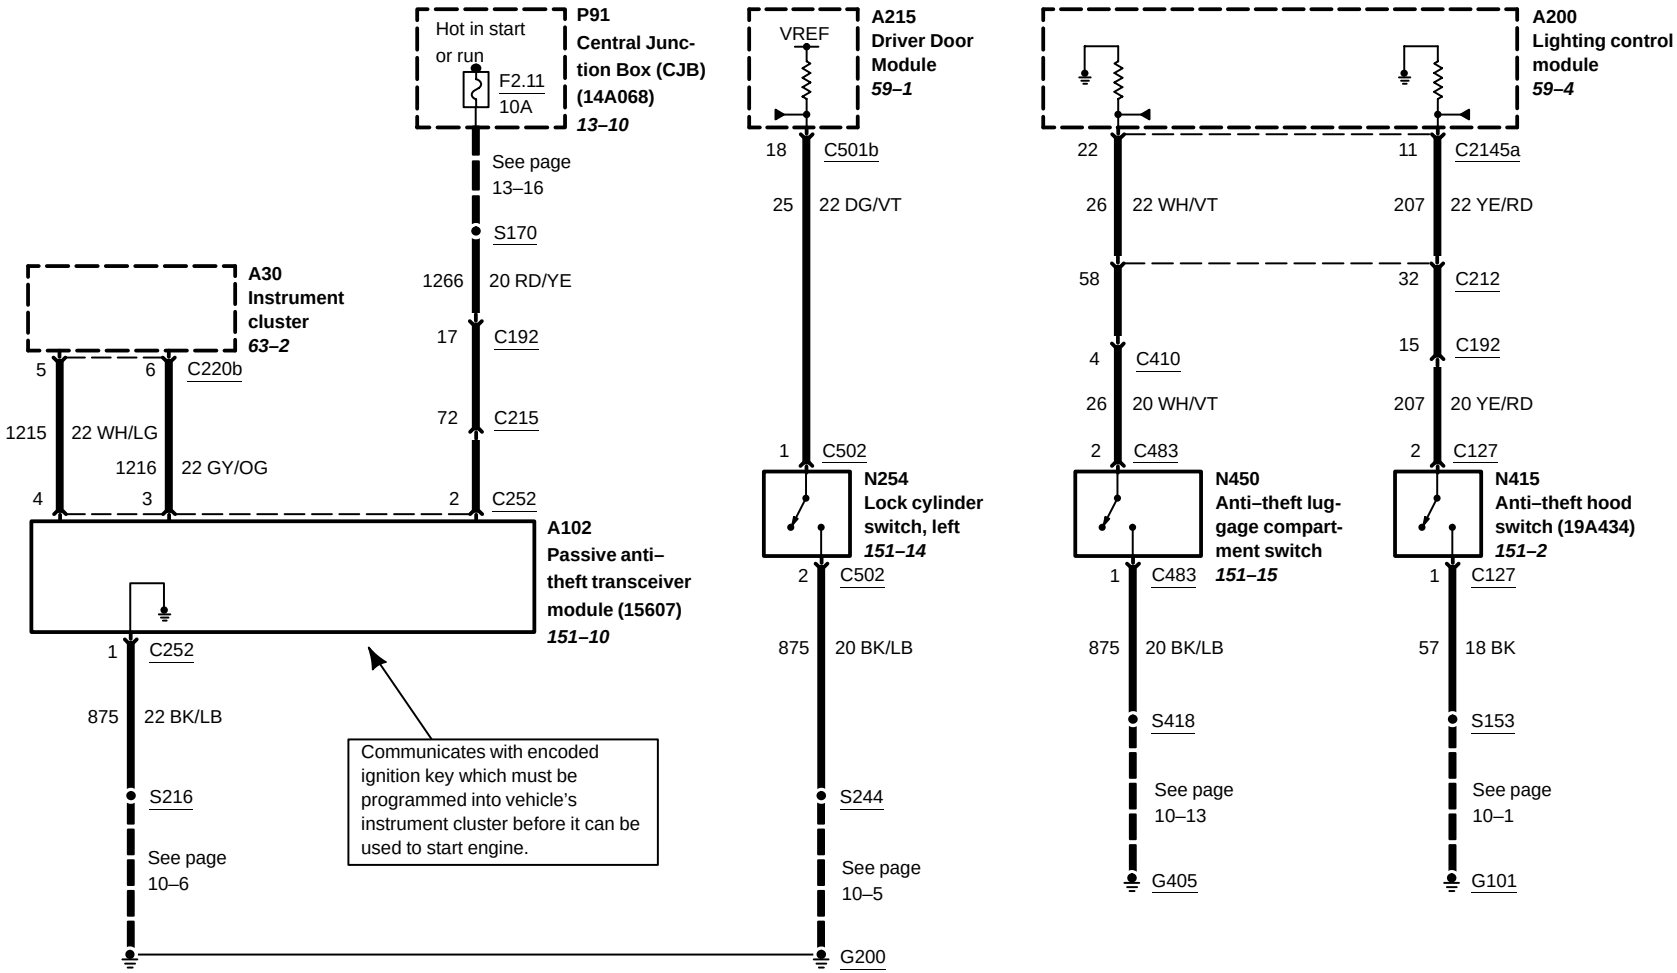
Hot in start or run
F2.11 10A
P91 Central Junction Box (CJB) (14A068) 13–10
See page 13–16
S170
1266 20 RD/YE
17 C192
72 C215
2 C252
A30 Instrument cluster 63–2
5 6 C220b
1215 22 WH/LG
1216 22 GY/OG
4 3
A102 Passive anti–theft transceiver module (15607) 151–10
1 C252
875 22 BK/LB
S216
See page 10–6
Communicates with encoded ignition key which must be programmed into vehicle's instrument cluster before it can be used to start engine.
VREF
A215 Driver Door Module 59–1
18 C501b
25 22 DG/VT
1 C502
N254 Lock cylinder switch, left 151–14
2 C502
875 20 BK/LB
S244
See page 10–5
G200
A200 Lighting control module 59–4
22 26 22 WH/VT
11 207 22 YE/RD
C2145a
58 C212
32
4 C410
26 20 WH/VT
2 C483
N450 Anti–theft luggage compartment switch 151–15
1 C483
875 20 BK/LB
S418
See page 10–13
G405
15 C192
207 20 YE/RD
2 C127
N415 Anti–theft hood switch (19A434) 151–2
1 C127
57 18 BK
S153
See page 10–1
G101