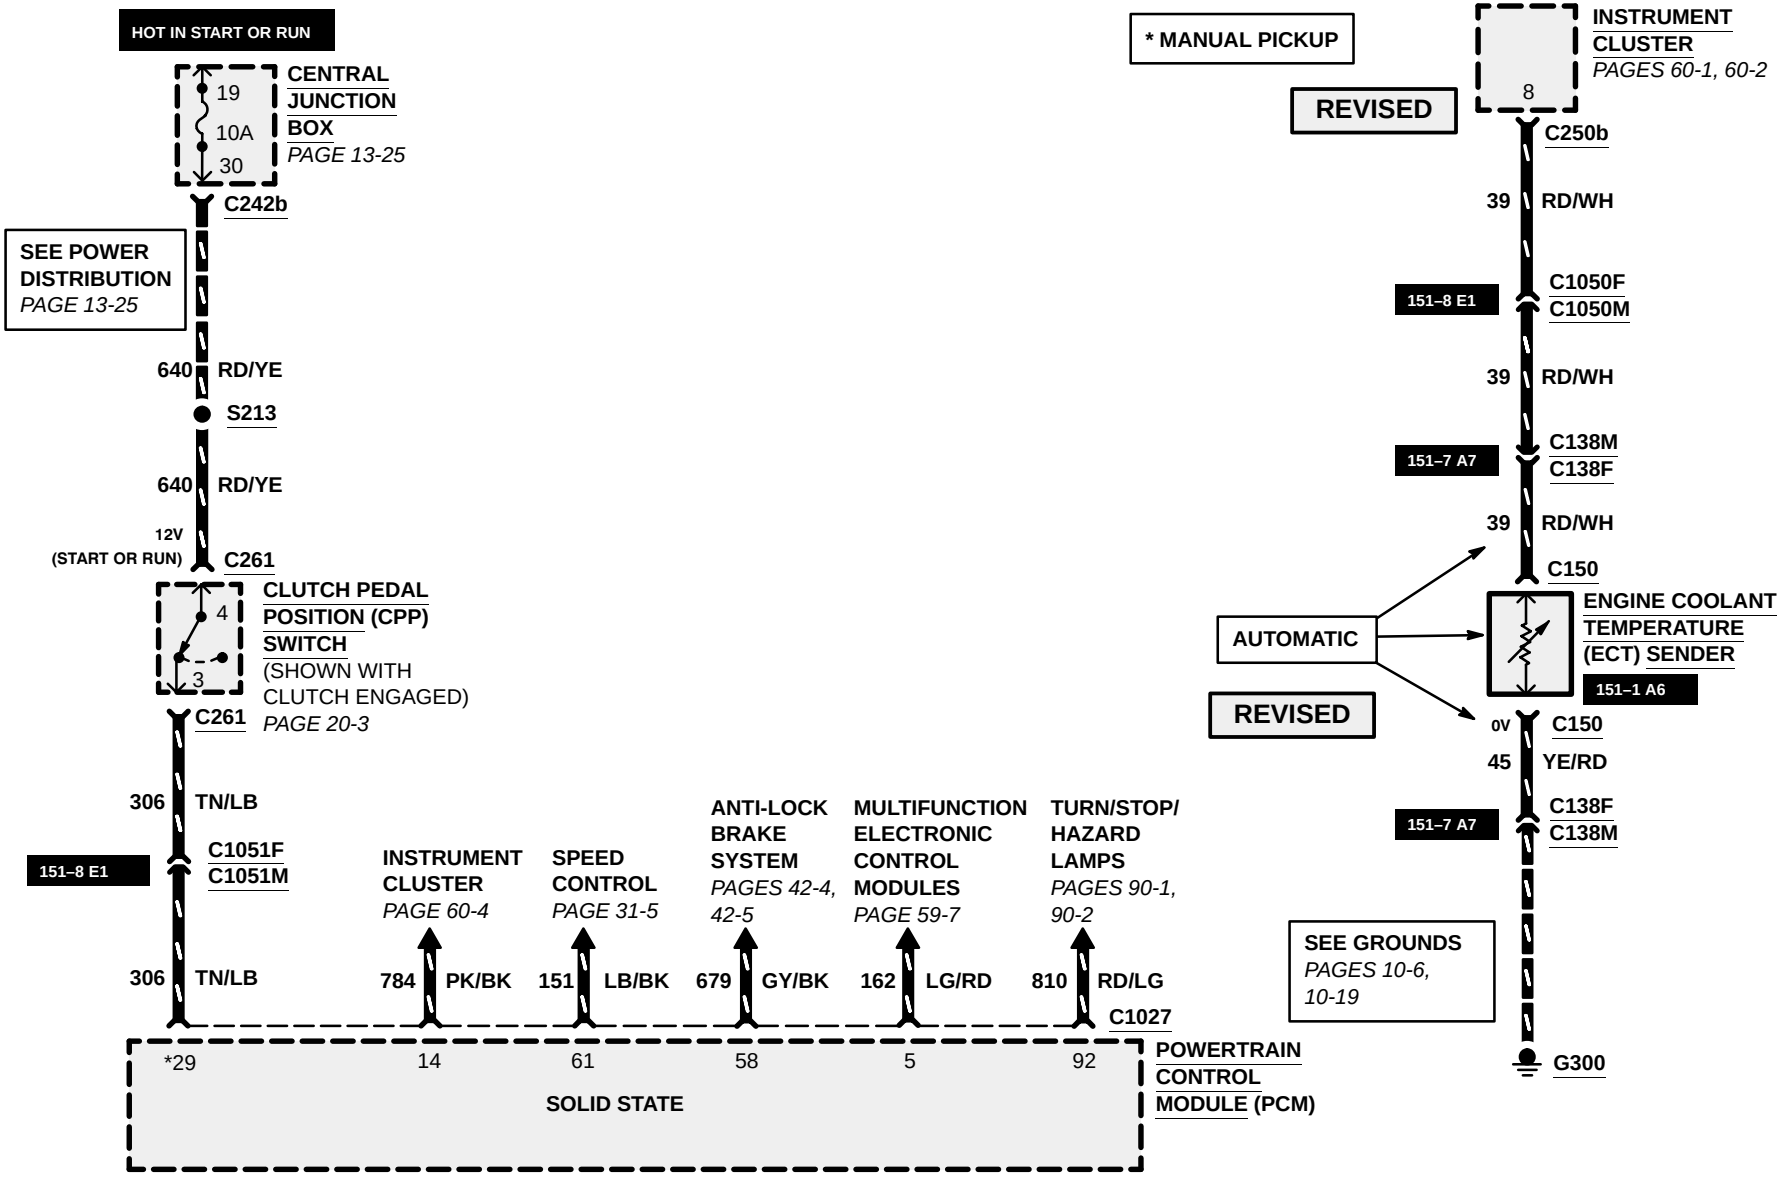
HOT IN START OR RUN
19
10A
30
CENTRAL JUNCTION BOX
PAGE 13-25
C242b
SEE POWER DISTRIBUTION
PAGE 13-25
640 RD/YE
S213
640 RD/YE
12V (START OR RUN)
C261
4
3
CLUTCH PEDAL POSITION (CPP) SWITCH
(SHOWN WITH CLUTCH ENGAGED)
PAGE 20-3
C261
306 TN/LB
151–8 E1
C1051F
C1051M
306 TN/LB
INSTRUMENT CLUSTER
PAGE 60-4
SPEED CONTROL
PAGE 31-5
ANTI-LOCK BRAKE SYSTEM
PAGES 42-4, 42-5
MULTIFUNCTION ELECTRONIC CONTROL MODULES
PAGE 59-7
TURN/STOP/ HAZARD LAMPS
PAGES 90-1, 90-2
784 PK/BK
151 LB/BK
679 GY/BK
162 LG/RD
810 RD/LG
C1027
*29
14
61
58
5
92
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
* MANUAL PICKUP
REVISED
8
INSTRUMENT CLUSTER
PAGES 60-1, 60-2
C250b
39 RD/WH
151–8 E1
C1050F
C1050M
39 RD/WH
151–7 A7
C138M
C138F
39 RD/WH
C150
AUTOMATIC
ENGINE COOLANT TEMPERATURE (ECT) SENDER
151–1 A6
REVISED
0V
C150
45 YE/RD
151–7 A7
C138F
C138M
SEE GROUNDS
PAGES 10-6, 10-19
G300