C361

14B719

N445
Lumbar adjust switch, left front

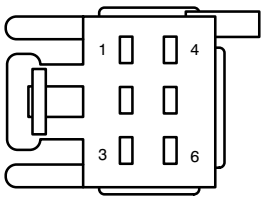

F06167

Pin	Circuit	Circuit Function
1	32-AH39 (WH/BU)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	31-AH40 (BK)	Ground
4	33-AH39 (YE/BU)	Switched between: Battery voltage, Ground or Open
5	30-AH40 (RD)	Voltage supplied at all times (not overload protected)
6	–	not used

C364

14B719

N29
Seat cushion heater, left front

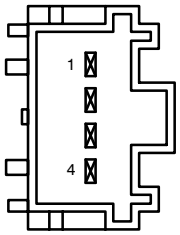

F04139

Pin	Circuit	Circuit Function
1	20S-HC17 (PK)	Voltage, hot in run only, Switched
2	8-HC23 (WH/BK)	Sensor signal
3	9-HC23 (BN/YE)	Sensor signal return (reference/ ground)
4	20S-HC16 (PK/BU)	Voltage, hot in run only, Switched

C362

14B719

M227
Driver seat horizontal motor



F02071

Pin	Circuit	Circuit Function
1	32-AH37 (WH/GN)	Switched between: Battery voltage, Ground or Open
2	33-AH37 (YE/GN)	Switched between: Battery voltage, Ground or Open

C365

14C693

N31
Seat back heater, left front

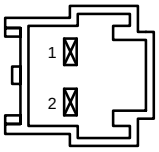

F02077

Pin	Circuit	Circuit Function
1	20S-HC16 (PK/BU)	Voltage, hot in run only, Switched
2	31S-HC16 (BK/BU)	Ground, Switched

C363

14B719

M229
Driver seat front height motor



F02071

Pin	Circuit	Circuit Function
1	33-AH38 (YE/BK)	Switched between: Battery voltage, Ground or Open
2	32-AH38 (WH/BK)	Switched between: Battery voltage, Ground or Open

C366

14C693

M231
Driver seat lumbar compressor motor



F02073

Pin	Circuit	Circuit Function
1	33-AH39 (YE/BU)	Voltage, hot in run only, Switched
2	32-AH39 (WH/BU)	Switched between: Battery voltage, Ground or Open