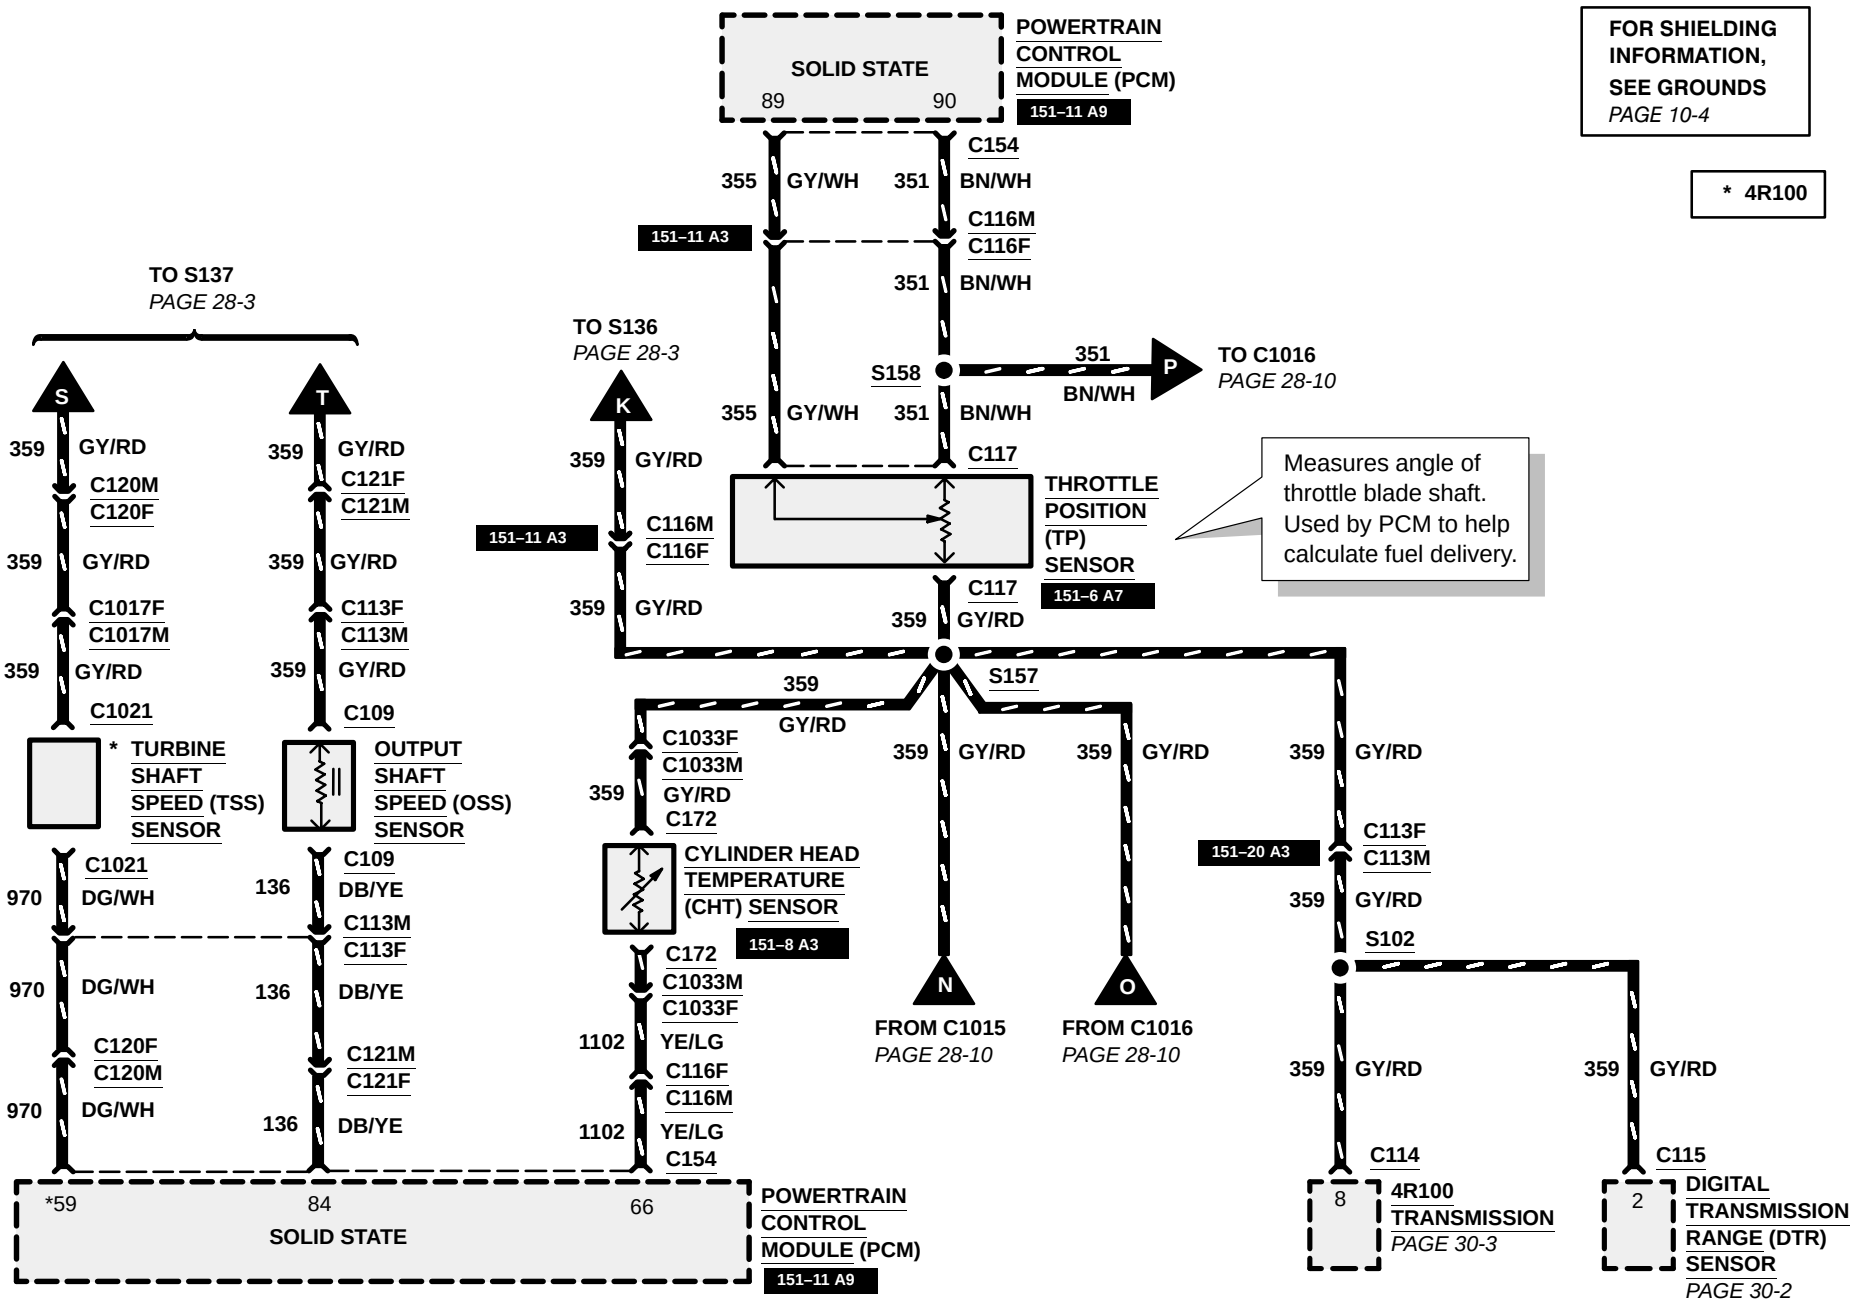
SOLID STATE
89
90
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
FOR SHIELDING INFORMATION, SEE GROUNDS
PAGE 10-4
* 4R100
C154
355 GY/WH
351 BN/WH
C116M
C116F
151–11 A3
351 BN/WH
TO S137
PAGE 28-3
TO S136
PAGE 28-3
S158
351 BN/WH
TO C1016
PAGE 28-10
S
T
K
P
355 GY/WH
351 BN/WH
C117
359 GY/RD
C120M
C120F
C121F
C121M
C116M
C116F
151–11 A3
THROTTLE POSITION (TP) SENSOR
151–6 A7
Measures angle of throttle blade shaft. Used by PCM to help calculate fuel delivery.
C1017F
C1017M
C113F
C113M
C1021
C109
* TURBINE SHAFT SPEED (TSS) SENSOR
OUTPUT SHAFT SPEED (OSS) SENSOR
S157
C1033F
C1033M
C172
CYLINDER HEAD TEMPERATURE (CHT) SENSOR
151–8 A3
970 DG/WH
136 DB/YE
1102 YE/LG
N
O
FROM C1015
PAGE 28-10
FROM C1016
PAGE 28-10
151–20 A3
C113F
C113M
S102
C114
C115
8
2
4R100 TRANSMISSION
PAGE 30-3
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGE 30-2
*59
84
66
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9