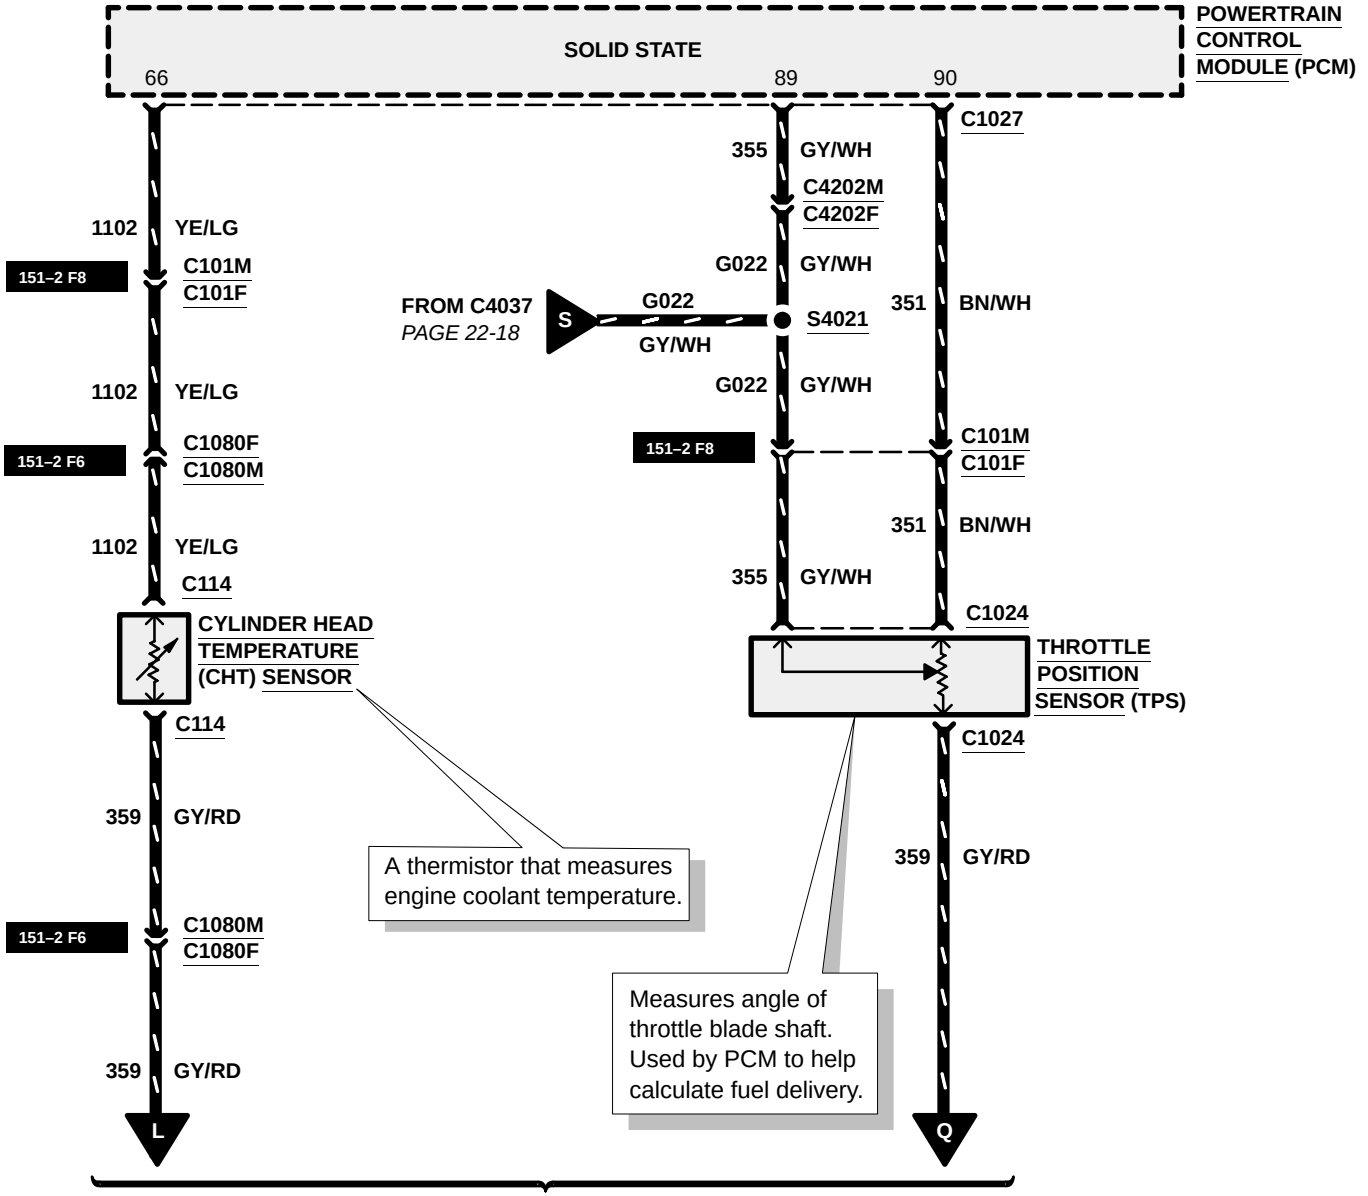
SOLID STATE
66
89
90
POWERTRAIN CONTROL MODULE (PCM)
C1027
355 GY/WH
C4202M
C4202F
1102 YE/LG
151–2 F8
C101M
C101F
G022 GY/WH
FROM C4037
PAGE 22-18
S
G022
S4021
GY/WH
351 BN/WH
1102 YE/LG
G022 GY/WH
151–2 F6
C1080F
C1080M
151–2 F8
C101M
C101F
351 BN/WH
1102 YE/LG
C114
355 GY/WH
C1024
CYLINDER HEAD TEMPERATURE (CHT) SENSOR
THROTTLE POSITION SENSOR (TPS)
C114
C1024
359 GY/RD
A thermistor that measures engine coolant temperature.
359 GY/RD
151–2 F6
C1080M
C1080F
Measures angle of throttle blade shaft. Used by PCM to help calculate fuel delivery.
359 GY/RD
L
Q
TO S132
PAGE 22-7