C114

12B637

P69
Coil On Plug (COP)
4 (12029)

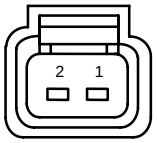

F02331

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1030 (DG/VT)	Coil On Plug (COP) 4 (12029), control

C115

12B637

P70
Coil On Plug (COP)
5 (12029)

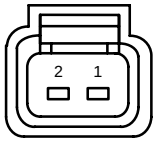

F02331

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1021 (LG/YE)	Coil On Plug (COP) 5 (12029), control

C116

12B637

P71
Coil On Plug (COP)
6 (12029)

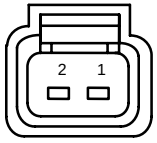

F02331

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1025 (OG/YE)	Coil On Plug (COP) 6 (12029), control

C117

12B637

P72
Coil On Plug (COP)
7 (12029)

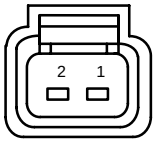

F02331

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1027 (PK/LB)	Coil On Plug (COP) 7 (12029), control

C118

12B637

P73
Coil On Plug (COP)
8 (12029)

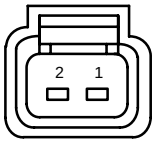

F02331

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1029 (WH/RD)	Coil On Plug (COP) 8 (12029), control