-105

C990
14014

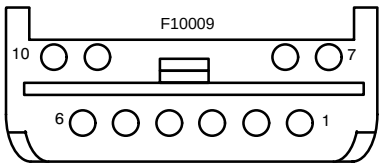

A14
Subwoofer amplifier

A339
Subwoofer amplifier 2

A338
Subwoofer amplifier 1

Pin	Circuit	Circuit Function
1	8-MD19 (WH/RD)	Sensor signal
	8-MD19A (WH/RD)	Sensor signal
2	31-MD19A (BK)	Ground
	31-MD19D (BK)	Ground
	91-MD19A (BK)	Ground (clean ground)
3	31-MD19B (BK)	Ground
	31-MD19E (BK)	Ground
	91-MD19B (BK)	Ground (clean ground)
4	30-MD19B (RD)	Voltage supplied at all times (not overload protected)
	30-MD19F (BK)	Voltage supplied at all times (not overload protected)
5	30-MD19C (RD)	Voltage supplied at all times (not overload protected)
	30-MD19G (RD)	Voltage supplied at all times (not overload protected)
6	30-MD19D (RD)	Voltage supplied at all times (not overload protected)
	30-MD19H (RD)	Voltage supplied at all times (not overload protected)
7	1-MD23 (WH/BK)	Audio signal positive
8	2-MD23 (GY/BK)	Audio signal negative
9	–	not used
10	31-MD19C (BK)	Ground
	31-MD19F (BK)	Ground

C1001
14K733

K41
Ignition relay

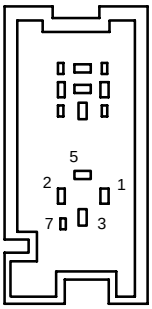

F10054

Pin	Circuit	Circuit Function
1	15-BB7 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	91-DA5 (BK/RD)	Ground
3	30-BB8 (RD)	Voltage supplied at all times (not overload protected)
5	15-DC1 (GN/BU) +	Voltage, ignition switch in Start or Run (not overload protected)
	15-DC64 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
7	–	not used

C991

A225
Driver safety belt retractor pretensioner

Pin	Circuit	Circuit Function
1	15S-JA33 (GN/BU)	Battery voltage, hot in Start and Run only (not overload protected), switched
2	91S-JA33 (BK/BU)	Ground (clean ground), switched