## C2091 (WH)

### 18B518

Temperature blend door actuator, driver (19E616)

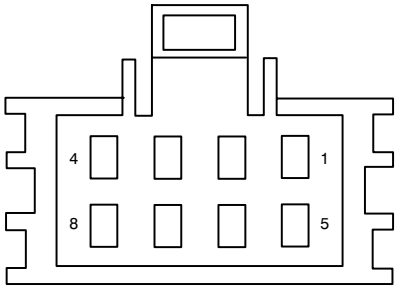


F08255

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 437 (YE/LG) | Temperature blend door actuator, driver (19E616), position, signal |
| 2 | – | not used |
| 3 | – | not used |
| 4 | – | not used |
| 5 | 438 (RD/WH) | Air temperature door variable resistor – |
| 6 | 436 (RD/LG) | Air temperature door variable resistor + |
| 7 | 249 (DB/LG) | Temperature blend door actuator, driver (19E616), Blend door actuator + |
| 8 | 250 (OG) | Temperature blend door actuator, driver (19E616), Blend door actuator – |

## C2092 (WH)

### 18B518

Temperature blend door actuator, passenger (19E616)

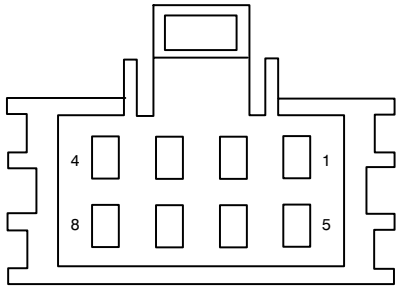


F08255

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1122 (RD) | Temperature blend door actuator, passenger (19E616), position, signal |
| 2 | – | not used |
| 3 | – | not used |
| 4 | – | not used |
| 5 | 438 (RD/WH) | Air temperature door variable resistor – |
| 6 | 436 (RD/LG) | Air temperature door variable resistor + |
| 7 | 1137 (YE/LG) | Temperature blend door actuator, passenger (19E616), Blend door actuator + |
| 8 | 1136 (RD/WH) | Temperature blend door actuator, passenger (19E616), Blend door actuator – |