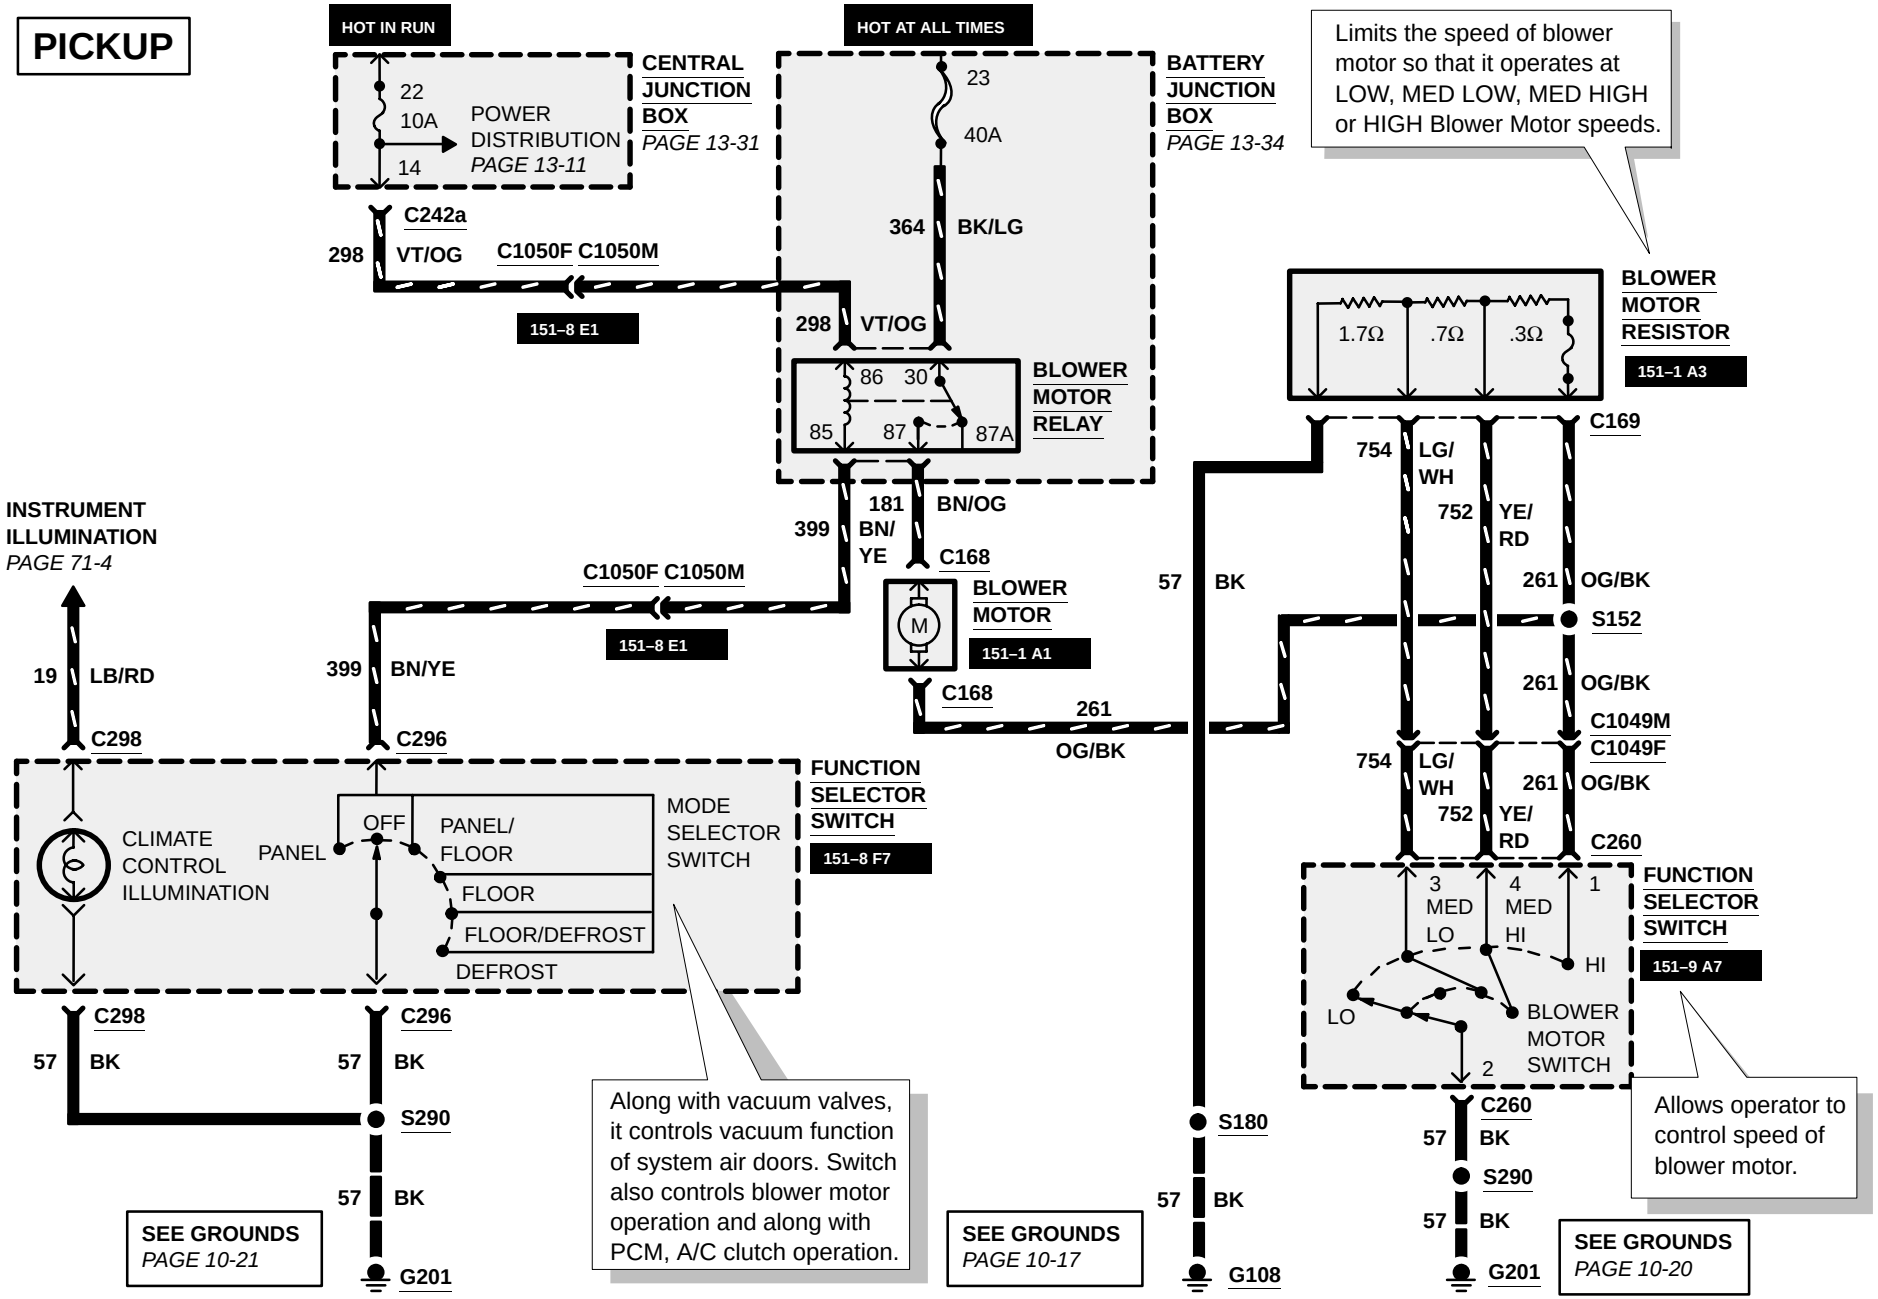
PICKUP
HOT IN RUN
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-31
22
10A
14
POWER DISTRIBUTION
PAGE 13-11
BATTERY JUNCTION BOX
PAGE 13-34
23
40A
364 BK/LG
C242a
298 VT/OG
C1050F C1050M
151–8 E1
298 VT/OG
86 30
85 87 87A
BLOWER MOTOR RELAY
Limits the speed of blower motor so that it operates at LOW, MED LOW, MED HIGH or HIGH Blower Motor speeds.
1.7Ω .7Ω .3Ω
BLOWER MOTOR RESISTOR
151–1 A3
INSTRUMENT ILLUMINATION
PAGE 71-4
181 BN/OG
399 BN/YE
C168
C1050F C1050M
151–8 E1
BLOWER MOTOR
151–1 A1
M
754 LG/WH
752 YE/RD
C169
57 BK
261 OG/BK
S152
261 OG/BK
C1049M
C1049F
754 LG/WH
752 YE/RD
261 OG/BK
C260
19 LB/RD
C298
399 BN/YE
C296
C168
261 OG/BK
CLIMATE CONTROL ILLUMINATION
PANEL
OFF
PANEL/FLOOR
FLOOR
FLOOR/DEFROST
DEFROST
MODE SELECTOR SWITCH
FUNCTION SELECTOR SWITCH
151–8 F7
3 MED LO
4 MED HI
1 HI
LO
2
BLOWER MOTOR SWITCH
FUNCTION SELECTOR SWITCH
151–9 A7
C298
57 BK
C296
57 BK
S290
57 BK
G201
SEE GROUNDS
PAGE 10-21
Along with vacuum valves, it controls vacuum function of system air doors. Switch also controls blower motor operation and along with PCM, A/C clutch operation.
S180
57 BK
G108
SEE GROUNDS
PAGE 10-17
C260
57 BK
S290
57 BK
G201
SEE GROUNDS
PAGE 10-20
Allows operator to control speed of blower motor.