4.0L

* 12V START OR RUN

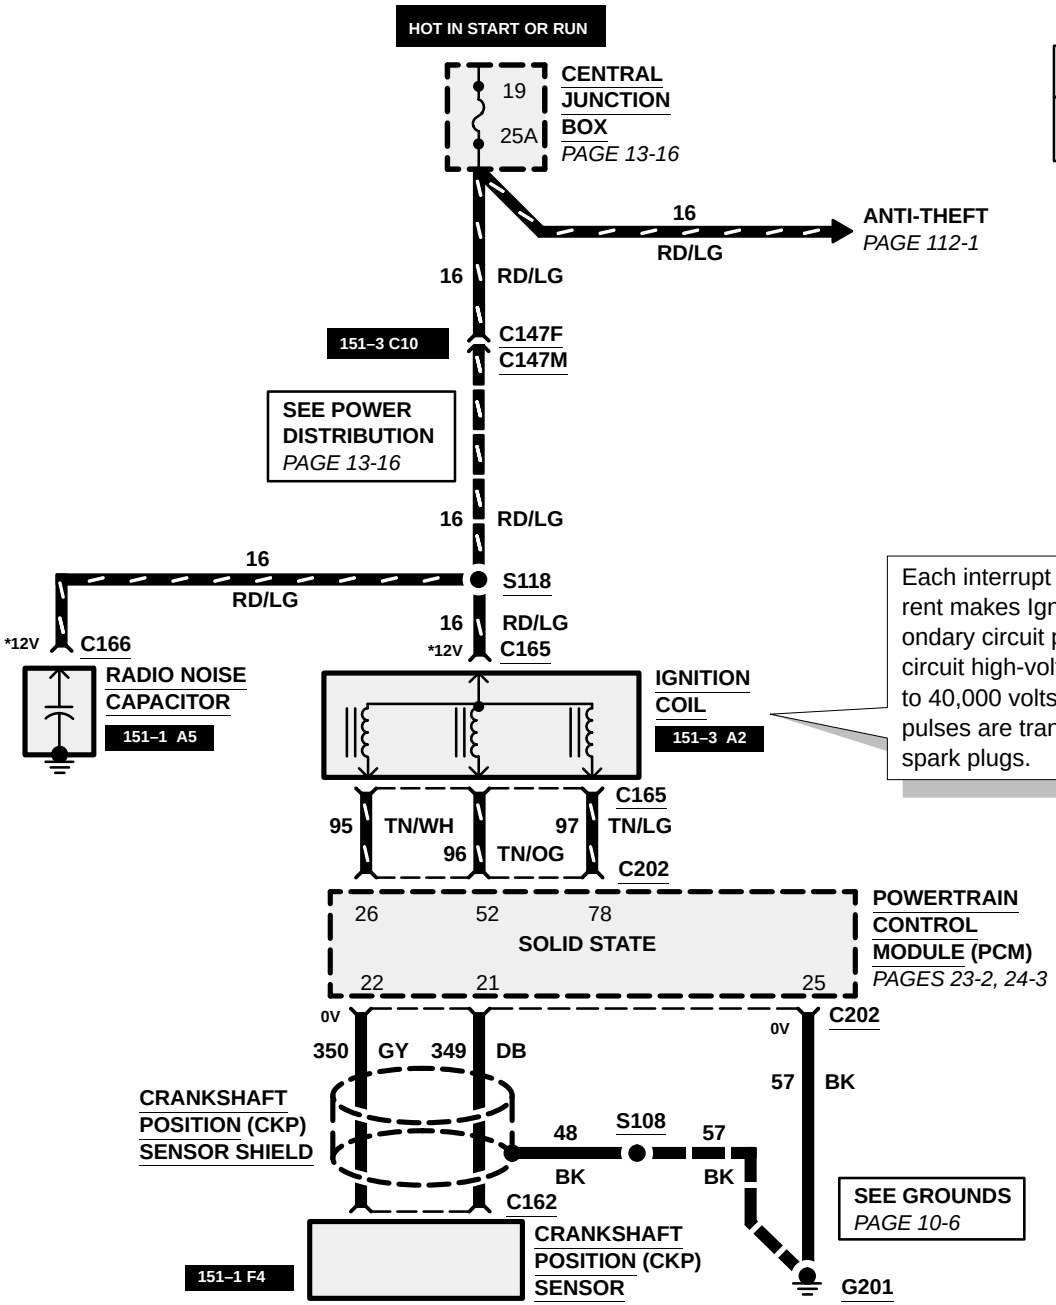

Each interrupt of primary current makes Ignition Coil secondary circuit produce an open circuit high-voltage pulse of up to 40,000 volts. High voltage pulses are transmitted to fire spark plugs.

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C202	23-9, 24-9, 25-8

REVISED

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.