C426

9L468

B16
Wheel speed sensor, right rear

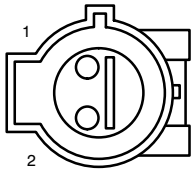

F02085

Pin	Circuit	Circuit Function
1	7-CF40 (YE/GN)	Voltage D.C. supplied at all times (sensor)
2	8-CF40 (WH/GN)	Sensor signal

C428

14A005

E57
Luggage compartment lamp (13A756)

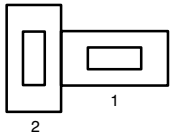

F02009

Pin	Circuit	Circuit Function
1	29S-LB25 (OG/BU)	Voltage supplied at all times (overload protected), Switched
2	31S-LB25 (BK/BU)	Ground, Switched

C429

14A005

N444
Luggage compartment lid ajar switch (19A434)

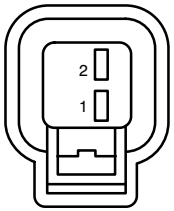

F02069

Pin	Circuit	Circuit Function
1	8-GL20 (WH/BK)	Sensor signal
2	31-GL20 (BK/RD)	Ground

C430

14A005

Y212
Luggage compartment lid release solenoid (5443252)



F03032

Pin	Circuit	Circuit Function
1	–	not used
2	29S-AA83 (OG)	Voltage supplied at all times (overload protected), Switched
3	31-AA83 (BK/OG)	Ground

C433

14407

A195
Fuel pump driver module (9H307)

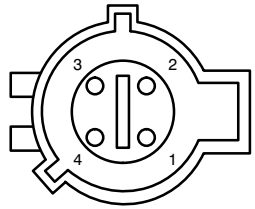

F04124

Pin	Circuit	Circuit Function
1	15S-RG2 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	8-GA7 (WH/RD)	Sensor signal
3	9-GA7 (BN/RD)	Sensor signal return (reference/ground)
4	31S-RG2 (BK/RD)	Ground, Switched