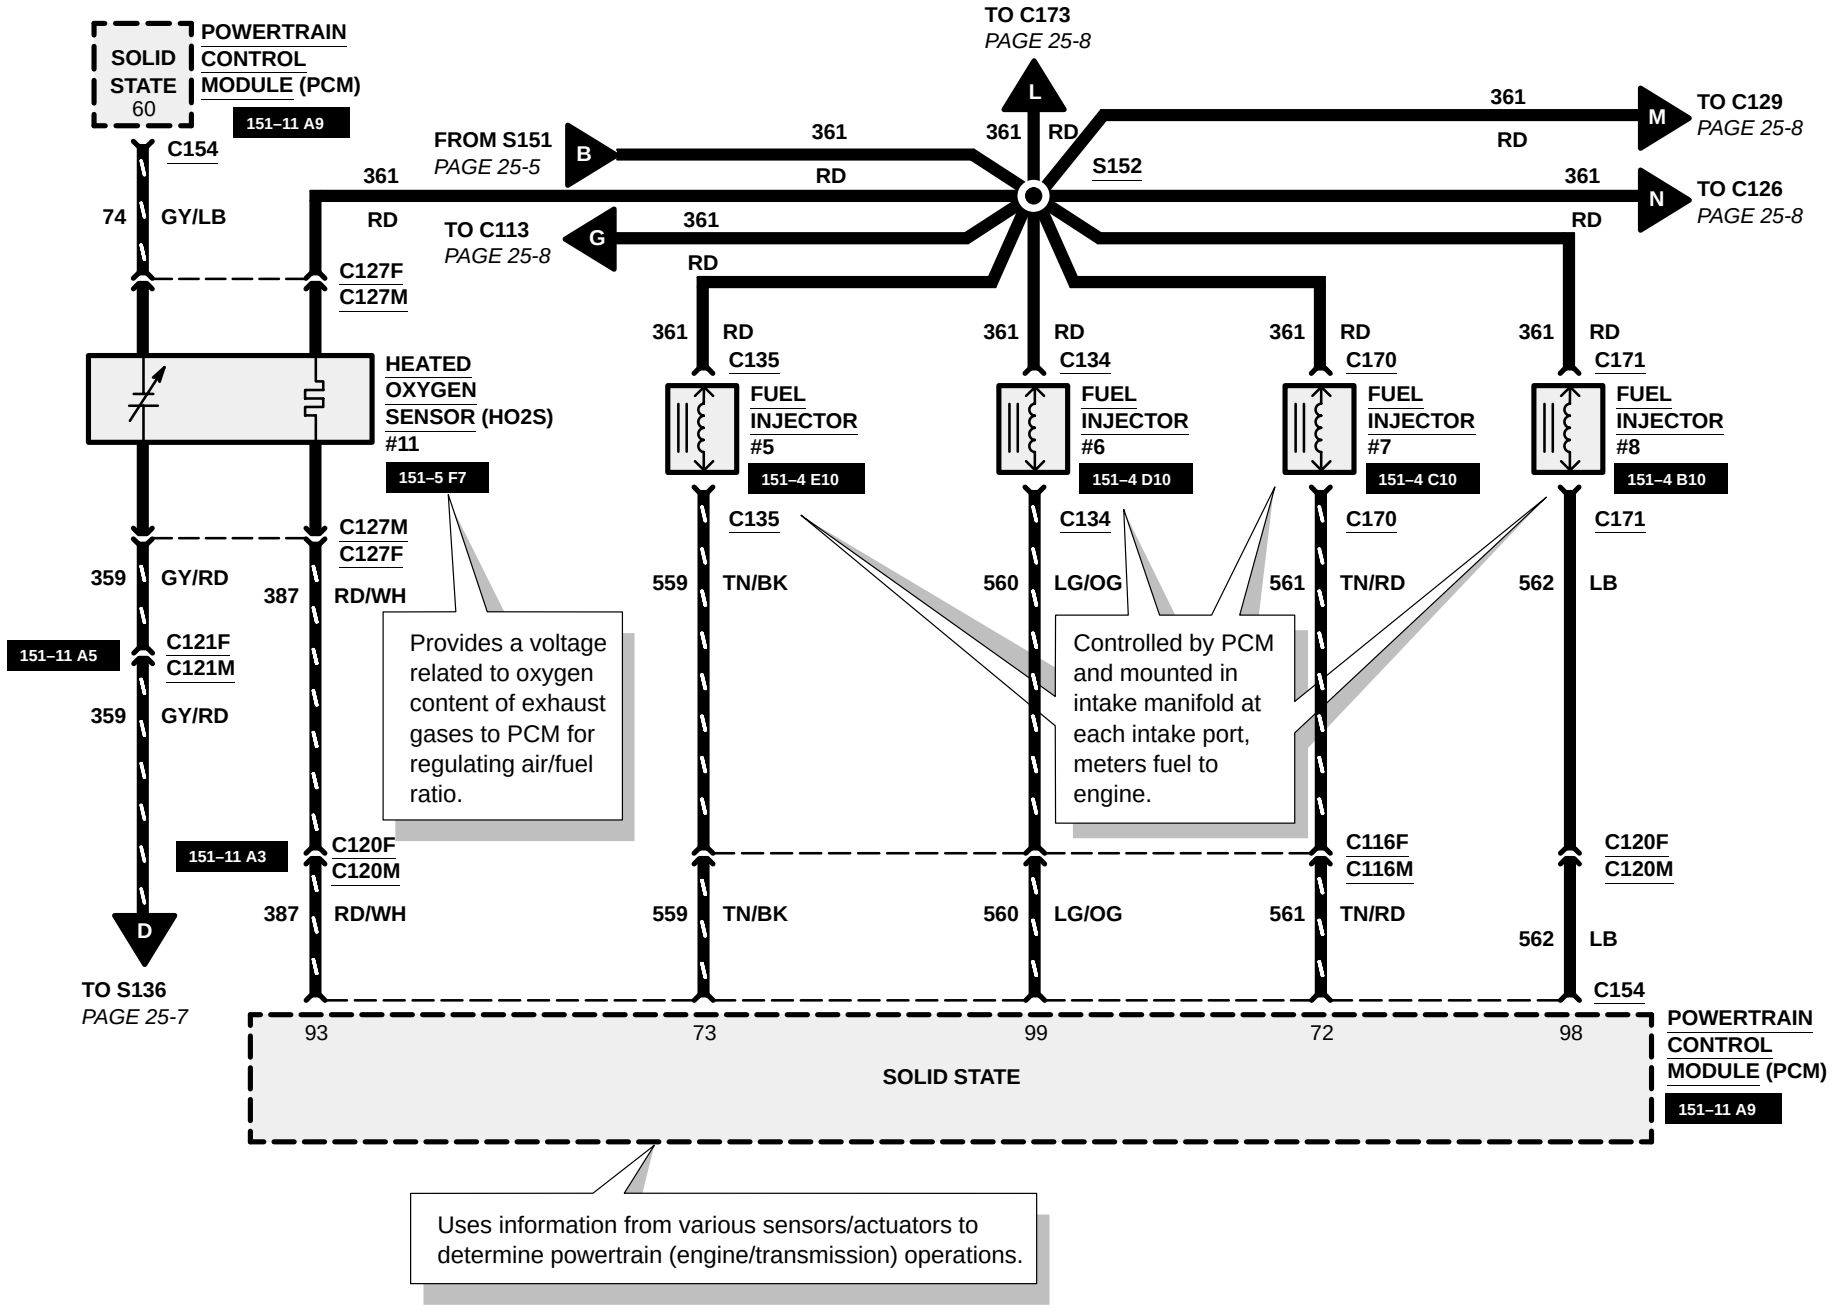
SOLID STATE 60
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
C154
74 GY/LB
361 RD
C127F
C127M
HEATED OXYGEN SENSOR (HO2S) #11
151–5 F7
C127M
C127F
359 GY/RD
387 RD/WH
151–11 A5
C121F
C121M
359 GY/RD
151–11 A3
C120F
C120M
387 RD/WH
D
TO S136
PAGE 25-7
FROM S151
PAGE 25-5
B
361 RD
TO C113
PAGE 25-8
G
361 RD
TO C173
PAGE 25-8
L
361 RD
S152
361 RD
TO C129
PAGE 25-8
M
361 RD
TO C126
PAGE 25-8
N
361 RD C135
FUEL INJECTOR #5
151–4 E10
361 RD C134
FUEL INJECTOR #6
151–4 D10
361 RD C170
FUEL INJECTOR #7
151–4 C10
361 RD C171
FUEL INJECTOR #8
151–4 B10
C135
559 TN/BK
C134
560 LG/OG
C170
561 TN/RD
C171
562 LB
C116F
C116M
559 TN/BK
560 LG/OG
561 TN/RD
C120F
C120M
562 LB
C154
93
73
99
72
98
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
Controlled by PCM and mounted in intake manifold at each intake port, meters fuel to engine.
Uses information from various sensors/actuators to determine powertrain (engine/transmission) operations.