C701

14A511

Window adjust switch, left rear (14A412)

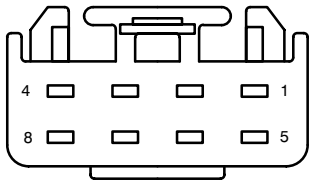

F08074

Pin	Circuit	Circuit function
1	–	not used
2	334 (RD/YE)	Window motor, feed
3	317 (GY/OG)	Window switch, feed, left rear, Up
4	170 (RD/LB)	Window lockout, switched power, output
5	316 (YE/LB)	Window switch, feed, left rear, Down
6	333 (YE/RD)	Window motor, feed
7	–	not used
8	–	not used

C702

14A005

Speaker, left rear (18808)

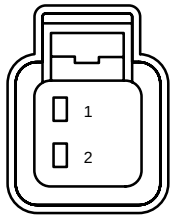

F02337

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) –

C703

14A005

Power window motor, left rear (23394)



F02387

Pin	Circuit	Circuit function
1	333 (YE/RD)	Window motor, feed, +/–
2	334 (RD/YE)	Window motor, feed, +/–

C705

14A005

Door lock unit, left rear

Early production

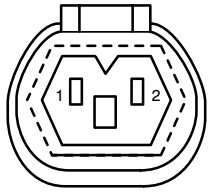

F02227

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, +/–
2	118 (PK/OG)	Door unlock, +/–

Late production



F02383

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door unlock, +/–
2	117 (PK/BK)	Door lock, +/–