C240a

14401

A220
Audio unit (18808)

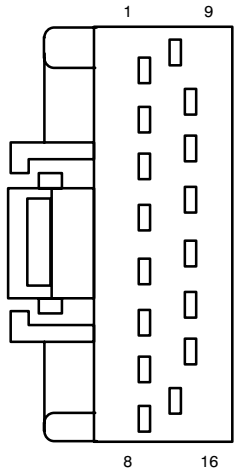

F16055

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	50-MD15 (GY/OG)	Start mute – without keyless entry
4	–	not used
5	8-MD18 (WH)	Speaker, right rear (18808) (+)
6	10-MD18 (GY)	Speaker, right rear (18808) (–)
7	8-MD17 (WH/RD)	Speaker, right front (18808) (+)
8	10-MD17 (GY/RD)	Speaker, right front (18808) (–)
9	29-MD15 (OG/BK)	Battery – keep alive memory

Pin	Circuit	Circuit Function
10	75-MD15 (YE/GN)	Voltage: Ignition switch in Accessory or Run
11	31-MD15 (BK/GN)	Ground
12	8-MD11 (WH/VT)	Speaker, left rear (18808) (+)
13	10-MD11 (GY/WH)	Speaker, left rear (18808) (–)
14	8-MD10 (WH/BK)	Speaker, left front (18808) (+)
15	10-MD10 (GY/BK)	Speaker, left front (18808) (–)
16	31-MD15 (BK/GN)	Ground