G15 -5

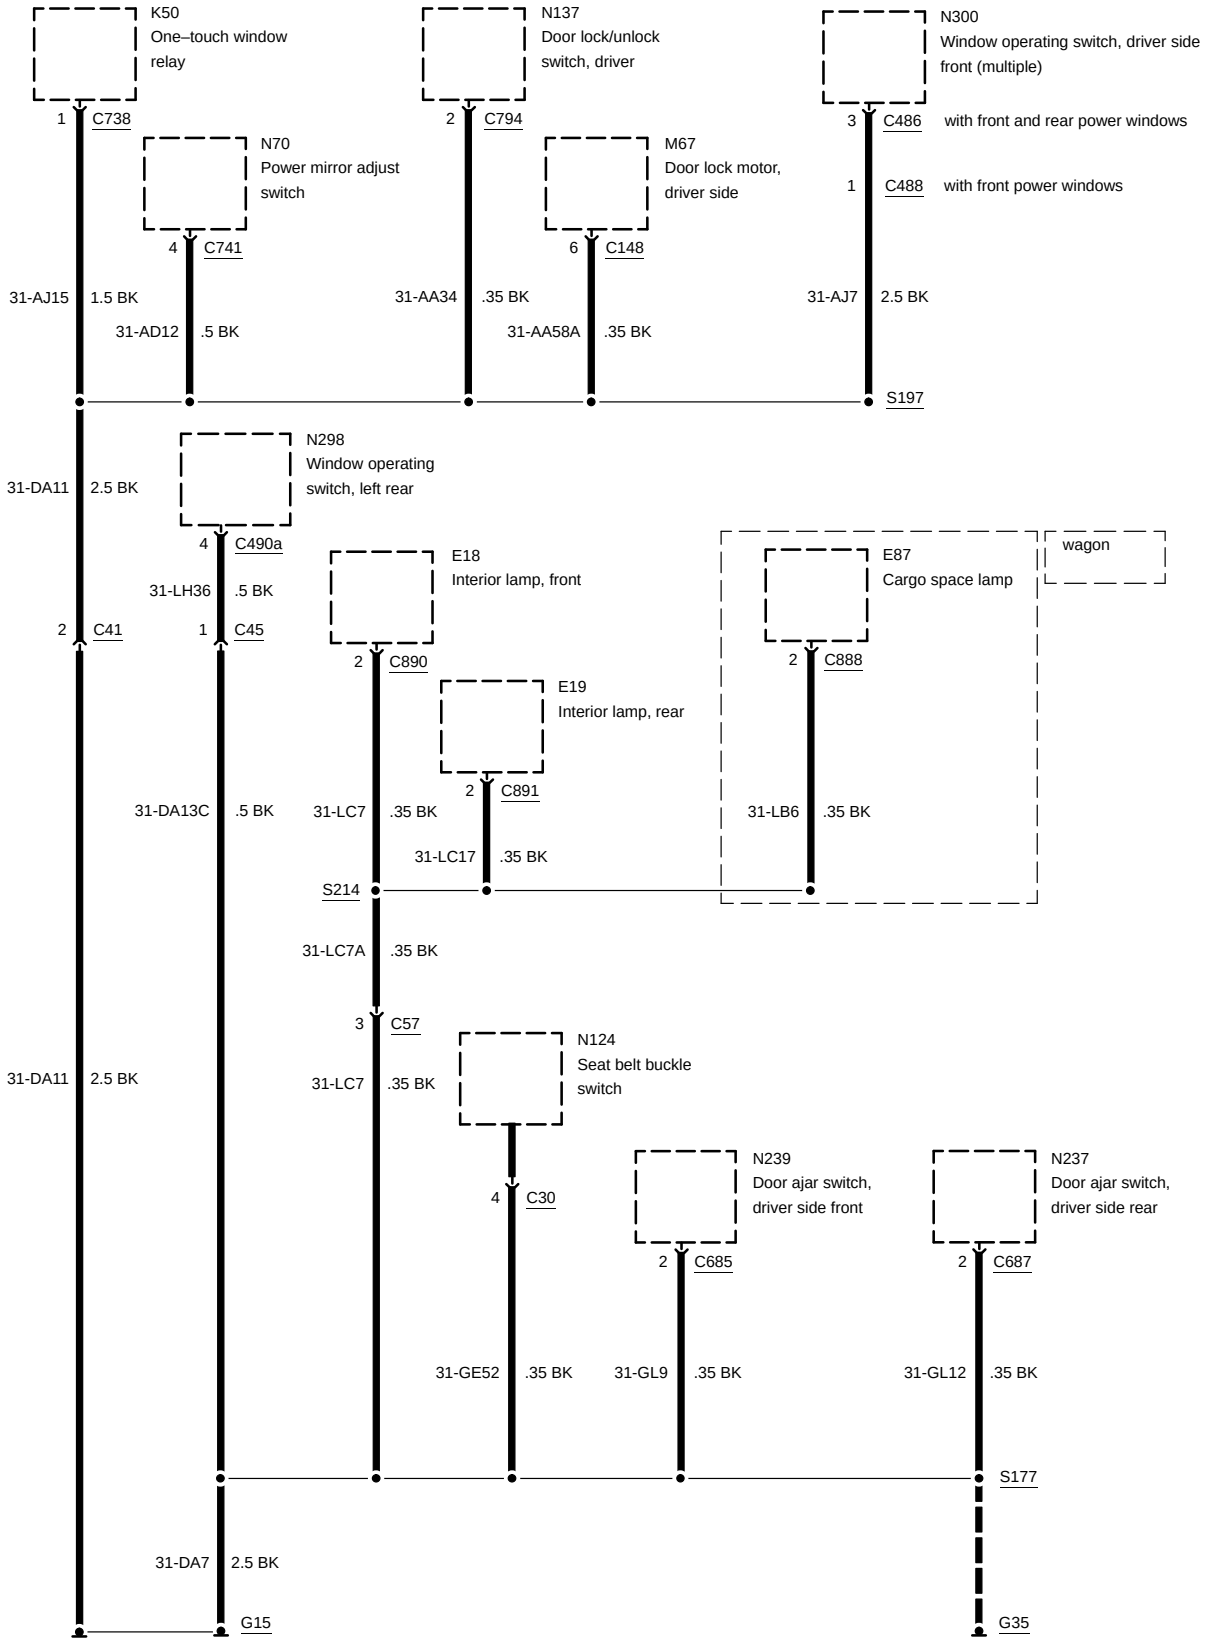
K50
One–touch window relay
1
C738
N137
Door lock/unlock switch, driver
2
C794
N300
Window operating switch, driver side front (multiple)
3
C486
with front and rear power windows
1
C488
with front power windows
N70
Power mirror adjust switch
4
C741
M67
Door lock motor, driver side
6
C148
31-AJ15 1.5 BK
31-AD12 .5 BK
31-AA34 .35 BK
31-AA58A .35 BK
31-AJ7 2.5 BK
S197
N298
Window operating switch, left rear
31-DA11 2.5 BK
4
C490a
31-LH36 .5 BK
2
C41
1
C45
E18
Interior lamp, front
2
C890
E19
Interior lamp, rear
2
C891
E87
Cargo space lamp
wagon
2
C888
31-DA13C .5 BK
31-LC7 .35 BK
31-LC17 .35 BK
31-LB6 .35 BK
S214
31-LC7A .35 BK
3
C57
31-DA11 2.5 BK
31-LC7 .35 BK
N124
Seat belt buckle switch
4
C30
N239
Door ajar switch, driver side front
2
C685
N237
Door ajar switch, driver side rear
2
C687
31-GE52 .35 BK
31-GL9 .35 BK
31-GL12 .35 BK
S177
31-DA7 2.5 BK
G15
G35