C331

14A699

N446
Lumbar adjust
switch, right front

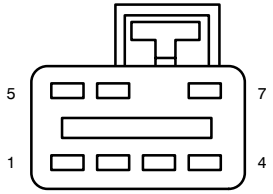

F07055

Pin	Circuit	Circuit function
1	1097 (BR)	Power lumbar switch, left, to, Front seat lumbar compressor motor
2	490 (RD)	Voltage supplied at all times (overload protected)
3	57 (BK)	Ground
4	–	not used
5	–	not used
6	57 (BK)	Ground
7	1094 (BK)	Power lumbar switch, left, to, Front seat lumbar compressor motor

C334

144A699

N30
Seat cushion heater,
right front

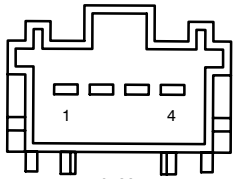

F04287

Pin	Circuit	Circuit function
1	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed
2	1060 (BK/LB)	Seat cushion heater, driver side, Sensor, feed
3	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
4	1065 (YE/LB)	Seat cushion heater, passenger side, heater, heater, feed

C335

14A699

N32
Seat back heater,
right front

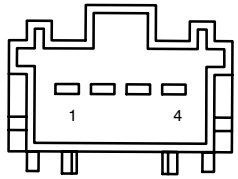

F04287

Pin	Circuit	Circuit function
1	1066 (GY/LB)	Seat back heater, driver side, feed
2	1062 (BN/LB)	Seat cushion heater, passenger side, Sensor, return
3	1063 (OG/LB)	Heated seat module, passenger side front
4	1067 (VT/LB)	Seat back heater, driver side, heater, return

C336

14A699

M235
Passenger seat
lumbar compressor
motor (65500)

F02090

Pin	Circuit	Circuit function
1	1097 (BR)	Power lumbar switch, left, to, Front seat lumbar compressor motor
2	1094 (PK)	Power lumbar switch, left, to, Front seat lumbar compressor motor

C337

14716

A154
Side air bag module, right

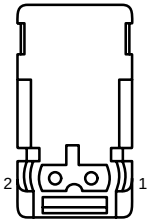

F02215

Pin	Circuit	Circuit function
1	1260 (BN/YE)	Air bag – passenger side impact to module – return
2	1259 (WH/YE)	Air bag – passenger side impact to module – feed