-2

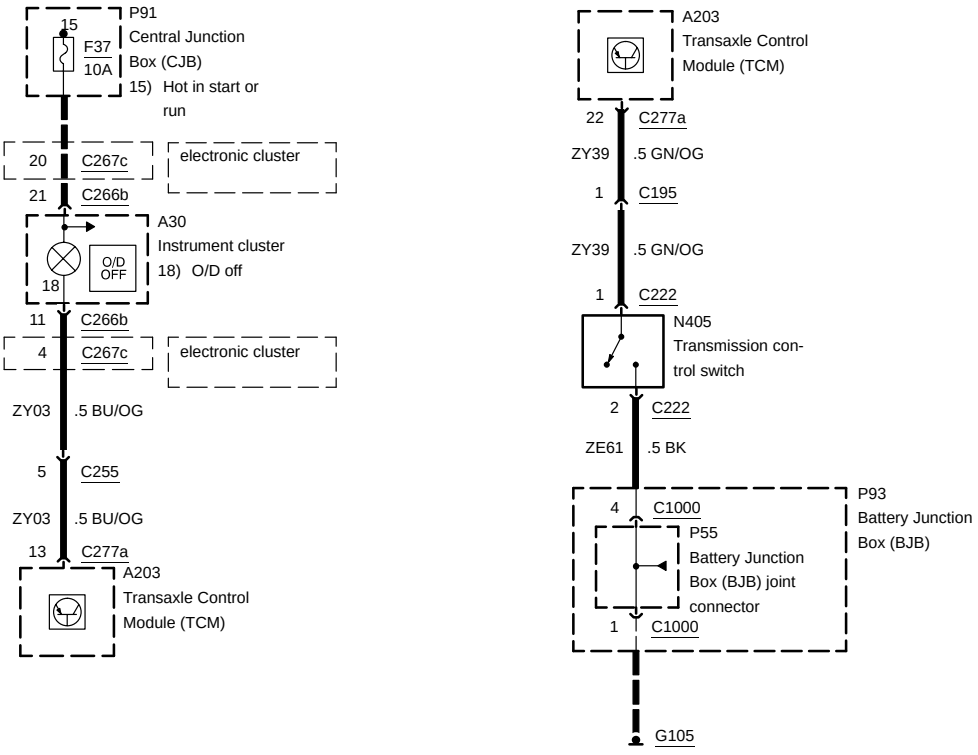
15
P91
Central Junction
Box (CJB)
F37
10A
15) Hot in start or
run
20
C267c
electronic cluster
21
C266b
A30
Instrument cluster
O/D
OFF
18) O/D off
18
11
C266b
4
C267c
electronic cluster
ZY03
.5 BU/OG
5
C255
ZY03
.5 BU/OG
13
C277a
A203
Transaxle Control
Module (TCM)
A203
Transaxle Control
Module (TCM)
22
C277a
ZY39
.5 GN/OG
1
C195
ZY39
.5 GN/OG
1
C222
N405
Transmission con-
trol switch
2
C222
ZE61
.5 BK
4
C1000
P55
Battery Junction
Box (BJB) joint
connector
1
C1000
P93
Battery Junction
Box (BJB)
G105