## C816

### 14014

B17
Wheel speed sensor, left rear

F02005

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 8-CF34 (WH/BU) | Sensor signal |
| | 9-CF34 (BN/BU) | Sensor signal return (reference/ground) |
| 2 | 7-CF34 (YE/BU) | Voltage D.C. supplied at all times (sensor) |
| | 8-CF34 (WH/BU) | Sensor signal |

## C818

### 14401

B36
Steering position sensor

F06065

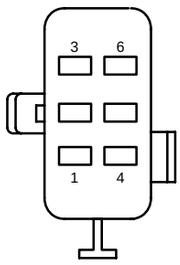


| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 91-CE8 (BK/OG) | Ground |
| 2 | 4-EG15 (GY/OG) | Data link, bus positive |
| 3 | 5-EG15 (BU/BK) | Data link, bus negative |
| 4 | 29-CE8 (OG) | Voltage supplied at all times (overload protected) |
| 5 | 15-CE8 (GN/RD) | Voltage, ignition switch in Start or Run (not overload protected) |
| 6 | – | not used |

## C817

### 14014

B16
Wheel speed sensor, right rear

F02005

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 8-CF40 (WH/GN) | Sensor signal |
| | 9-CF40 (BN/GN) | Sensor signal return (reference/ground) |
| 2 | 7-CF40 (YE/GN) | Voltage D.C. supplied at all times (sensor) |
| | 8-CF40 (WH/GN) | Sensor signal |

## C820 (GY)

### 14405

E57
Luggage compartment lamp

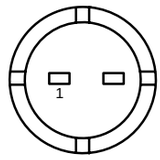


F02019

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31S-LB25 (BK/BU) | Ground, switched |
| 2 | 29-LB25 (OG/BU) | Voltage supplied at all times (overload protected) |