Battery Junction Box (BJB) (14A003)

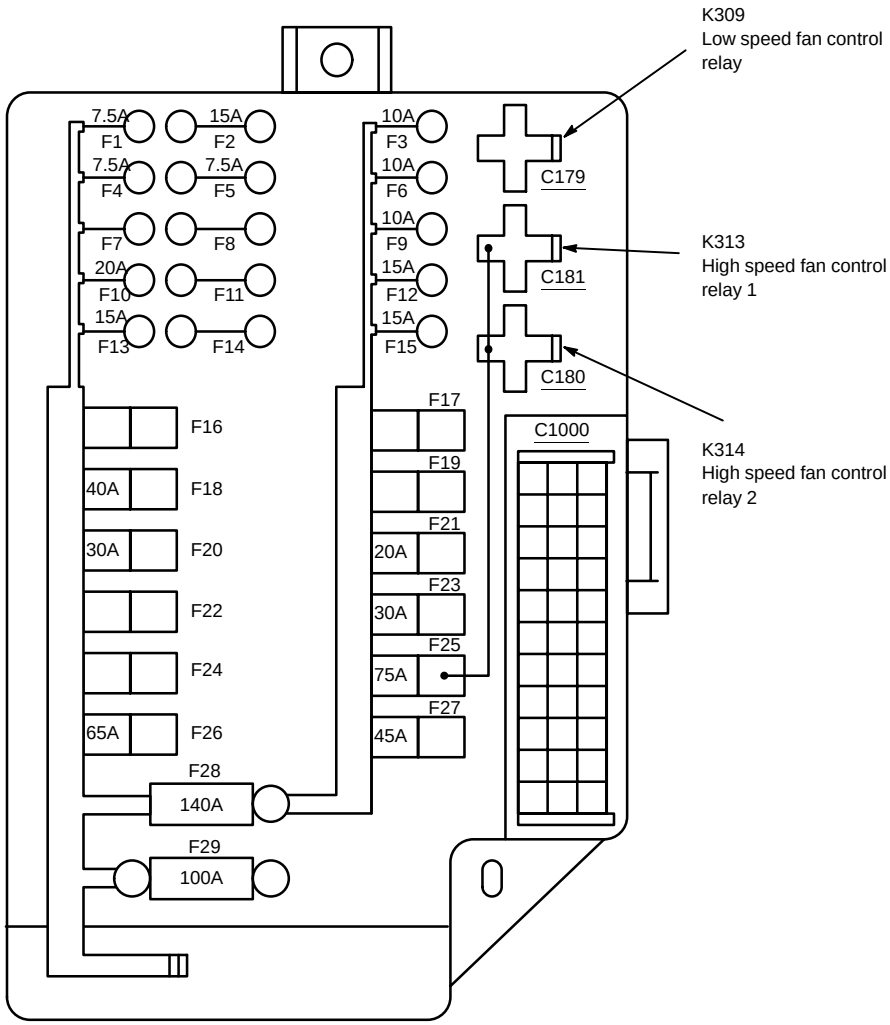

Fuse	Amps	Circuits protected
F1	7.5A	Fog lamp relay
F2	15A	Fuel pump relay
F3	10A	Powertrain Control Module (PCM) (12A650), Fuel injectors
F4	7.5A	Smart Entry Control (SEC)/Timer module, Anti–theft relay
F5	7.5A	Powertrain Control Module (PCM) (12A650)
F6	10A	PCM power relay, Data Link Connector (DLC) (14489)
F7	–	not used
F8	–	not used
F9	10A	Generator
F10	20A	ABS control module (2C219)
F11	–	not used
F12	15A	Lighting control module
F13	15A	Horn relay
F14	–	not used
F15	15A	Lighting control module
F16	–	not used
F17	–	not used
F18	40A	ABS control module (2C219)
F19	–	not used
F20	30A	Circuit breaker 1, Circuit breaker 2, Power windows, Power seats
F21	20A	Low speed fan control relay
F22	–	not used
F23	30A	Ignition switch (11572)
F24	–	not used
F25	75A	High speed fan control relay 1, High speed fan control relay 2
F26	65A	Front blower motor relay
F27	45A	Central Junction Box (CJB) (14A068), Rear window defrost relay
F28	140A	Central Junction Box (CJB) (14A068), Generator
F29	100A	Central Junction Box (CJB) (14A068), Accessory relay, Ignition relay, Tail lamp relay