R1.207
Dash Harness

Drain valve heater relay



Pin	Circuit	Circuit Function
A	533 (TN/RD)	Power relay to fuse link
B	—	Not used
C	57 (BK)	Ground circuit
E	2225 (TN/YE)	
F	326 (WH/VT)	Fuse panel feed to relay

R1.208
Dash Harness

Back-up lamps relay



Pin	Circuit	Circuit Function
A	140 (BK/PK)	Back up lamp
B	—	Not used
C	57 (BK)	Ground circuit
E	963 (BK/LG)	Trailer backup lamps
F	907 (YE/WH)	Battery feed #3 to lighting control module

R1.209
Dash Harness

Stop lamp relay (CAT)
ECM ISO relay (V8)



Pin	Circuit	Circuit Function
A	20 (WH/LB)	Distributor electronic control feed
A	511 (LG)	Stoplamp (brake on/off) switch to stoplamps
B	–	Not used
C	554 (YE/BK)	Power relay battery feed
C	57 (BK)	Ground circuit
E	361 (RD)	Module, powertrain control - VPWR feed
E	123 (RD)	Keyless door lock switch data bit 5 to module
F	554 (YE/BK)	Power relay battery feed

R1.301
Dash Harness

Fuel heater - fuel transfer pump relay

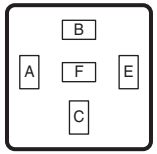

Pin	Circuit	Circuit Function
A	57 (BK)	Ground circuit
B	238 (DG/YE)	PCM to fuel pump monitor / fuel pump relay to safety switch
C	1059 (LB/OG)	Fused battery feed to fuel pump relay contact
E	533 (TN/RD)	Power relay to fuse link
F	—	Not used

R1.302
Dash Harness

Park lamp relay

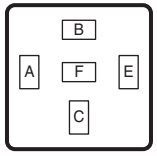

Pin	Circuit	Circuit Function
A	57 (BK)	Ground circuit
B	962 (BN/WH)	Trailer running lamps
C	905 (GY/LB)	Battery feed #1 to lighting control module
E	14 (BN)	Headlamp switch to tail lamps and side marker lamps
F	—	Not used

R1.303
Dash Harness

Blower motor relay

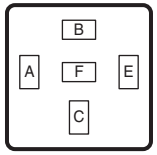

Pin	Circuit	Circuit Function
A	399 (BN/YE)	Switch, heater blower - switch feed
B	181 (BN/OG)	Blower motor feed
C	364 (BK/LG)	Blower motor relay feed
E	57 (BK)	Ground circuit
F	—	Not used