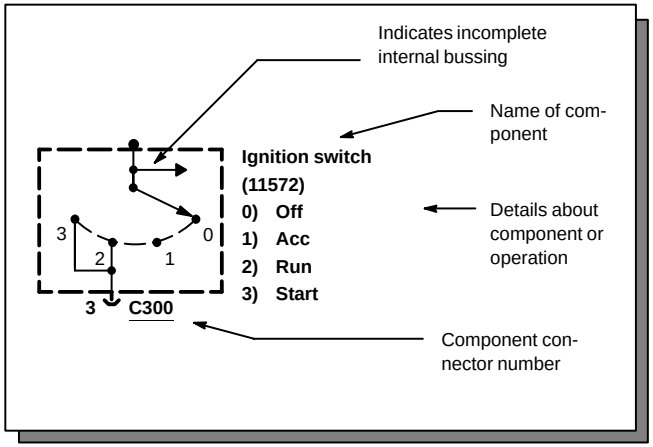
Indicates incomplete internal bussing
Name of component
Ignition switch
(11572)
0) Off
1) Acc
2) Run
3) Start
Details about component or operation
3
C300
Component connector number

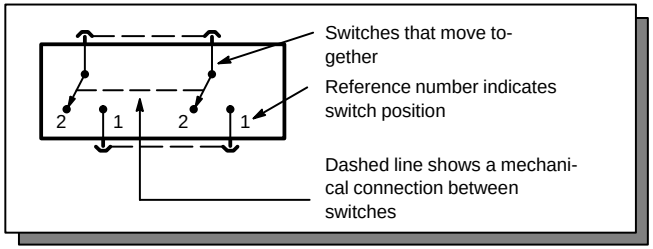
Switches that move together
Reference number indicates switch position
Dashed line shows a mechanical connection between switches

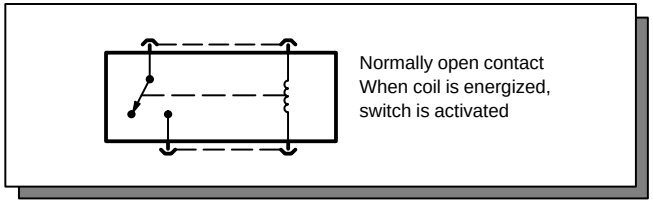
Normally open contact
When coil is energized, switch is activated

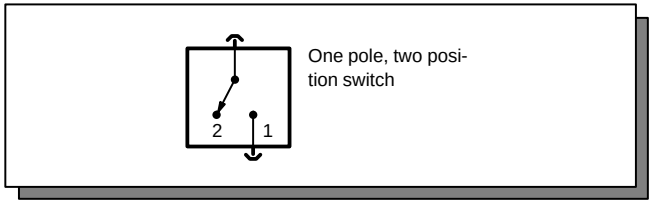
One pole, two position switch

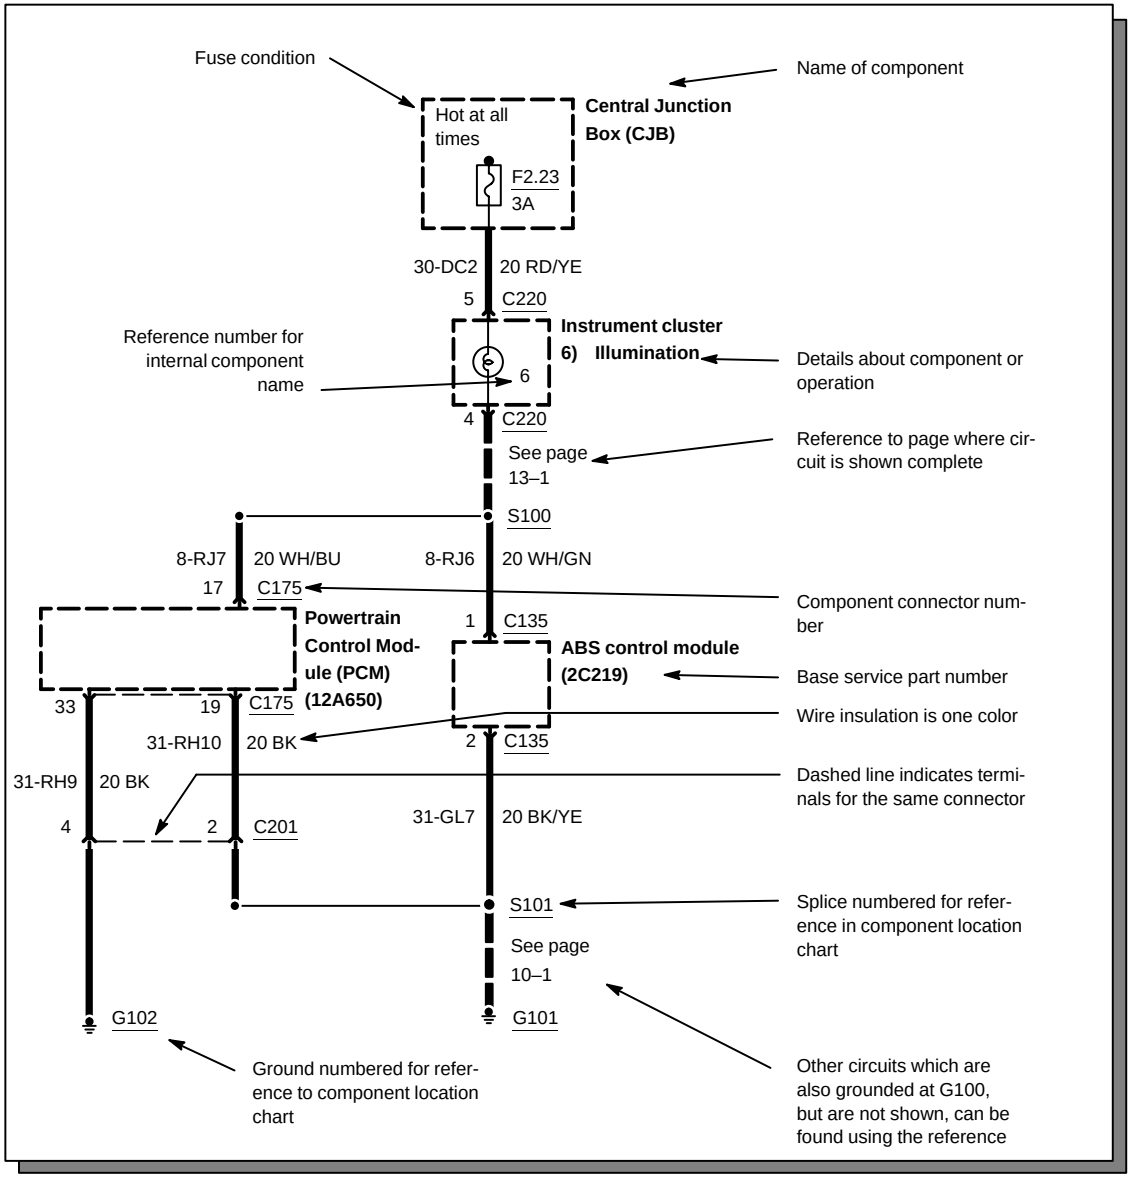
Fuse condition
Name of component
Hot at all times
Central Junction Box (CJB)
F2.23
3A
30-DC2
20 RD/YE
5
C220
Instrument cluster
6) Illumination
Reference number for internal component name
Details about component or operation
6
4
C220
See page 13–1
Reference to page where circuit is shown complete
S100
8-RJ7
20 WH/BU
17
C175
8-RJ6
20 WH/GN
1
C135
Component connector number
Powertrain Control Module (PCM)
(12A650)
ABS control module
(2C219)
Base service part number
33
19
C175
31-RH10
20 BK
2
C135
Wire insulation is one color
31-RH9
20 BK
4
2
C201
Dashed line indicates terminals for the same connector
31-GL7
20 BK/YE
S101
Splice numbered for reference in component location chart
See page 10–1
G102
G101
Ground numbered for reference to component location chart
Other circuits which are also grounded at G100, but are not shown, can be found using the reference