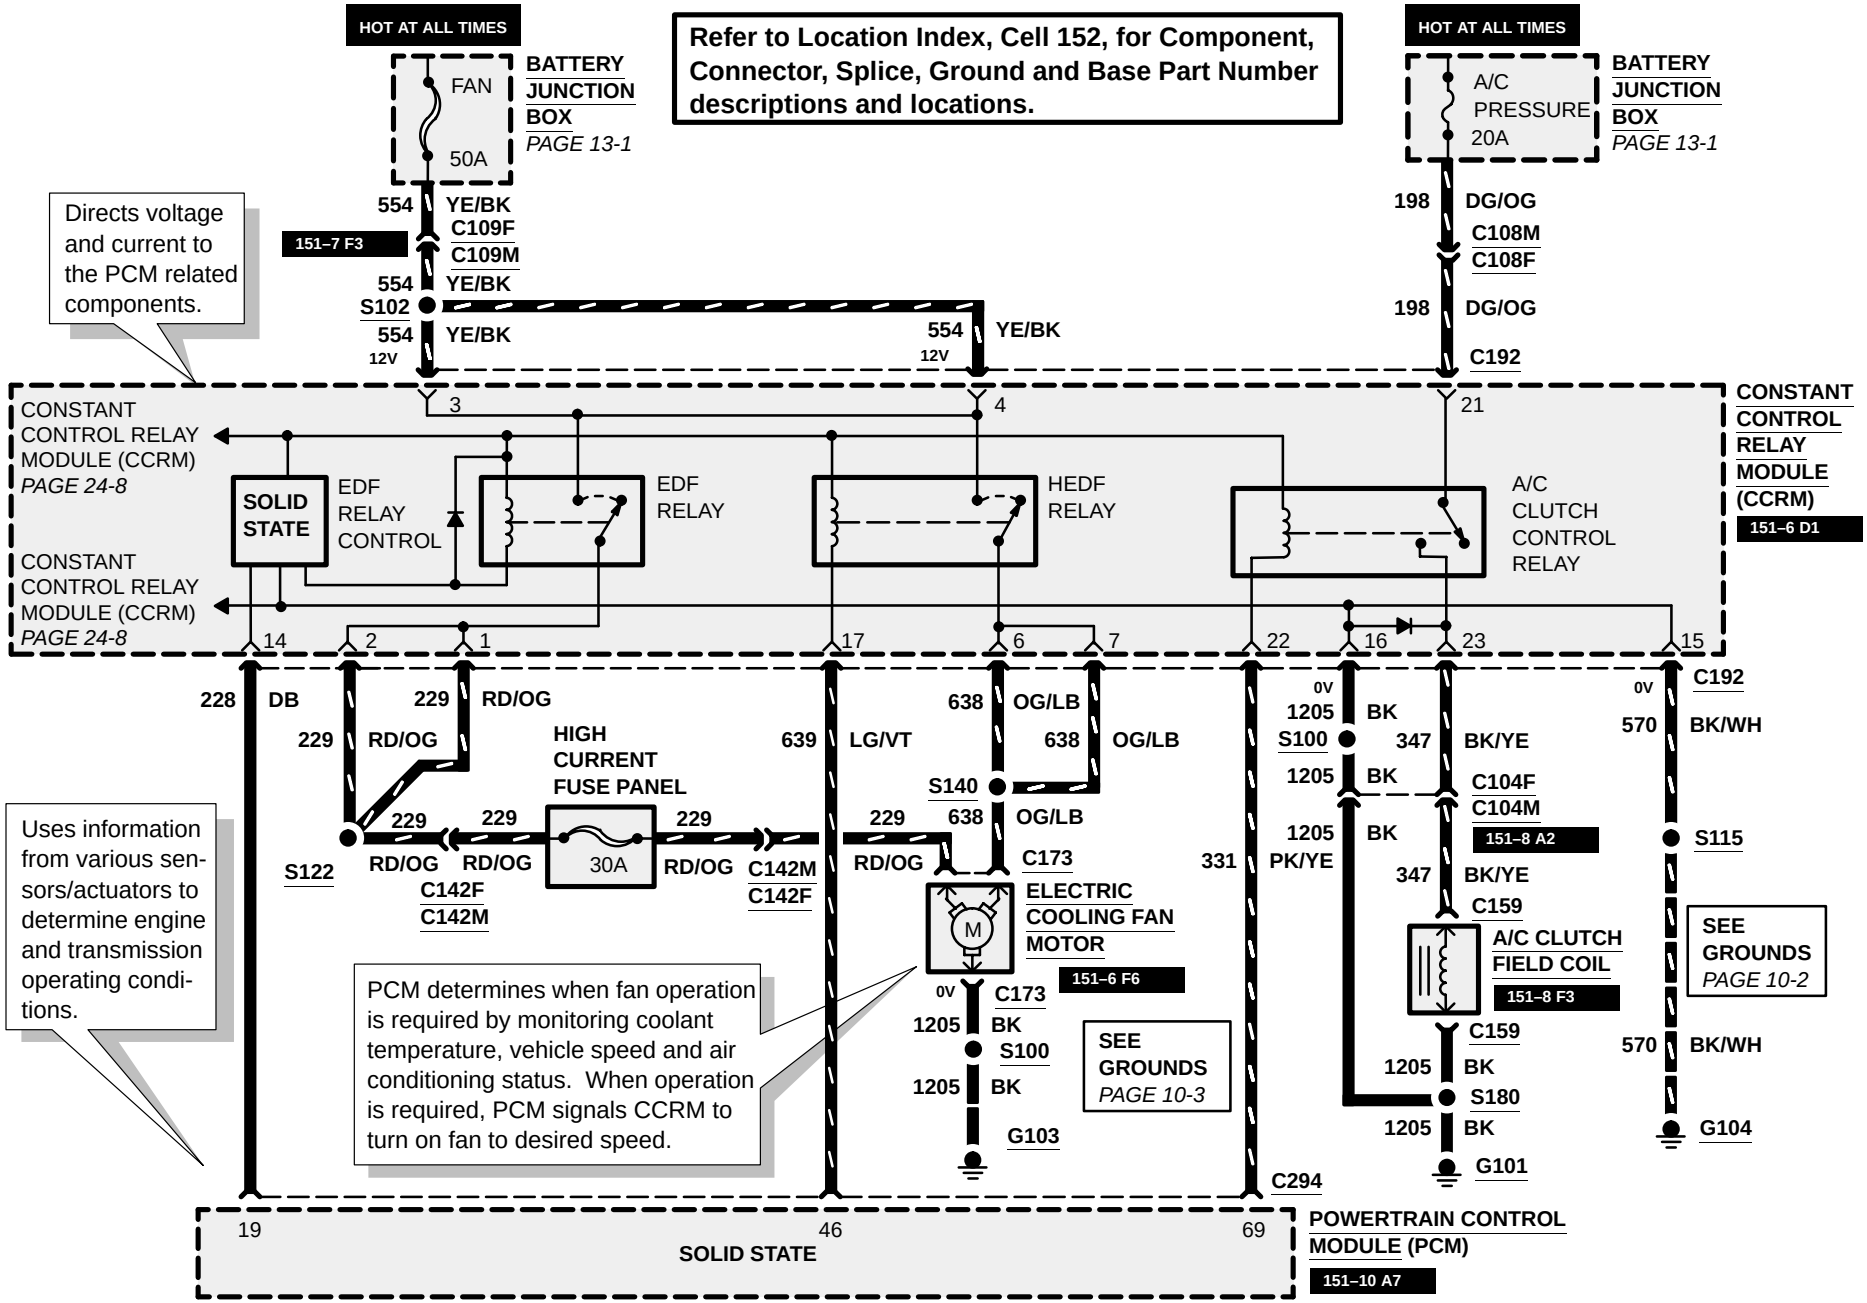
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-1
FAN
50A
554 YE/BK
C109F
C109M
554 YE/BK
S102
554 YE/BK
12V
554 YE/BK
12V
151–7 F3
HOT AT ALL TIMES
A/C PRESSURE
20A
BATTERY JUNCTION BOX
PAGE 13-1
198 DG/OG
C108M
C108F
198 DG/OG
C192
Directs voltage and current to the PCM related components.
CONSTANT CONTROL RELAY MODULE (CCRM)
PAGE 24-8
SOLID STATE
EDF RELAY CONTROL
EDF RELAY
HEDF RELAY
A/C CLUTCH CONTROL RELAY
CONSTANT CONTROL RELAY MODULE (CCRM)
151–6 D1
3
4
21
14
2
1
17
6
7
22
16
23
15
228 DB
229 RD/OG
229 RD/OG
HIGH CURRENT FUSE PANEL
639 LG/VT
638 OG/LB
638 OG/LB
S140
638 OG/LB
229
229
229
229
229
RD/OG
RD/OG
RD/OG
RD/OG
RD/OG
S122
C142F
C142M
30A
C142M
C142F
C173
331 PK/YE
0V
1205 BK
S100
1205 BK
347 BK/YE
C104F
C104M
151–8 A2
1205 BK
347 BK/YE
C159
A/C CLUTCH FIELD COIL
151–8 F3
C159
1205 BK
S180
1205 BK
G101
0V
570 BK/WH
S115
SEE GROUNDS
PAGE 10-2
570 BK/WH
G104
C192
Uses information from various sensors/actuators to determine engine and transmission operating conditions.
PCM determines when fan operation is required by monitoring coolant temperature, vehicle speed and air conditioning status. When operation is required, PCM signals CCRM to turn on fan to desired speed.
ELECTRIC COOLING FAN MOTOR
151–6 F6
0V
C173
1205 BK
S100
1205 BK
G103
SEE GROUNDS
PAGE 10-3
C294
19
46
69
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–10 A7