C114

12A581

P69
Coil On Plug (COP)
4 (12029)

F02109

Pin	Circuit	Circuit Function
1	1030 (DG/VT)	Coil On Plug (COP) 4 (12029), control
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C115

12A581

P70
Coil On Plug (COP)
5 (12029)

F02109

Pin	Circuit	Circuit Function
1	1021 (LG/YE)	Coil On Plug (COP) 5 (12029), control
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C116

12A581

P71
Coil On Plug (COP)
6 (12029)

F02109

Pin	Circuit	Circuit Function
1	1025 (OG/YE)	Coil On Plug (COP) 6 (12029), control
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C117

12A581

P72
Coil On Plug (COP)
7 (12029)

F02109

Pin	Circuit	Circuit Function
1	1027 (PK/LB)	Coil On Plug (COP) 7 (12029), control
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C118

12A581

P73
Coil On Plug (COP)
8 (12029)

F02109

Pin	Circuit	Circuit Function
1	1029 (WH/RD)	Coil On Plug (COP) 8 (12029), control
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C120

12A581

Y69
Power steering
valve solenoid
(3783)

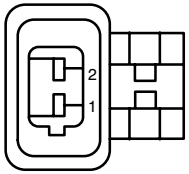

F02117

Pin	Circuit	Circuit Function
1	115 (LG/BK)	Vehicle Dynamic Module (VDM), to, Power steering valve solenoid (3783)
2	114 (LB/YE)	Vehicle Dynamic Module (VDM), to, Power steering valve solenoid (3783)