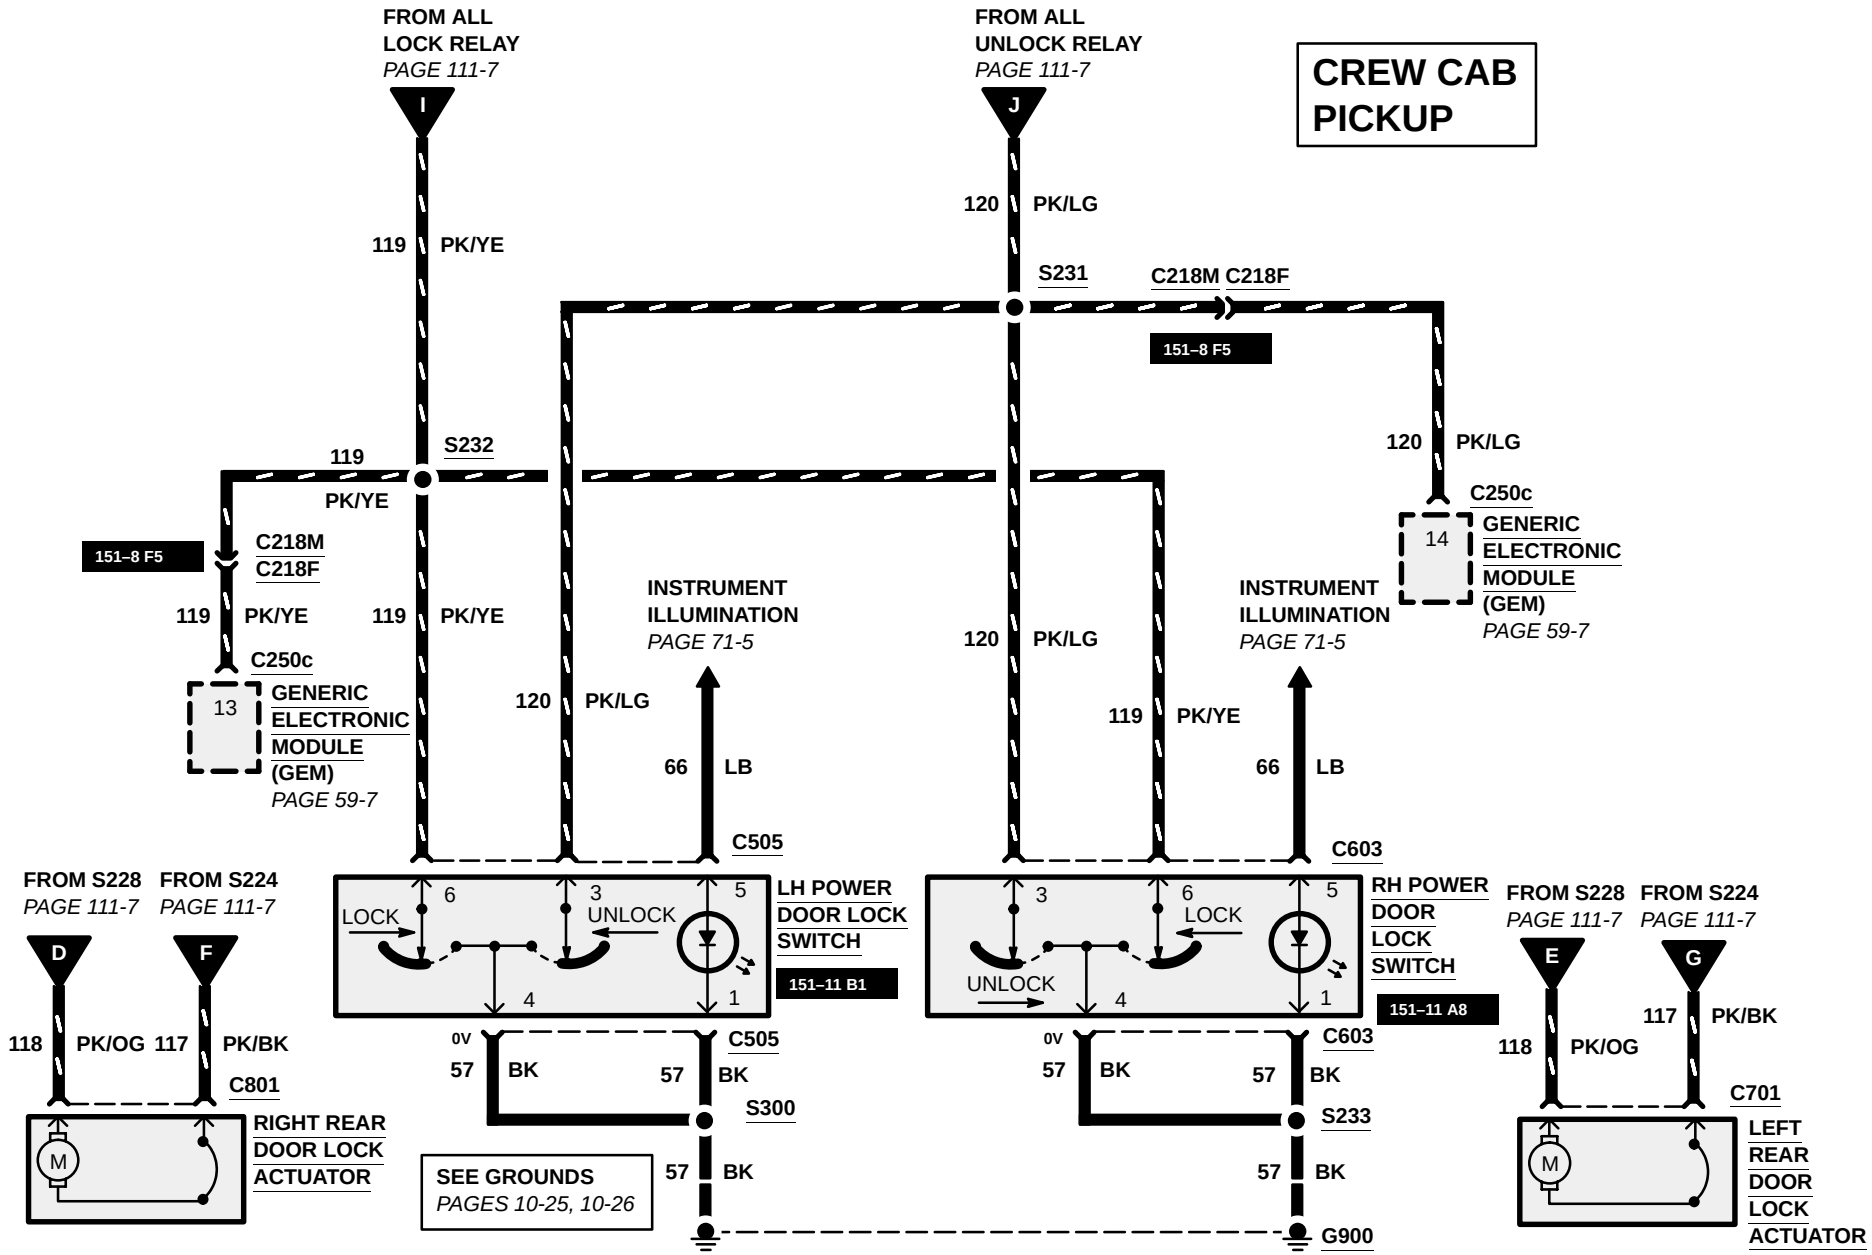
FROM ALL LOCK RELAY
PAGE 111-7
FROM ALL UNLOCK RELAY
PAGE 111-7
CREW CAB PICKUP
I
J
119 PK/YE
120 PK/LG
S231
C218M C218F
151–8 F5
S232
119 PK/YE
120 PK/LG
C250c
14
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-7
151–8 F5
C218M C218F
119 PK/YE
119 PK/YE
C250c
13
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-7
INSTRUMENT ILLUMINATION
PAGE 71-5
120 PK/LG
66 LB
C505
INSTRUMENT ILLUMINATION
PAGE 71-5
120 PK/LG
119 PK/YE
66 LB
C603
FROM S228
PAGE 111-7
FROM S224
PAGE 111-7
D
F
LOCK
UNLOCK
6
3
5
4
1
LH POWER DOOR LOCK SWITCH
151–11 B1
RH POWER DOOR LOCK SWITCH
151–11 A8
FROM S228
PAGE 111-7
FROM S224
PAGE 111-7
E
G
118 PK/OG
117 PK/BK
C801
RIGHT REAR DOOR LOCK ACTUATOR
0V
57 BK
C505
S300
57 BK
0V
57 BK
C603
S233
57 BK
118 PK/OG
117 PK/BK
C701
LEFT REAR DOOR LOCK ACTUATOR
SEE GROUNDS
PAGES 10-25, 10-26
G900