Early build

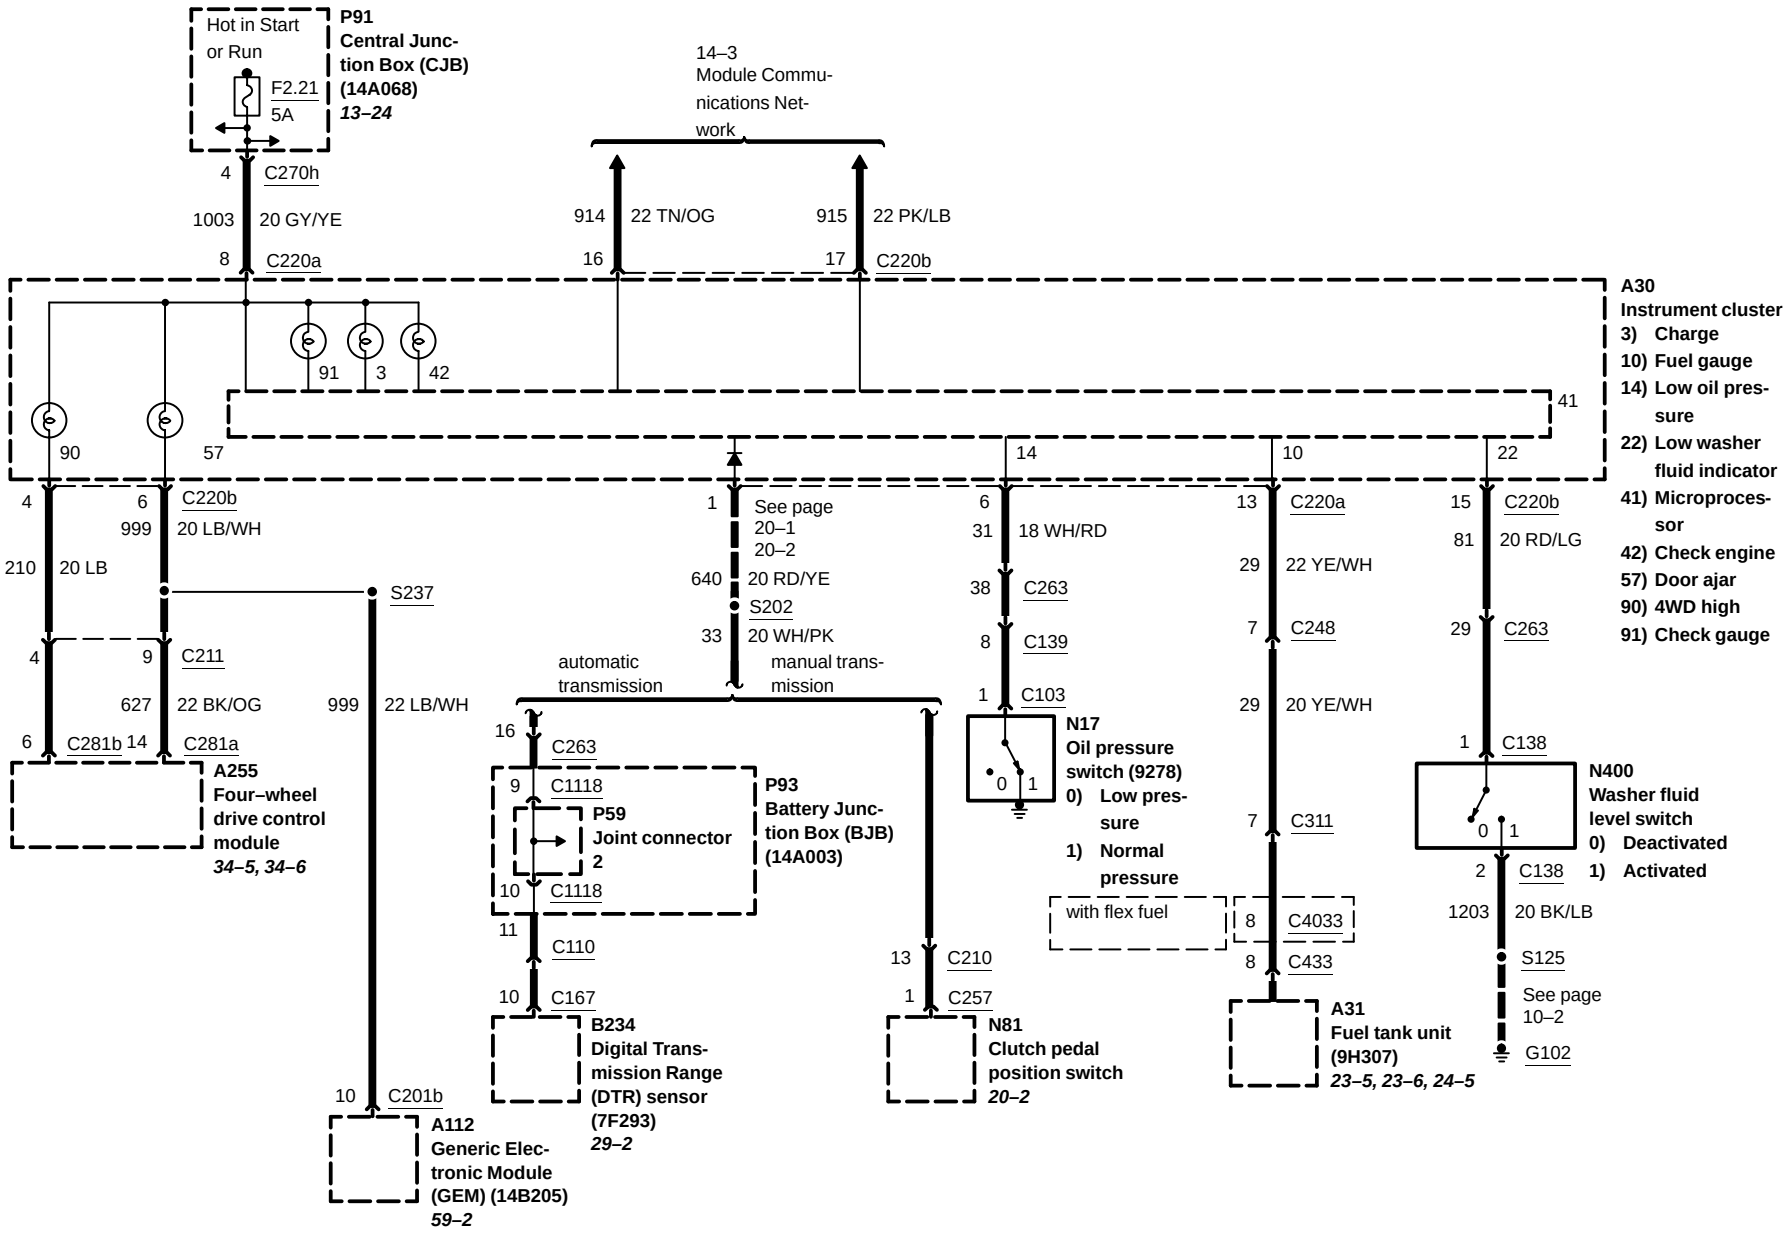
Hot in Start or Run
F2.21
5A
P91
Central Junction Box (CJB) (14A068)
13–24
14–3
Module Communications Network
4
C270h
1003
20 GY/YE
8
C220a
914
22 TN/OG
16
915
22 PK/LB
17
C220b
A30
Instrument cluster
3) Charge
10) Fuel gauge
14) Low oil pressure
22) Low washer fluid indicator
41) Microprocessor
42) Check engine
57) Door ajar
90) 4WD high
91) Check gauge
91
3
42
90
57
41
14
10
22
4
6
C220b
999
20 LB/WH
210
20 LB
1
See page 20–1 20–2
640
20 RD/YE
S202
33
20 WH/PK
6
31
18 WH/RD
38
C263
8
C139
1
C103
13
C220a
29
22 YE/WH
7
C248
29
20 YE/WH
15
C220b
81
20 RD/LG
29
C263
1
C138
automatic transmission
manual transmission
S237
4
9
C211
627
22 BK/OG
999
22 LB/WH
6
C281b
14
C281a
A255
Four–wheel drive control module
34–5, 34–6
16
C263
9
C1118
P59
Joint connector 2
10
C1118
11
C110
10
C167
P93
Battery Junction Box (BJB) (14A003)
B234
Digital Transmission Range (DTR) sensor (7F293)
29–2
10
C201b
A112
Generic Electronic Module (GEM) (14B205)
59–2
N17
Oil pressure switch (9278)
0) Low pressure
1) Normal pressure
0
1
with flex fuel
13
C210
1
C257
N81
Clutch pedal position switch
20–2
7
C311
8
C4033
8
C433
A31
Fuel tank unit (9H307)
23–5, 23–6, 24–5
N400
Washer fluid level switch
0) Deactivated
1) Activated
0
1
2
C138
1203
20 BK/LB
S125
See page 10–2
G102