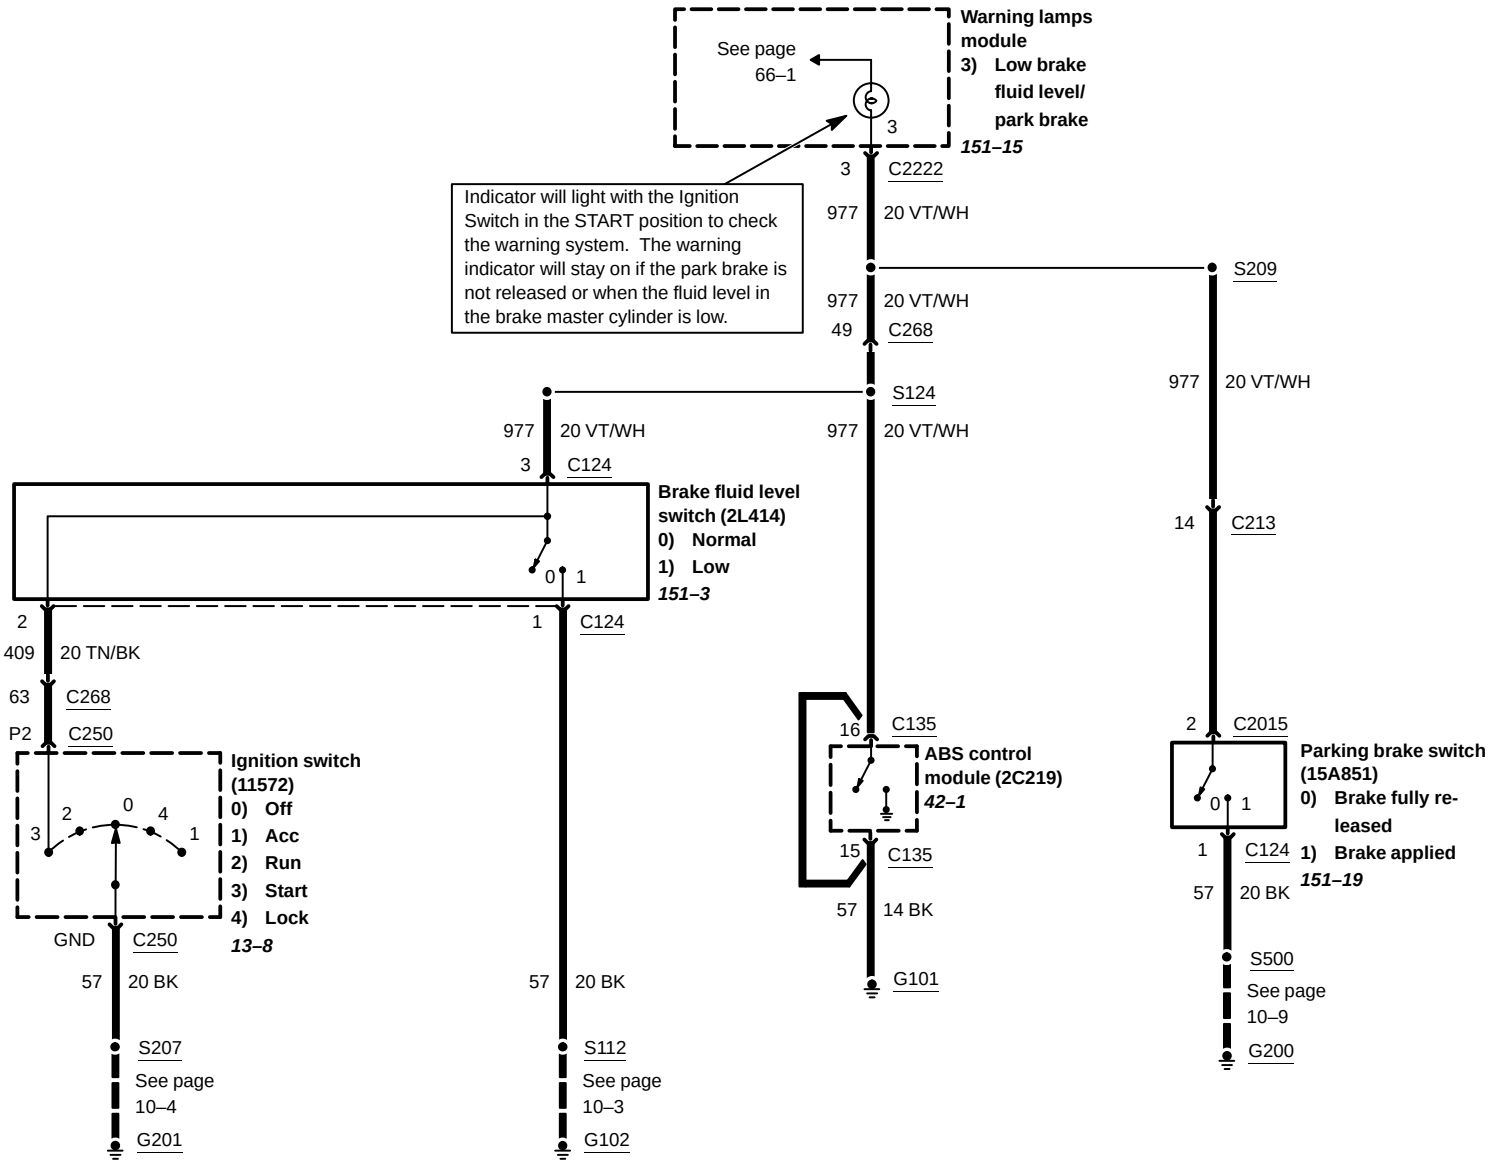
See page 66–1
Warning lamps module
3) Low brake fluid level/ park brake
151–15
3
C2222
977 20 VT/WH
Indicator will light with the Ignition Switch in the START position to check the warning system. The warning indicator will stay on if the park brake is not released or when the fluid level in the brake master cylinder is low.
S209
977 20 VT/WH
49 C268
S124
977 20 VT/WH
977 20 VT/WH
977 20 VT/WH
3 C124
14 C213
Brake fluid level switch (2L414)
0) Normal
1) Low
151–3
0 1
2
409 20 TN/BK
1 C124
63 C268
P2 C250
16 C135
ABS control module (2C219)
42–1
2 C2015
Parking brake switch (15A851)
0) Brake fully released
1) Brake applied
151–19
0 1
Ignition switch (11572)
0) Off
1) Acc
2) Run
3) Start
4) Lock
13–8
3 2 0 4 1
15 C135
1 C124
57 14 BK
57 20 BK
GND C250
57 20 BK
57 20 BK
G101
S500
See page 10–9
G200
S207
See page 10–4
G201
S112
See page 10–3
G102