## Marauder

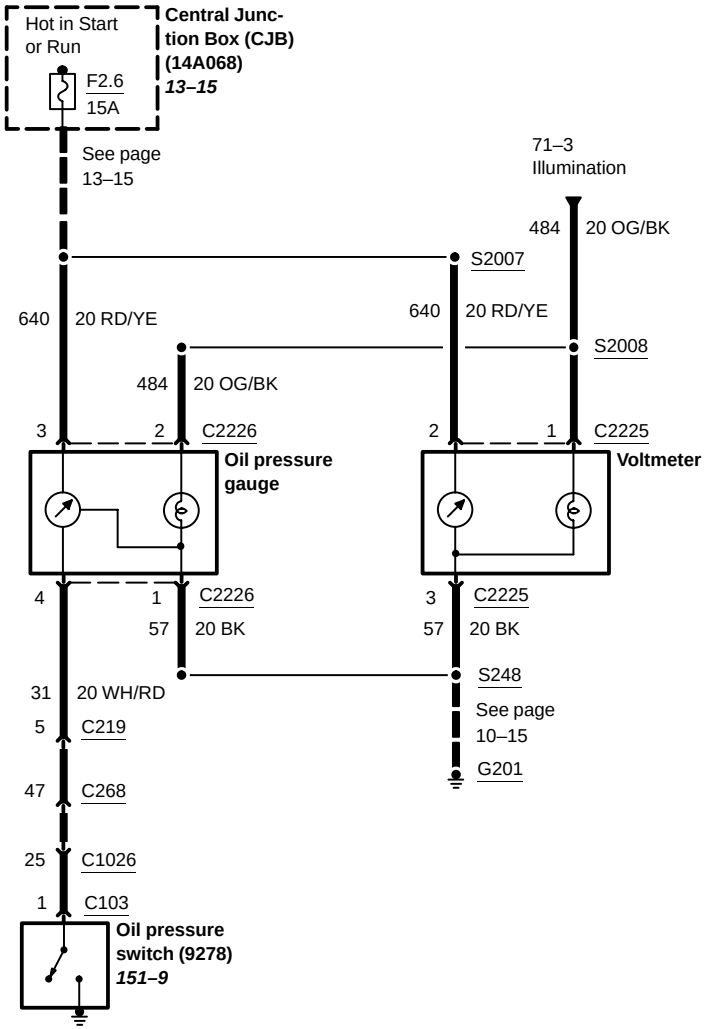
Hot in Start or Run
F2.6
15A
Central Junction Box (CJB) (14A068) 13–15
See page 13–15
71–3 Illumination
484 20 OG/BK
S2007
640 20 RD/YE
640 20 RD/YE
S2008
484 20 OG/BK
3
2 C2226
Oil pressure gauge
2
1 C2225
Voltmeter
4
1 C2226
57 20 BK
3 C2225
57 20 BK
S248
31 20 WH/RD
5 C219
See page 10–15
G201
47 C268
25 C1026
1 C103
Oil pressure switch (9278) 151–9

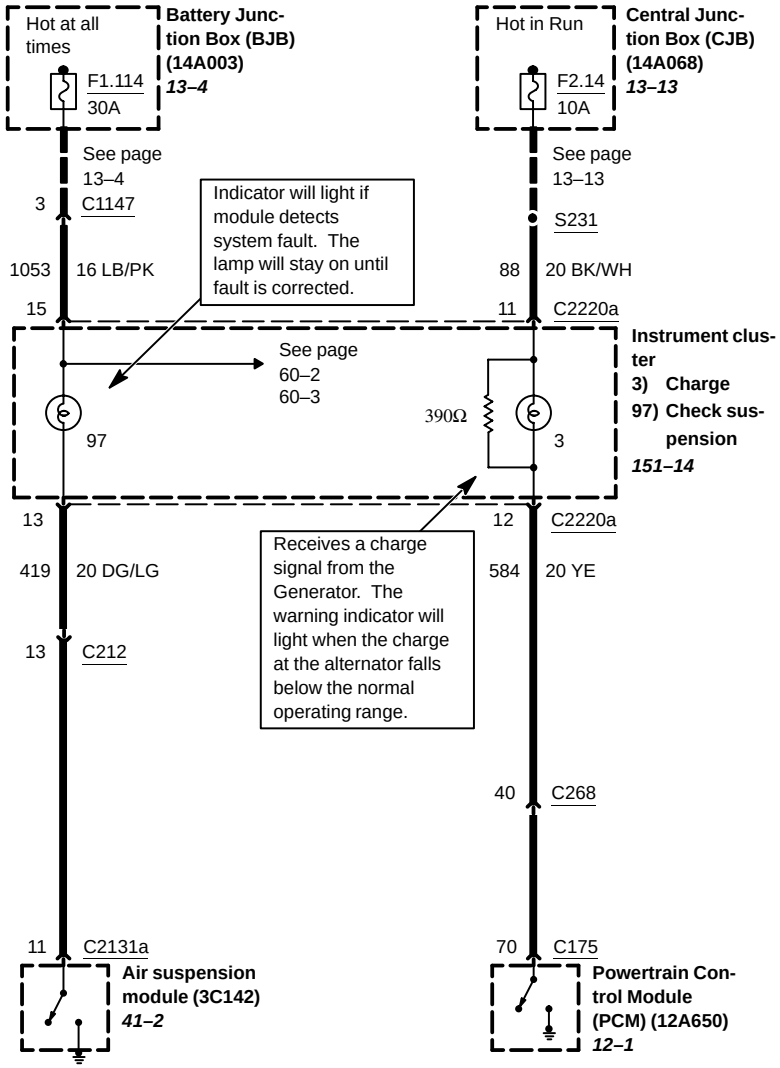
Hot at all times
F1.114
30A
Battery Junction Box (BJB) (14A003) 13–4
Hot in Run
F2.14
10A
Central Junction Box (CJB) (14A068) 13–13
See page 13–4
See page 13–13
3 C1147
S231
Indicator will light if module detects system fault. The lamp will stay on until fault is corrected.
1053 16 LB/PK
88 20 BK/WH
15
11 C2220a
Instrument cluster
3) Charge
97) Check suspension
151–14
See page 60–2 60–3
390Ω
97
3
13
12 C2220a
Receives a charge signal from the Generator. The warning indicator will light when the charge at the alternator falls below the normal operating range.
419 20 DG/LG
584 20 YE
13 C212
40 C268
11 C2131a
70 C175
Air suspension module (3C142) 41–2
Powertrain Control Module (PCM) (12A650) 12–1