C1120

12B637

B43
Crankshaft position sensor (6C315)

F02109

Pin	Circuit	Circuit function
1	350 (GY)	Crankshaft position sensor (6C315) –
2	349 (DB)	Crankshaft position sensor (6C315) +

C1121

12B637

N96
Power steering pressure switch

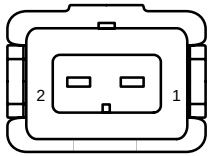

F02089

Pin	Circuit	Circuit function
1	330 (YE/LG)	Power steering pressure switch, input
2	359 (GY/RD)	signal, return

C1126

14290

E32
Side lamp, right front (13411)

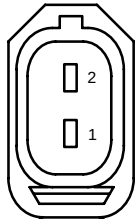

F02108

Pin	Circuit	Circuit function
1	14 (BN)	Power, Exterior lamps
2	57 (BK)	Ground

C1127

14290

E40
Side lamp, left front (13411)

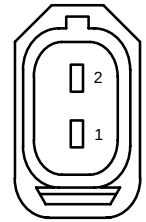

F02108

Pin	Circuit	Circuit function
1	14 (BN)	Power, Exterior lamps
2	57 (BK)	Ground

C1134

12B637

T1
Ignition coil (12029)

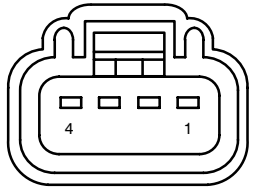

F04221

Pin	Circuit	Circuit function
1	95 (TN/WH)	Ignition coil (12029)
2	97 (TN/LG)	Ignition coil (12029)
3	96 (TN/OG)	Ignition coil (12029)
4	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C1136

12B637

T1
Ignition coil (12029)

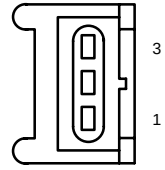

F03014

Pin	Circuit	Circuit function
1	95 (TN/WH)	Ignition coil (12029)
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
3	96 (TN/OG)	Ignition coil (12029)