-8

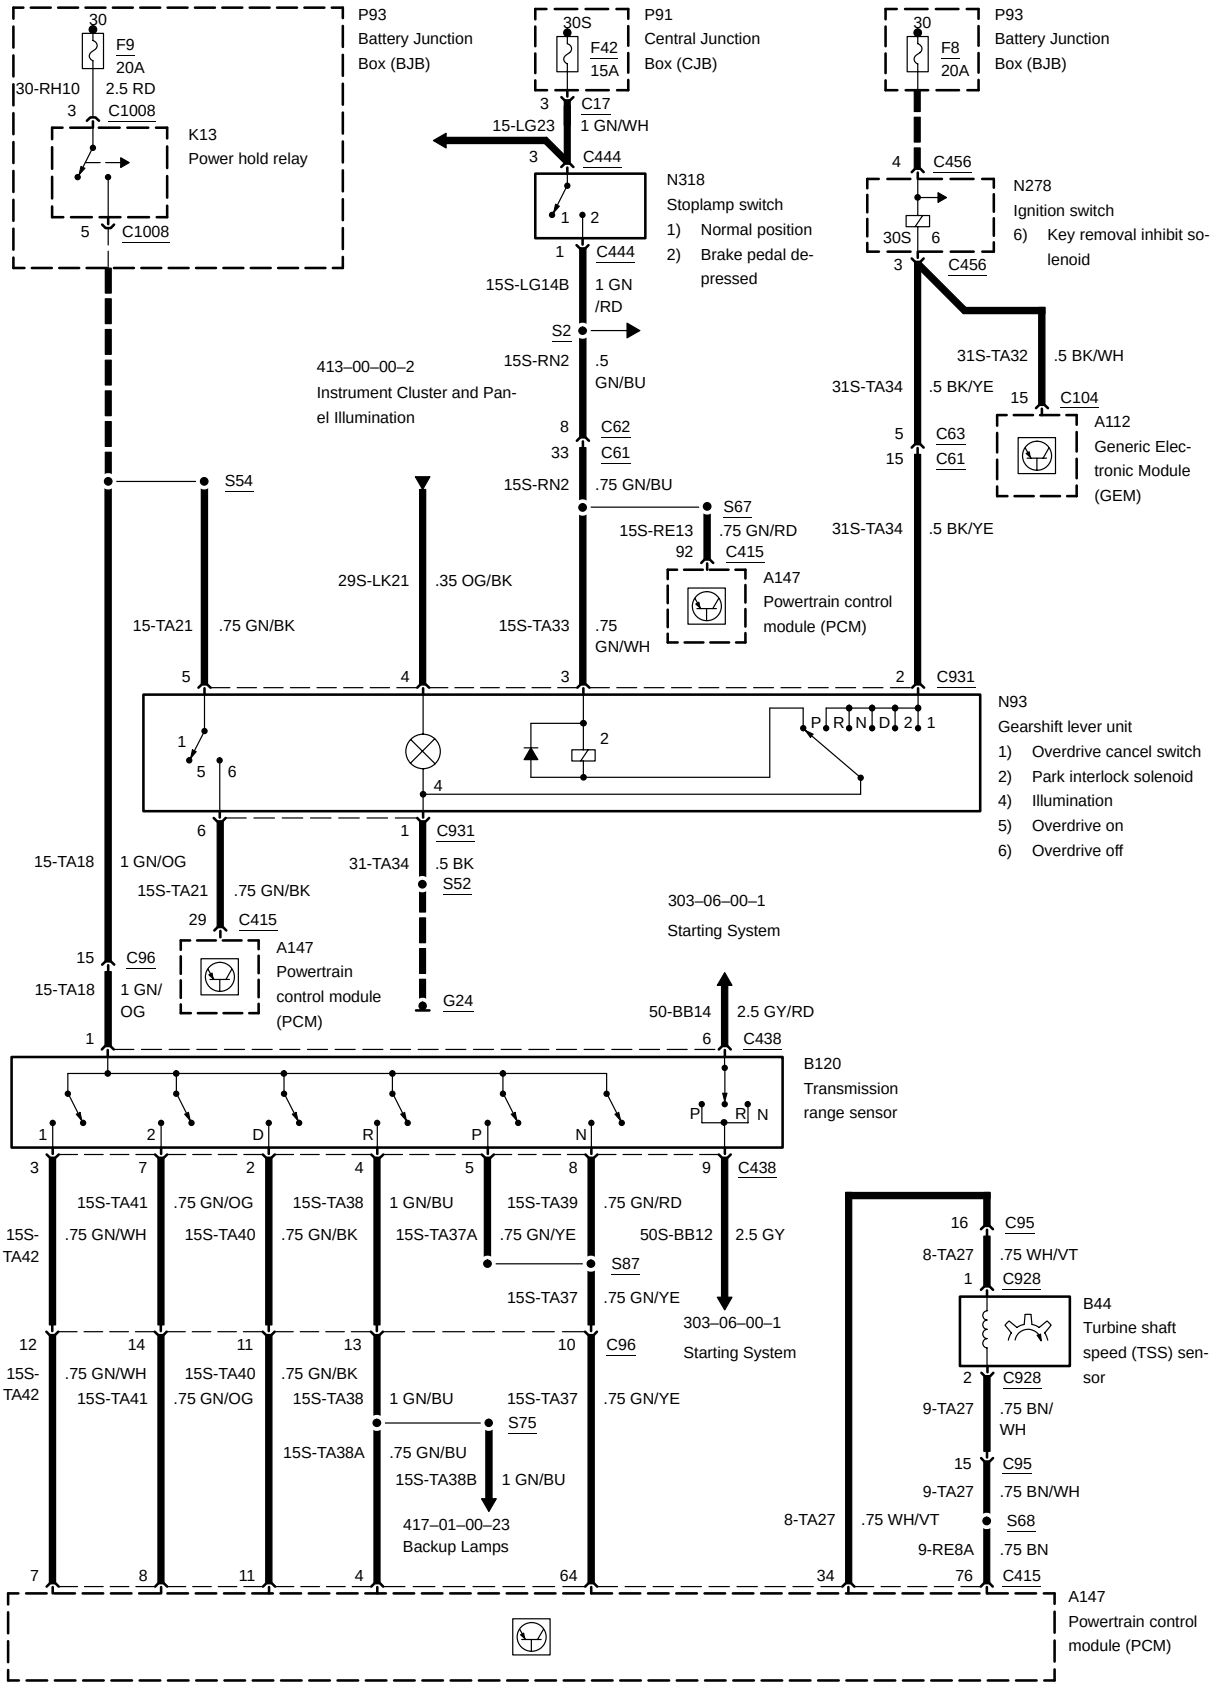
P93
Battery Junction
Box (BJB)
F9
20A
30-RH10
2.5 RD
C1008
K13
Power hold relay
C1008
P91
Central Junction
Box (CJB)
F42
15A
C17
15-LG23
1 GN/WH
C444
N318
Stoplamp switch
1) Normal position
2) Brake pedal de-
pressed
C444
15S-LG14B
1 GN
/RD
S2
P93
Battery Junction
Box (BJB)
F8
20A
C456
N278
Ignition switch
6) Key removal inhibit so-
lenoid
C456
31S-TA32
.5 BK/WH
31S-TA34
.5 BK/YE
C104
A112
Generic Elec-
tronic Module
(GEM)
C63
C61
413–00–00–2
Instrument Cluster and Pan-
el Illumination
15S-RN2
.5
GN/BU
C62
C61
15S-RN2
.75 GN/BU
S67
15S-RE13
.75 GN/RD
C415
A147
Powertrain control
module (PCM)
31S-TA34
.5 BK/YE
S54
29S-LK21
.35 OG/BK
15-TA21
.75 GN/BK
15S-TA33
.75
GN/WH
C931
N93
Gearshift lever unit
1) Overdrive cancel switch
2) Park interlock solenoid
4) Illumination
5) Overdrive on
6) Overdrive off
15-TA18
1 GN/OG
31-TA34
.5 BK
S52
15S-TA21
.75 GN/BK
C415
C96
15-TA18
1 GN/
OG
A147
Powertrain
control module
(PCM)
G24
303–06–00–1
Starting System
50-BB14
2.5 GY/RD
C438
B120
Transmission
range sensor
15S-
TA42
15S-TA41
.75 GN/WH
15S-TA40
.75 GN/OG
15S-TA38
.75 GN/BK
1 GN/BU
15S-TA37A
15S-TA39
.75 GN/YE
.75 GN/RD
50S-BB12
2.5 GY
S87
15S-TA37
.75 GN/YE
303–06–00–1
Starting System
C96
15S-TA38
1 GN/BU
S75
15S-TA38A
.75 GN/BU
15S-TA38B
1 GN/BU
417–01–00–23
Backup Lamps
C95
.75 WH/VT
C928
B44
Turbine shaft
speed (TSS) sen-
sor
C928
9-TA27
.75 BN/
WH
C95
9-TA27
.75 BN/WH
S68
.75 BN
C415
A147
Powertrain control
module (PCM)