C328 (GY)

14A005

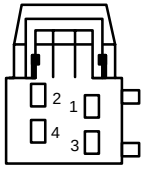

F04140

(1) 5-EG13 (BU/BK)
(2) 4-EG12 (GY/WH)
(3) 4-EG13 (GY/OG)
(4) 5-EG12 (BU/OG)

14A005

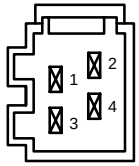

F04138

(1) 5-EG13A (BU/BK)
(2) 4-EG12A (GY/WH)
(3) 4-EG13A (GY/OG)
(4) 5-EG12 (BU/OG)

C329

14A699

Heated seat module, passenger side front

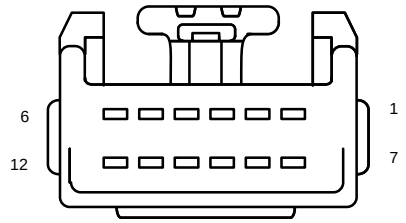

F12075

Pin	Circuit	Circuit function
1	31-HC22 (BK)	Ground
2	–	not used
3	9-HC24 (BN/RD)	Sensor signal return (reference/ground)
4	8-HC24 (WH/RD)	Sensor signal
5	20-HC22 (PK/YE)	Voltage, hot in run only
6	32-HC20 (WH/VT)	Switched between: Battery voltage, Ground or Open
7	32-HC19 (WH/BK)	Switched between: Battery voltage, Ground or Open
8	8-HC18 (WH/GN)	Sensor signal
9	33-HC18 (YE/GN)	Switched between: Battery voltage, Ground or Open
10	32-HC18 (WH/GN)	Switched between: Battery voltage, Ground or Open
11	10-HC18 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
12	30-HC22 (RD)	Voltage supplied at all times (not overload protected)