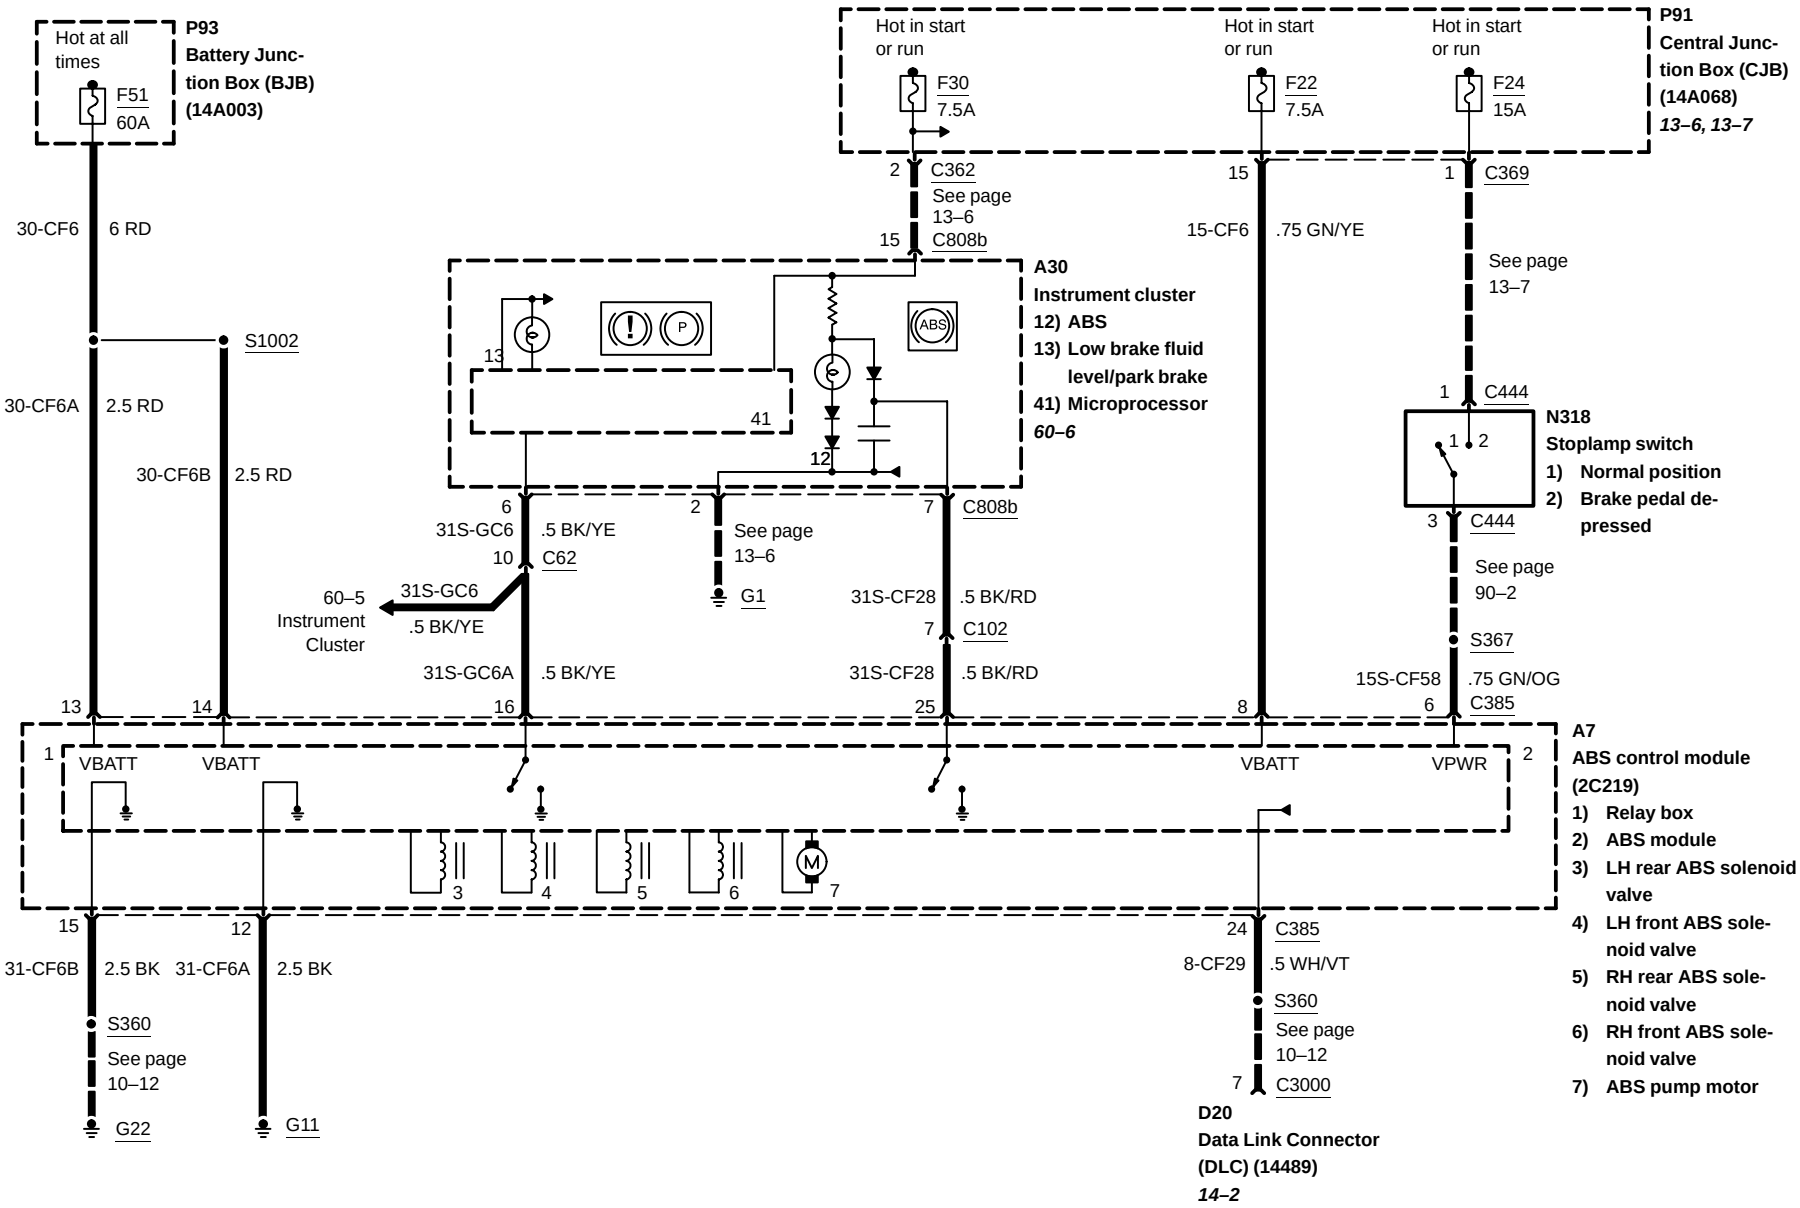
Hot at all times
F51
60A
P93
Battery Junction Box (BJB)
(14A003)
Hot in start or run
F30
7.5A
Hot in start or run
F22
7.5A
Hot in start or run
F24
15A
P91
Central Junction Box (CJB)
(14A068)
13–6, 13–7
2
C362
See page 13–6
15
C808b
15
C808b
1
C369
30-CF6
6 RD
15-CF6
.75 GN/YE
See page 13–7
S1002
30-CF6A
2.5 RD
30-CF6B
2.5 RD
A30
Instrument cluster
12) ABS
13) Low brake fluid level/park brake
41) Microprocessor
60–6
13
41
12
1
C444
N318
Stoplamp switch
1) Normal position
2) Brake pedal depressed
3
C444
6
31S-GC6
.5 BK/YE
10
C62
2
See page 13–6
G1
7
C808b
31S-CF28
.5 BK/RD
7
C102
60–5
Instrument Cluster
31S-GC6
.5 BK/YE
See page 90–2
S367
31S-GC6A
.5 BK/YE
31S-CF28
.5 BK/RD
15S-CF58
.75 GN/OG
6
C385
13
14
16
25
8
A7
ABS control module
(2C219)
1) Relay box
2) ABS module
3) LH rear ABS solenoid valve
4) LH front ABS solenoid valve
5) RH rear ABS solenoid valve
6) RH front ABS solenoid valve
7) ABS pump motor
1
VBATT
VBATT
VBATT
VPWR
2
3
4
5
6
7
15
31-CF6B
2.5 BK
S360
See page 10–12
G22
12
31-CF6A
2.5 BK
G11
24
C385
8-CF29
.5 WH/VT
S360
See page 10–12
7
C3000
D20
Data Link Connector (DLC) (14489)
14–2