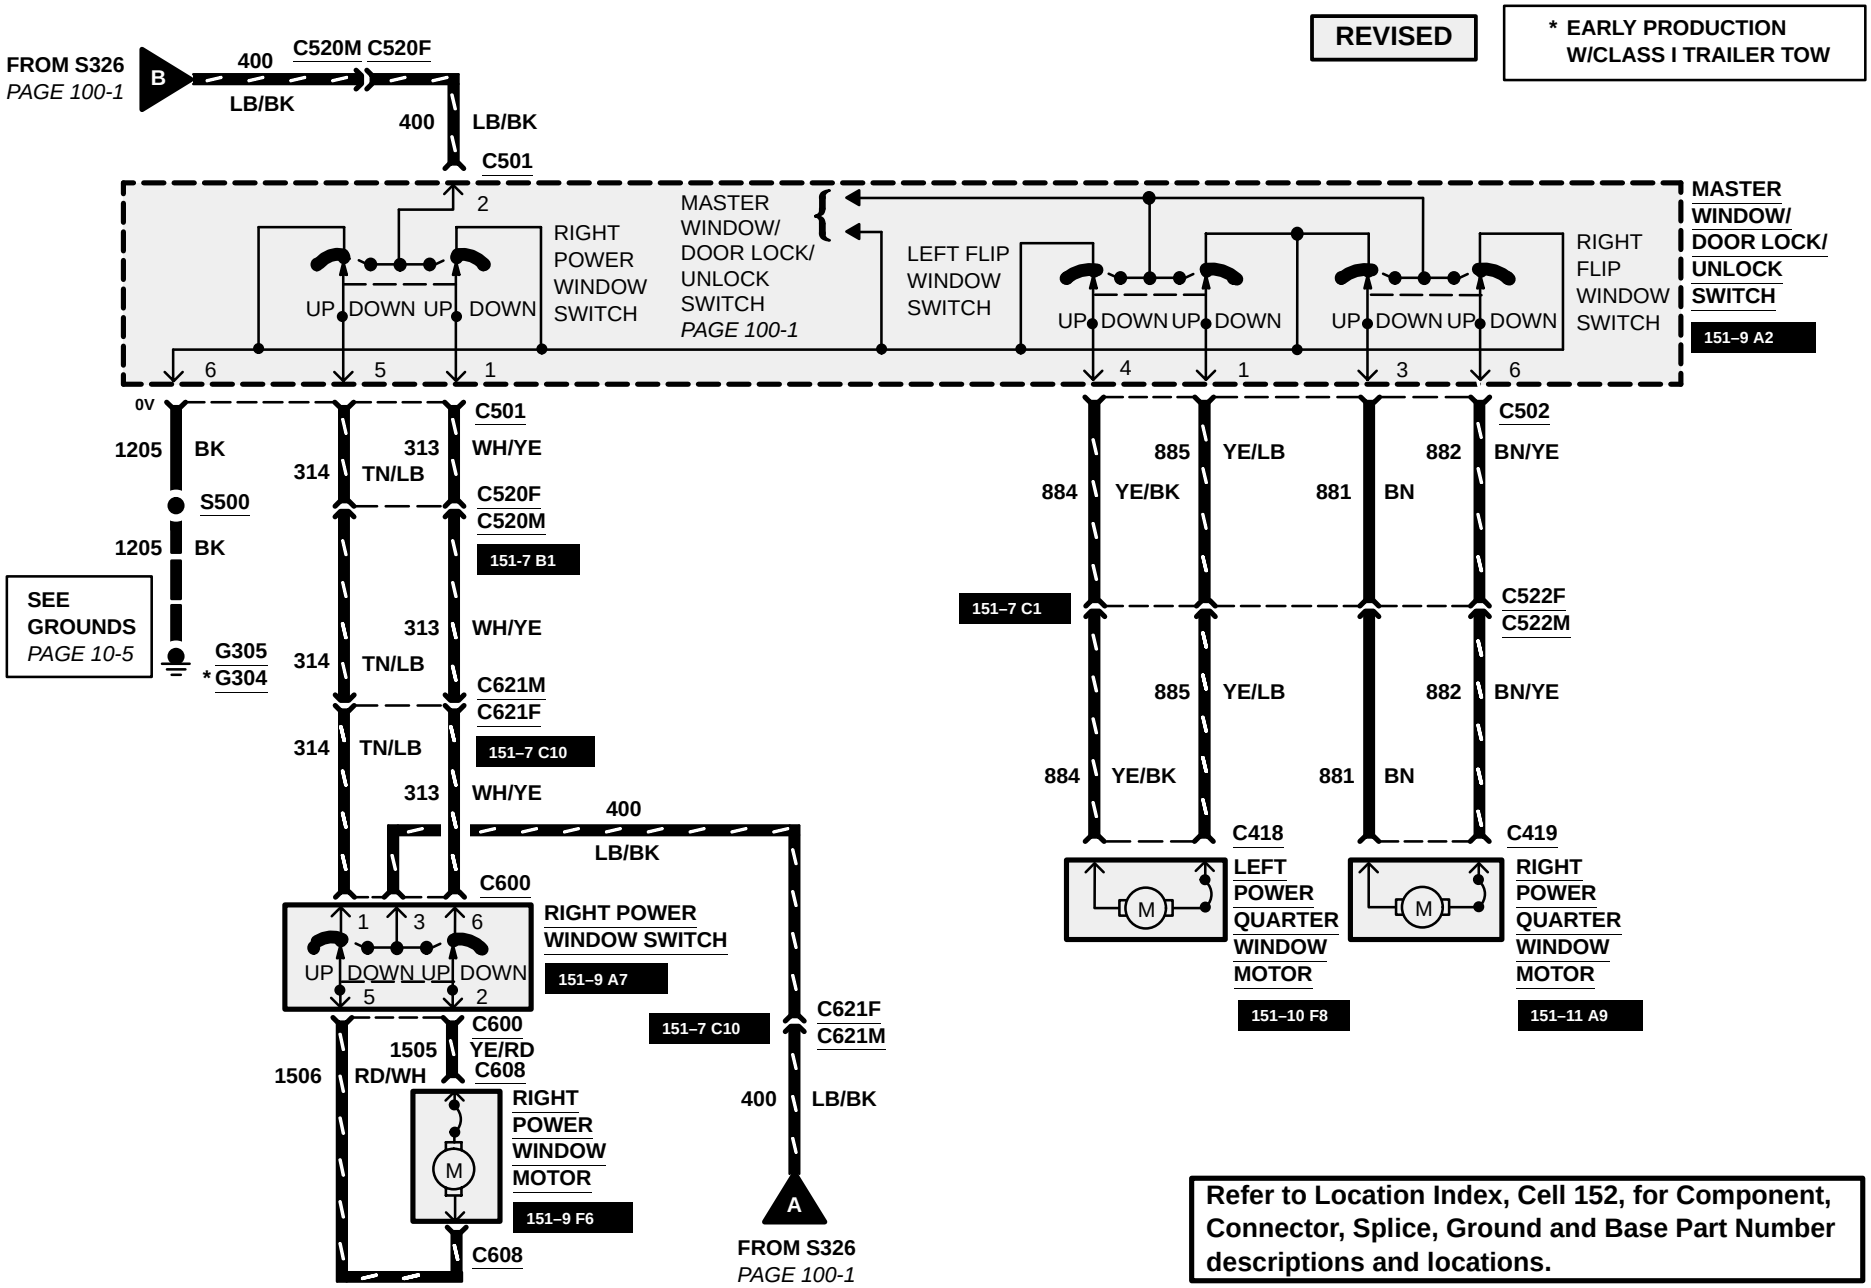
REVISED
* EARLY PRODUCTION W/CLASS I TRAILER TOW
FROM S326
PAGE 100-1
B
400
C520M C520F
LB/BK
400
LB/BK
C501
2
RIGHT POWER WINDOW SWITCH
UP DOWN UP DOWN
MASTER WINDOW/ DOOR LOCK/ UNLOCK SWITCH
PAGE 100-1
LEFT FLIP WINDOW SWITCH
RIGHT FLIP WINDOW SWITCH
MASTER WINDOW/ DOOR LOCK/ UNLOCK SWITCH
151–9 A2
6 5 1
4 1 3 6
0V
1205 BK
S500
1205 BK
SEE GROUNDS PAGE 10-5
G305
*G304
C501
313 WH/YE
314 TN/LB
C520F
C520M
151-7 B1
313 WH/YE
314 TN/LB
C621M
C621F
151–7 C10
314 TN/LB
313 WH/YE
400
LB/BK
C600
RIGHT POWER WINDOW SWITCH
151–9 A7
1 3 6
UP DOWN UP DOWN
5 2
C600
1505 YE/RD
1506 RD/WH
C608
RIGHT POWER WINDOW MOTOR
151–9 F6
C608
151–7 C10
C621F
C621M
400 LB/BK
A
FROM S326
PAGE 100-1
151–7 C1
884 YE/BK
885 YE/LB
881 BN
882 BN/YE
C502
C522F
C522M
C418
C419
LEFT POWER QUARTER WINDOW MOTOR
151–10 F8
RIGHT POWER QUARTER WINDOW MOTOR
151–11 A9
M
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.