C500 (GN)

14631

Key pad switch assembly

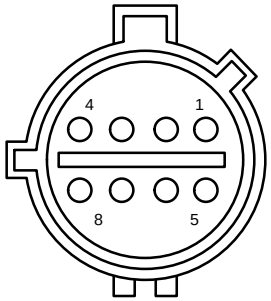

F08048

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	57 (BK)	Ground
4	57 (BK)	Ground
5	123 (RD)	Key pad common
6	122 (YE)	Key pad common
7	66 (LB)	Key pad illumination
8	78 (LB/YE)	Key pad common

C504a (BU)

14631

Master window adjust switch (14529)

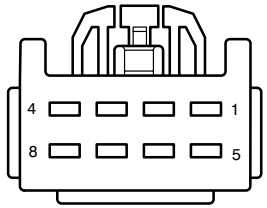

F08167

Pin	Circuit	Circuit function
1	–	not used
2	320 (RD/BK)	Window switch, feed, right rear, Down
3	1505 (YE/RD)	Window switch, feed, right front, Down
4	313 (WH/YE)	Window switch, feed, right front, Up
5	–	not used
6	992 (WH/BK)	Master window adjust switch (14529), feed, Up
7	991 (TN/LB)	Master window adjust switch (14529), feed, Down
8	769 (GY/LB)	One–touch down power relay - fused feed

C502 (GY)

14631

Lock cylinder switch, left

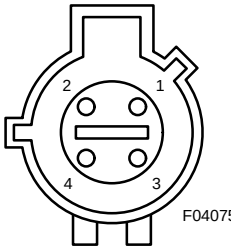

F04075

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	1088 (PK/WH)	Door unlock, input
3	–	not used
4	–	not used