C318a

14A005

A219
Cellular phone
handset

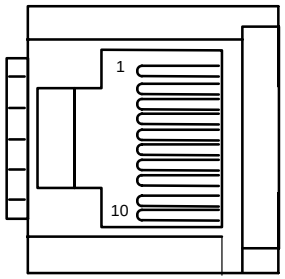

F10075

Pin	Circuit	Circuit function
1	10-MC10 (GY/BK)	Signal 2 (Y–direction, reverse, downward)
2	91-MC10 (BN/YE)	Ground
3	7-MC10 (YE/BK)	Voltage DC supplied at all times (sensor)
4	4-MC10 (GY/BK)	Data link, bus positive
5	–	not used
6	8-MC10 (WH/BK)	Sensor signal
7	31-MC10 (BK/RD)	Ground
8	1-MC10 (WH/BK)	Audio signal positive
9	2-MC10 (GY/BK)	Audio signal negative
10	9-MC10 (BN/YE)	Sensor signal return (reference/ground)

C318b

14A005

A219
Cellular phone
handset

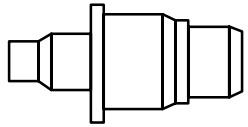

F01059

C319

13K702

R42
Cigar lighter, front (15055)

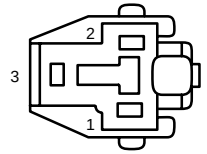

F03163

Pin	Circuit	Circuit function
1	29-HA6 (RD)	Voltage supplied at all times (overload protected)
2	31-HA6 (BK)	Ground
3	–	not used

C322 WH

14401

Y215
Brake shift interlock

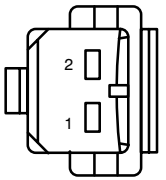

F02233

Pin	Circuit	Circuit function
1	31-TA33 (BK)	Ground
2	7S-TA33 (YE/VT)	Voltage DC supplied at all times (sensor), Switched