C3016

14A005

Power seat switch, left

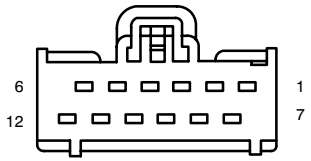

F12183

Pin	Circuit	Circuit function
1	979 (RD/LB)	Front height motor, Down
2	918 (GY)	Seat regulator feed, Forward
3	919 (GY/BK)	Seat regulator feed, Rearward
4	983 (RD/LG)	Rear height motor, Down
5	982 (YE/LG)	Rear height motor, Up
6	–	not used
7	57 (BK)	Ground
8	978 (YE/LB)	Front height motor, Up
9	980 (YE/WH)	Fwd/Rwd motor, Forward
10	981 (RD/WH)	Fwd/Rwd motor, Rearward
11	490 (RD)	Voltage supplied at all times (overload protected)
12	_	not used

C3028

14A005

CD changer (18D806)

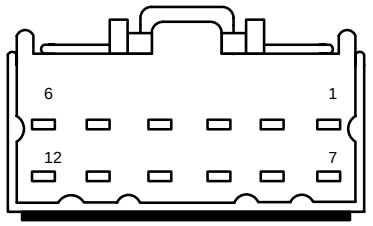

F12058

Pin	Circuit	Circuit function
1	832 (LB/PK)	Audio corporate protocol A
2	–	not used
3	694 (BK/LG)	Ground
4	–	not used
5	856 (VT)	Radio (18806), to CD changer, Left +
6	690 (GY)	Radio (18806), to CD changer, Right +
7	833 (TN)	Audio corporate protocol B
8	1068 (LG/BK)	Audio System ON (ASYSON)
9	828 (VT/LB)	Voltage supplied at all times (overload protected)
10	48	Shield
11	798 (LG/RD)	Radio (18806), to CD changer, Left –
12	799 (OG/BK)	Radio (18806), to CD changer, Right –

C3047

14A005

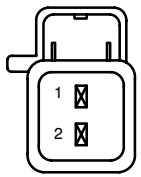

F02042

(1) 1259 (WH/YE)
(2) 1260 (BN/YE)

14A699

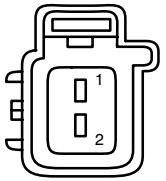

F02211

(1) 1259 (WH/YE)
(2) 1260 (BN/YE)