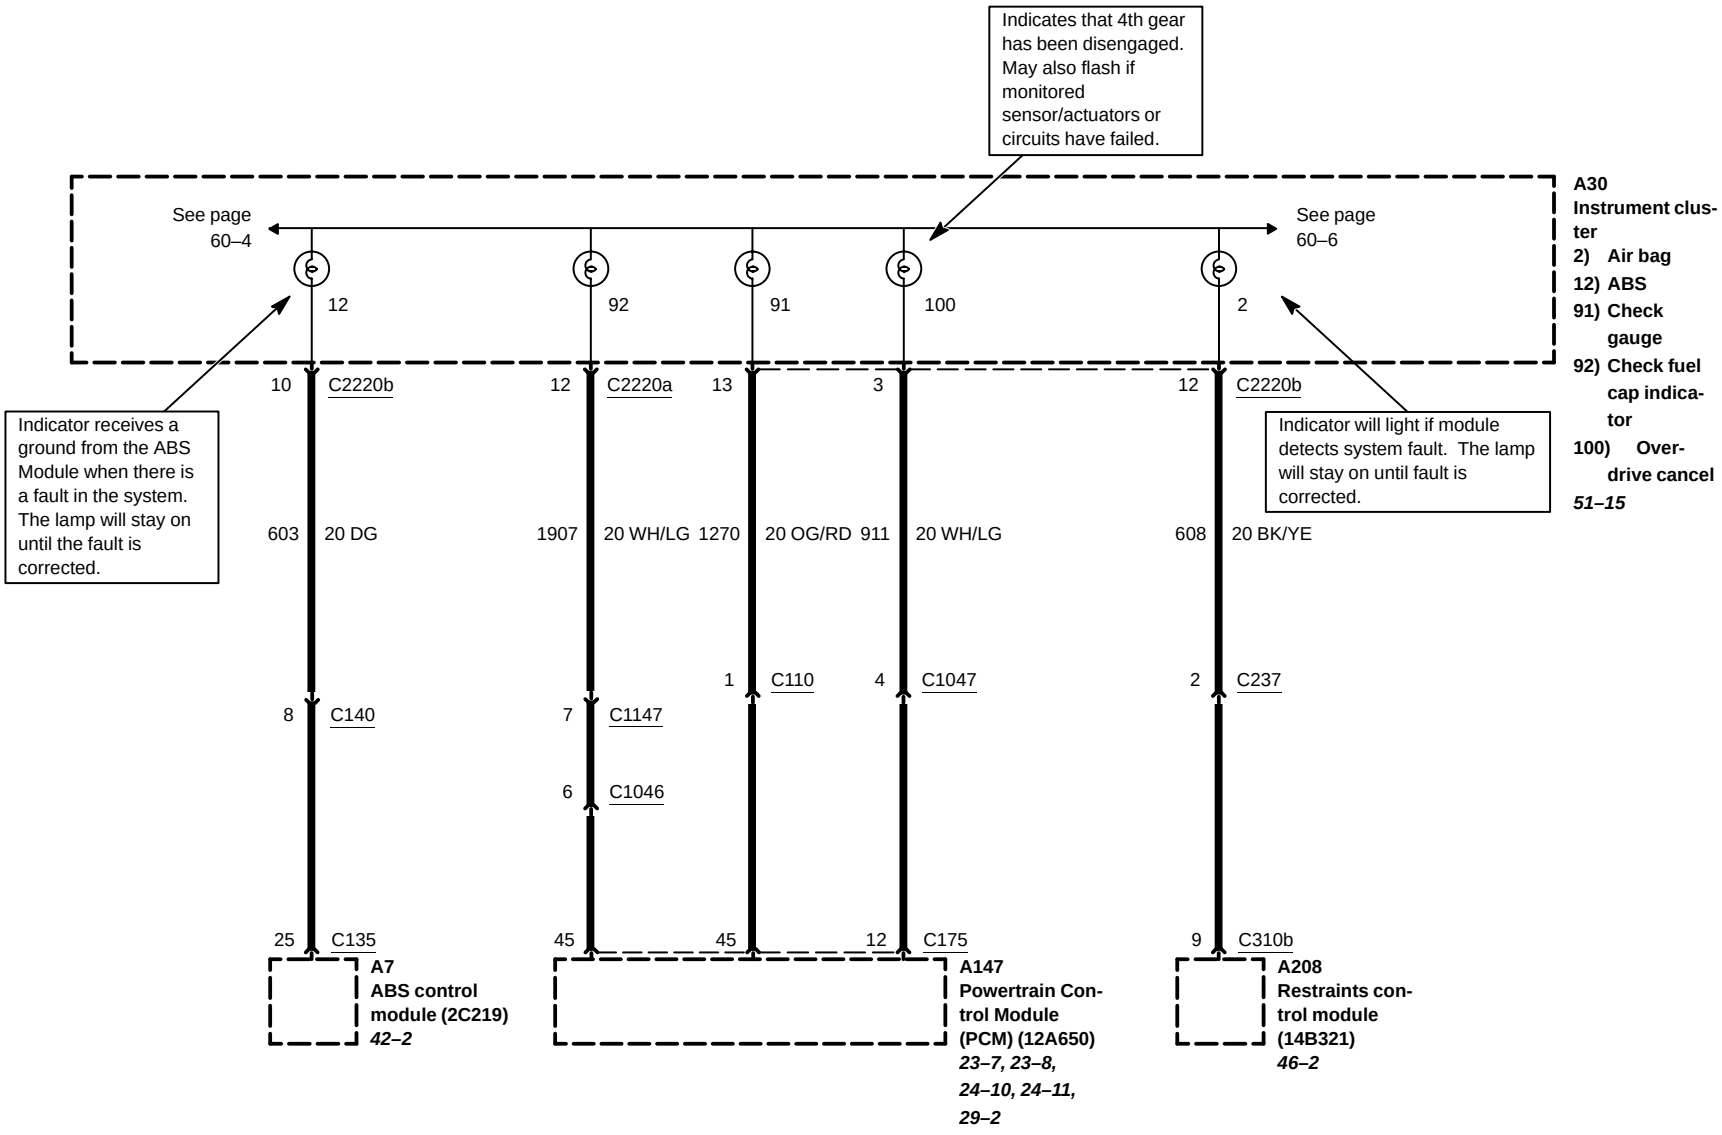
Indicates that 4th gear has been disengaged. May also flash if monitored sensor/actuators or circuits have failed.
See page 60–4
See page 60–6
12
92
91
100
2
A30
Instrument cluster
2) Air bag
12) ABS
91) Check gauge
92) Check fuel cap indicator
100) Overdrive cancel
51–15
Indicator receives a ground from the ABS Module when there is a fault in the system. The lamp will stay on until the fault is corrected.
Indicator will light if module detects system fault. The lamp will stay on until fault is corrected.
10 C2220b
12 C2220a
13
3
12 C2220b
603 20 DG
1907 20 WH/LG
1270 20 OG/RD
911 20 WH/LG
608 20 BK/YE
1 C110
4 C1047
2 C237
8 C140
7 C1147
6 C1046
25 C135
45
45
12 C175
9 C310b
A7
ABS control module (2C219)
42–2
A147
Powertrain Control Module (PCM) (12A650)
23–7, 23–8, 24–10, 24–11, 29–2
A208
Restraints control module (14B321)
46–2