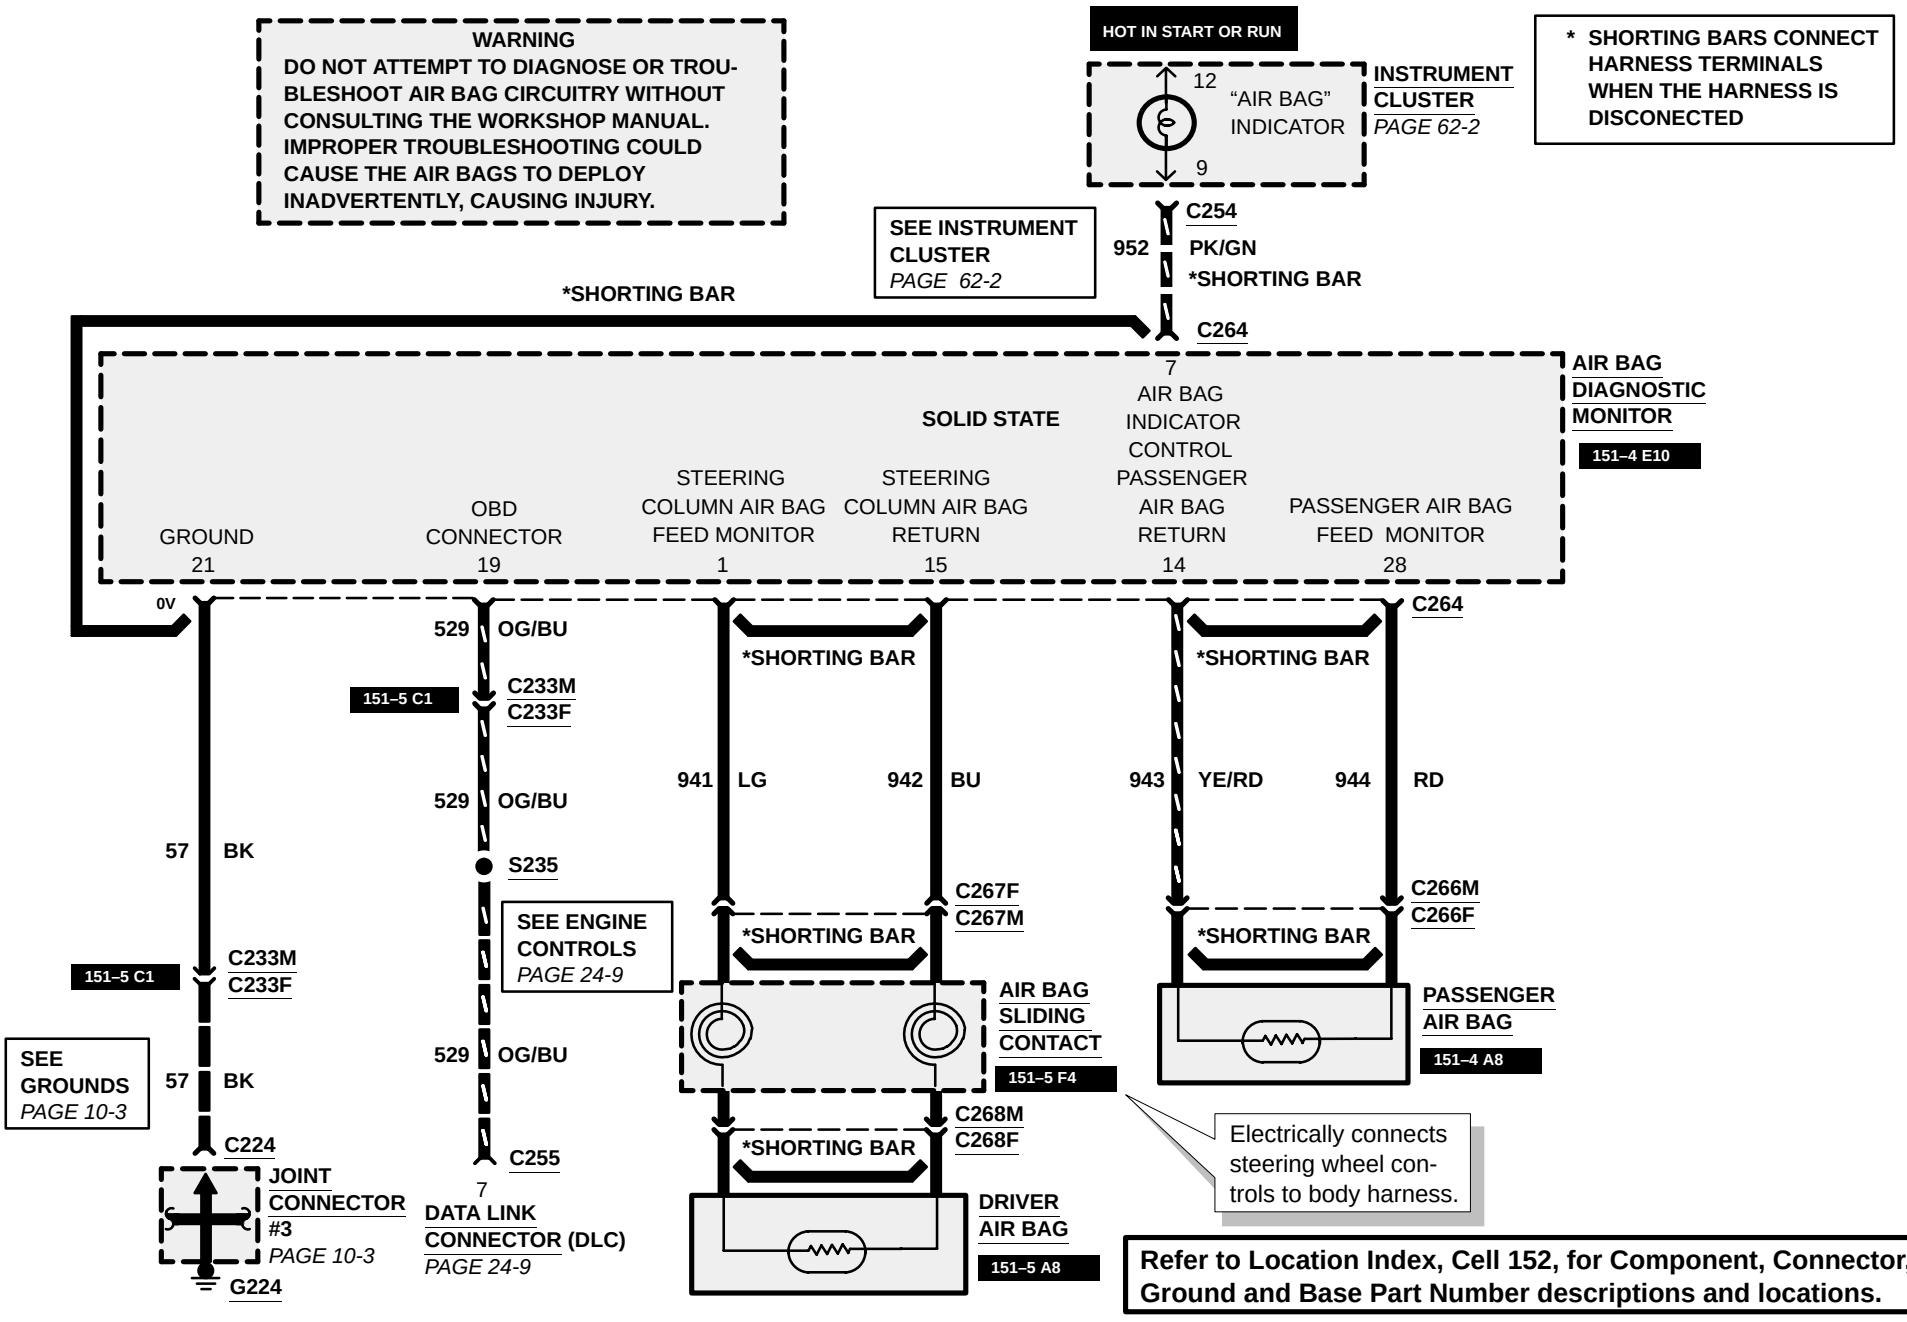
WARNING
DO NOT ATTEMPT TO DIAGNOSE OR TROUBLESHOOT AIR BAG CIRCUITRY WITHOUT CONSULTING THE WORKSHOP MANUAL. IMPROPER TROUBLESHOOTING COULD CAUSE THE AIR BAGS TO DEPLOY INADVERTENTLY, CAUSING INJURY.
HOT IN START OR RUN
12
"AIR BAG" INDICATOR
9
INSTRUMENT CLUSTER
PAGE 62-2
* SHORTING BARS CONNECT HARNESS TERMINALS WHEN THE HARNESS IS DISCONECTED
SEE INSTRUMENT CLUSTER
PAGE 62-2
952
C254
PK/GN
*SHORTING BAR
C264
7
*SHORTING BAR
AIR BAG DIAGNOSTIC MONITOR
151–4 E10
SOLID STATE
AIR BAG INDICATOR CONTROL
PASSENGER AIR BAG RETURN
GROUND
21
OBD CONNECTOR
19
STEERING COLUMN AIR BAG FEED MONITOR
1
STEERING COLUMN AIR BAG RETURN
15
14
PASSENGER AIR BAG FEED MONITOR
28
0V
529 OG/BU
151–5 C1
C233M
C233F
529 OG/BU
941 LG
942 BU
943 YE/RD
944 RD
C264
*SHORTING BAR
*SHORTING BAR
57 BK
S235
C267F
C267M
C266M
C266F
SEE ENGINE CONTROLS
PAGE 24-9
*SHORTING BAR
*SHORTING BAR
151–5 C1
C233M
C233F
AIR BAG SLIDING CONTACT
151–5 F4
PASSENGER AIR BAG
151–4 A8
SEE GROUNDS
PAGE 10-3
57 BK
529 OG/BU
C268M
C268F
C224
C255
*SHORTING BAR
JOINT CONNECTOR #3
PAGE 10-3
7
DATA LINK CONNECTOR (DLC)
PAGE 24-9
DRIVER AIR BAG
151–5 A8
G224
Electrically connects steering wheel controls to body harness.
Refer to Location Index, Cell 152, for Component, Connector, Splice Ground and Base Part Number descriptions and locations.