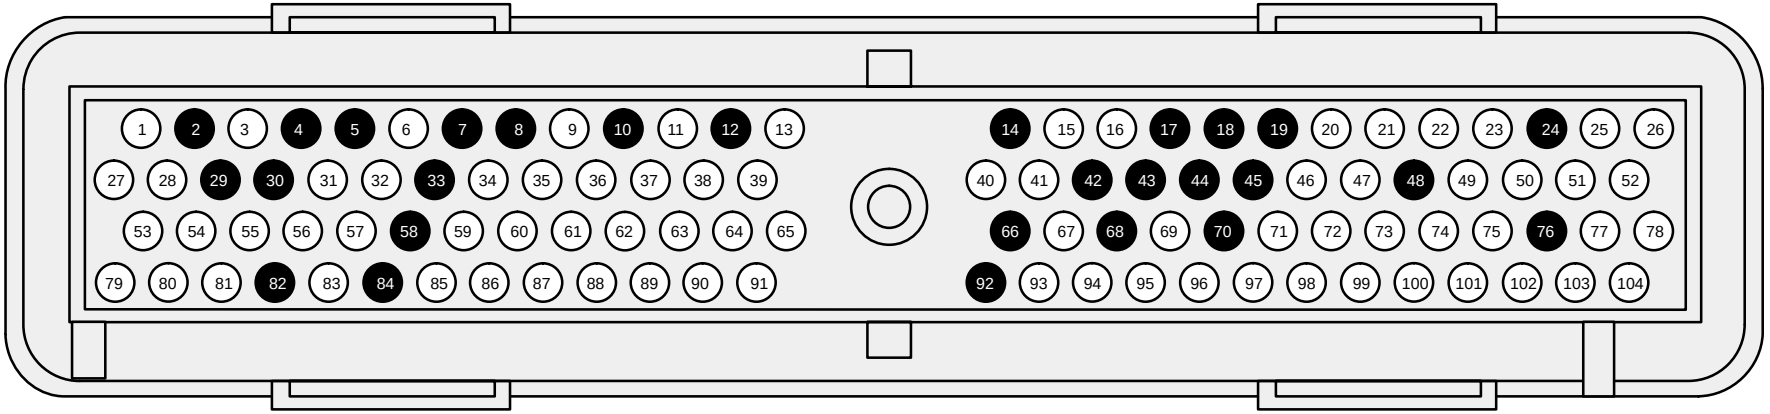

C1032 (GRAY)

POWERTRAIN CONTROL MODULE (PCM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1021 (LG/YE)	PCM to Ignition Coil on Plug #6	36	968 (TN/LB)	Mass Air Flow (MAF) Signal Return
2	–	NOT USED	37	923 (OG/BK)	Transmission Fluid Temperature (TFT) Sensor
3	570 (BK/WH)	Ground	38	354 (LG/RD)	Engine Coolant Temperature (ECT) Sensor
4	–	NOT USED	39	743 (GY)	Intake Air Temperature (IAT) Sensor
5	–	NOT USED	40	238 (DG/YE)	Fuel Pump Monitor
6	237 (OG/YE)	PCM to Transmission Shift Solenoid A	41	348 (VT)	A/C Clutch Signal
7	–	NOT USED	42	–	NOT USED
8	–	NOT USED	43	–	NOT USED
9	29 (YE/WH)	Fuel Gauge Sender Reference Voltage	44	–	NOT USED
10	–	NOT USED	45	–	NOT USED
11	315 (VT/OG)	PCM to Transmission Shift Solenoid B	46	639 (LG/VT)	High Speed Fan Control
12	–	NOT USED	47	360 (BN/PK)	EGR Vacuum Regulator (EVR) Solenoid
13	107 (VT)	Flash EPROM Power Supply	48	–	NOT USED
14	–	NOT USED	49	972 (BK/WH)	PCM to Transmission Range TR2
15	915 (PK/LB)	Bus– Data Link Connector (DLC)	50	944 (DG/OG)	PCM to Transmission Range TR4
16	914 (TN/OG)	Bus+ Data Link Connector (DLC)	51	570 (BK/WH)	Ground
17	–	NOT USED	52	1027 (PK/LB)	PCM to Ignition Coil on Plug #3
18	–	NOT USED	53	1026 (PK/WH)	PCM to Ignition Coil on Plug #4
19	–	NOT USED	54	125 (DB/WH)	Torque Converter Clutch (TCC) Solenoid
20	971 (PK/BK)	PCM to Transmission Shift Solenoid C	55	1047 (LG/RD)	Keep Alive Power (Hot at All Times)
21	138 (BK/PK)	Crankshaft Position (CKP) Sensor (+)	56	191 (LG/BK)	EVAP Canister Purge Valve Output
22	139 (GY/YE)	Crankshaft Position (CKP) Sensor (–)	57	310 (YE/RD)	Knock Sensor KS1 (–)
23	1274 (DG/WH)	Knock Sensor KS2 (–)	58	–	NOT USED
24	–	NOT USED	59	970 (DG/WH)	Turbine Shaft Speed (TSS) Sensor to PCM
25	57 (BK)	Case Ground	60	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11
26	1024 (LG/WH)	PCM to Ignition Coil on Plug #1	61	393 (VT/LG)	Heated Oxygen Sensor (HO2S) #22
27	1025 (OG/YE)	PCM to Ignition Coil on Plug #5	62	791 (RD/PK)	Fuel Tank Pressure (FTP) Sensor
28	228 (DB)	Low Speed Fan Control	63	141 (RD/PK)	Fuel Rail Pressure Sensor
29	–	NOT USED	64	199 (LB/YE)	Transmission Range Sensor Input TR3A
30	–	NOT USED	65	352 (BN/LG)	Differential Pressure Feedback EGR Input
31	330 (YE/LG)	Power Steering Pressure Switch	66	–	NOT USED
32	311 (DG/VT)	Knock Sensor KS1 (–)	67	91 (VT/WH)	Canister Vent Solenoid
33	–	NOT USED	68	–	NOT USED
34	1012 (OG/BK)	PCM to Transmission Range TR1	69	331 (PK/YE)	A/C WOT Cutout Relay Output
35	392 (RD/LG)	Heated Oxygen Sensor (HO2S) #12	70	–	NOT USED

REVISED

PIN	CIRCUIT	CIRCUIT FUNCTION
71	361 (RD)	Power (Hot in Start or Run)
72	561 (TN/RD)	Fuel Injector #7 Control
73	559 (TN/BK)	Fuel Injector #5 Control
74	557 (BN/YE)	Fuel Injector #3 Control
75	555 (TN)	Fuel Injector #1 Control
76	–	NOT USED
77	570 (BK/WH)	Communication Network Ground
78	1030 (DG/VT)	PCM to Ignition Coil on Plug #7
79	1029 (WH/RD)	PCM to Ignition Coil on Plug #8
80	926 (LB/OG)	Enable Fuel Pump Output
81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid
82	–	NOT USED
83	264 (WH/LB)	Idle Air Control (IAC) Valve Output
84	–	NOT USED
85	282 (DB/OG)	Camshaft Position (CMP) Sensor
86	440 (TN/LG)	A/C Head Pressure Sensor to PCM
87	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #21
88	967 (LB/RD)	Mass Air Flow (MAF) Input
89	355 (GY/WH)	Throttle Position Sensor (TP)
90	351 (BN/WH)	Reference Voltage Output
91	359 (GY/RD)	Signal Return
92	–	NOT USED
93	387 (RD/WH)	HO2S #11 Heater Output
94	388 (YE/LB)	HO2S #21 Heater Output
95	389 (WH/BK)	HO2S #12 Heater Output
96	390 (TN/YE)	HO2S #22 Heater Output
97	361 (RD)	Power (Hot in Start or Run)
98	562 (LB)	Fuel Injector #8 Control
99	560 (LG/OG)	Fuel Injector #6 Control
100	558 (BN/LB)	Fuel Injector #4 Control
101	556 (WH)	Fuel Injector #2 Control
102	1273 (YE)	Knock Sensor
103	570 (BK/WH)	Communication Network Ground
104	1028 (WH/PK)	PCM to Ignition Coil on Plug #2